


CAPACITIVE TOUCH THERMOSTAT USER'S GUIDE

Fan Mode Setting

Press the **MODE** button until the fan mode is active. Press the **Up** (Δ) or **Down** (∇) button to cycle through the fan speed options Low, High, and Auto.

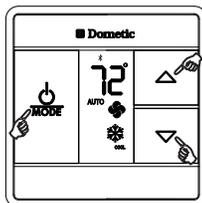


Mode of Operation

A mode is an operation that can be performed by the CT Thermostat.


Press the **MODE** button to cycle through the available modes. All CT Thermostats have Cool and Furnace modes. Select models will have an additional mode, either Heat Pump or Heat Strip. The active mode will display on the LCD.

To change the set-point, press the **Up** (Δ) button to increase the set point and the **Down** (∇) button to decrease the set-point.

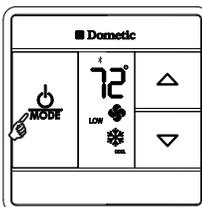

Inside Temperature


To display the Inside Temperature, the CT Thermostat must be in the OFF Mode. Press either the **Up** (Δ) or **Down** (∇) button to display the Inside Temperature.

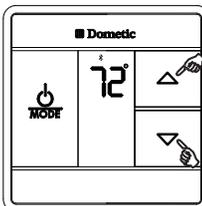

Bluetooth® Connection

Each CT thermostat can pair with up to four Bluetooth® devices utilizing the Dometic Climate Control app. For more information, see the Bluetooth® Capacitive Touch Thermostat Operating Instructions.

To connect to a Bluetooth® device from the Dometic Climate Control app, choose **Add New Connection**. Press the **MODE** button on the CT thermostat until you reach Off. Select your CT thermostat from the list that appears on the app and choose **Pair With Selected Thermostat**. Enter the 2-digit code that appears on the CT thermostat LCD twice in the Device Authentication window of the app and choose **Enter**. You are now connected.

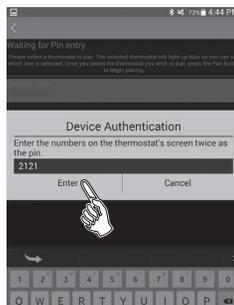

Special Features

See Operating Instructions for more information on the special features this Bluetooth® CT Thermostat offers.

LCD Error Code

When the system determines that one of the faults listed below has occurred an error code will be displayed in the LCD.

Error Codes:

- E1** Loss of communication between CT Thermostat and module board. LCD will cycle between E1 and previous mode setting. System will shut down.
- E2** Open circuit or out of range Indoor Temperature Sensor. Heating and cooling operation will be locked out. Fan operation can continue to operate.
- E3** Shorted Indoor Temperature Sensor. Heating and cooling operation will be locked out. Fan operation can continue to operate.
- E4** Open circuit or out of range Outdoor Temperature Sensor (select models). Heat pump operation will be locked out. Air Conditioner, Fan, and Furnace mode of operation can continue to operate.
- E5** Open circuit or out of range Freeze Sensor. Air conditioner mode of operation will be locked out, but displays the last temperature set-point.

In the unlikely event you experience a system failure, refer to the "SERVICE" section of the Operating Instructions furnished with your unit.




USER'S GUIDE

BLUETOOTH® CAPACITIVE TOUCH THERMOSTAT

Bluetooth® Capacitive Touch Thermostat Quick Start-Up

The basic steps for operating your Air Conditioner/Heat Pump/Heat Strip (hereinafter referred to as "unit") with the Bluetooth® Capacitive Touch Thermostat (hereinafter referred to as "CT Thermostat") are described in this User's Guide. For more detailed information on modes of operation and special features, refer to the Operating Instructions Manual.

Control Button Quick Reference

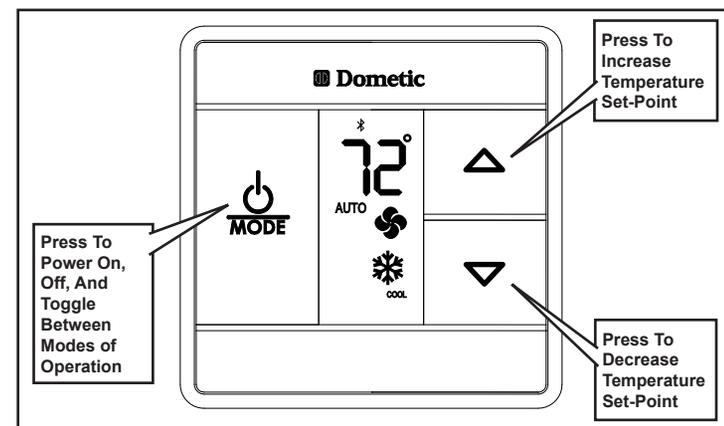

Read these instructions carefully. These instructions **MUST** stay with this product.

Form No.3316466.000 3/16
(French 3316467.000)
©2016 Dometic Corporation
LaGrange, IN 46761

USA
SERVICE OFFICE
Dometic Corporation
2320 Industrial Parkway
Elkhart, IN 46516

CANADA
Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA

Service Center & Dealer Locations
Please Visit:
www.eDometic.com

This manual has been provided courtesy of
My RV Works, Inc.

www.myrvworks.com



You can find more RV service manuals here:

www.myrvworks.com/manuals

Over the years of running a mobile RV repair service, having a dedicated place to access service manuals for all the different appliances and components found on RVs was something that I always had a desire to create.

I hope this resource makes your RV repairs easier, as it has mine, but please be careful and follow proper safety practices when attempting to repair your own RV.

If in doubt, please consult with a professional RV technician!



DARREN KOEPP - OWNER, MY RV WORKS, INC.

All service manuals provided on www.myrvworks.com are believed to be released for distribution and/or in the public domain.