

# 2004 Imperial Scepter Camelot

*Monaco Coach Corporation  
91320 Coburg Industrial Way  
Coburg, OR 97408  
800-634-0855*


*[www.holidayrambler.com](http://www.holidayrambler.com)  
[www.monaco-online.com](http://www.monaco-online.com)*

*Warranty/Technical Support  
877-466-6226*

We strongly recommend that all electrical service work be performed by a professional electrician or a trained recreational vehicle service technician because of the risk of personal injury and fire risk associated with electrical wiring work.

# Wiring Diagrams

N:\30-49\38\04\38041045.dwg, 10/1/2003 2:14:16 PM

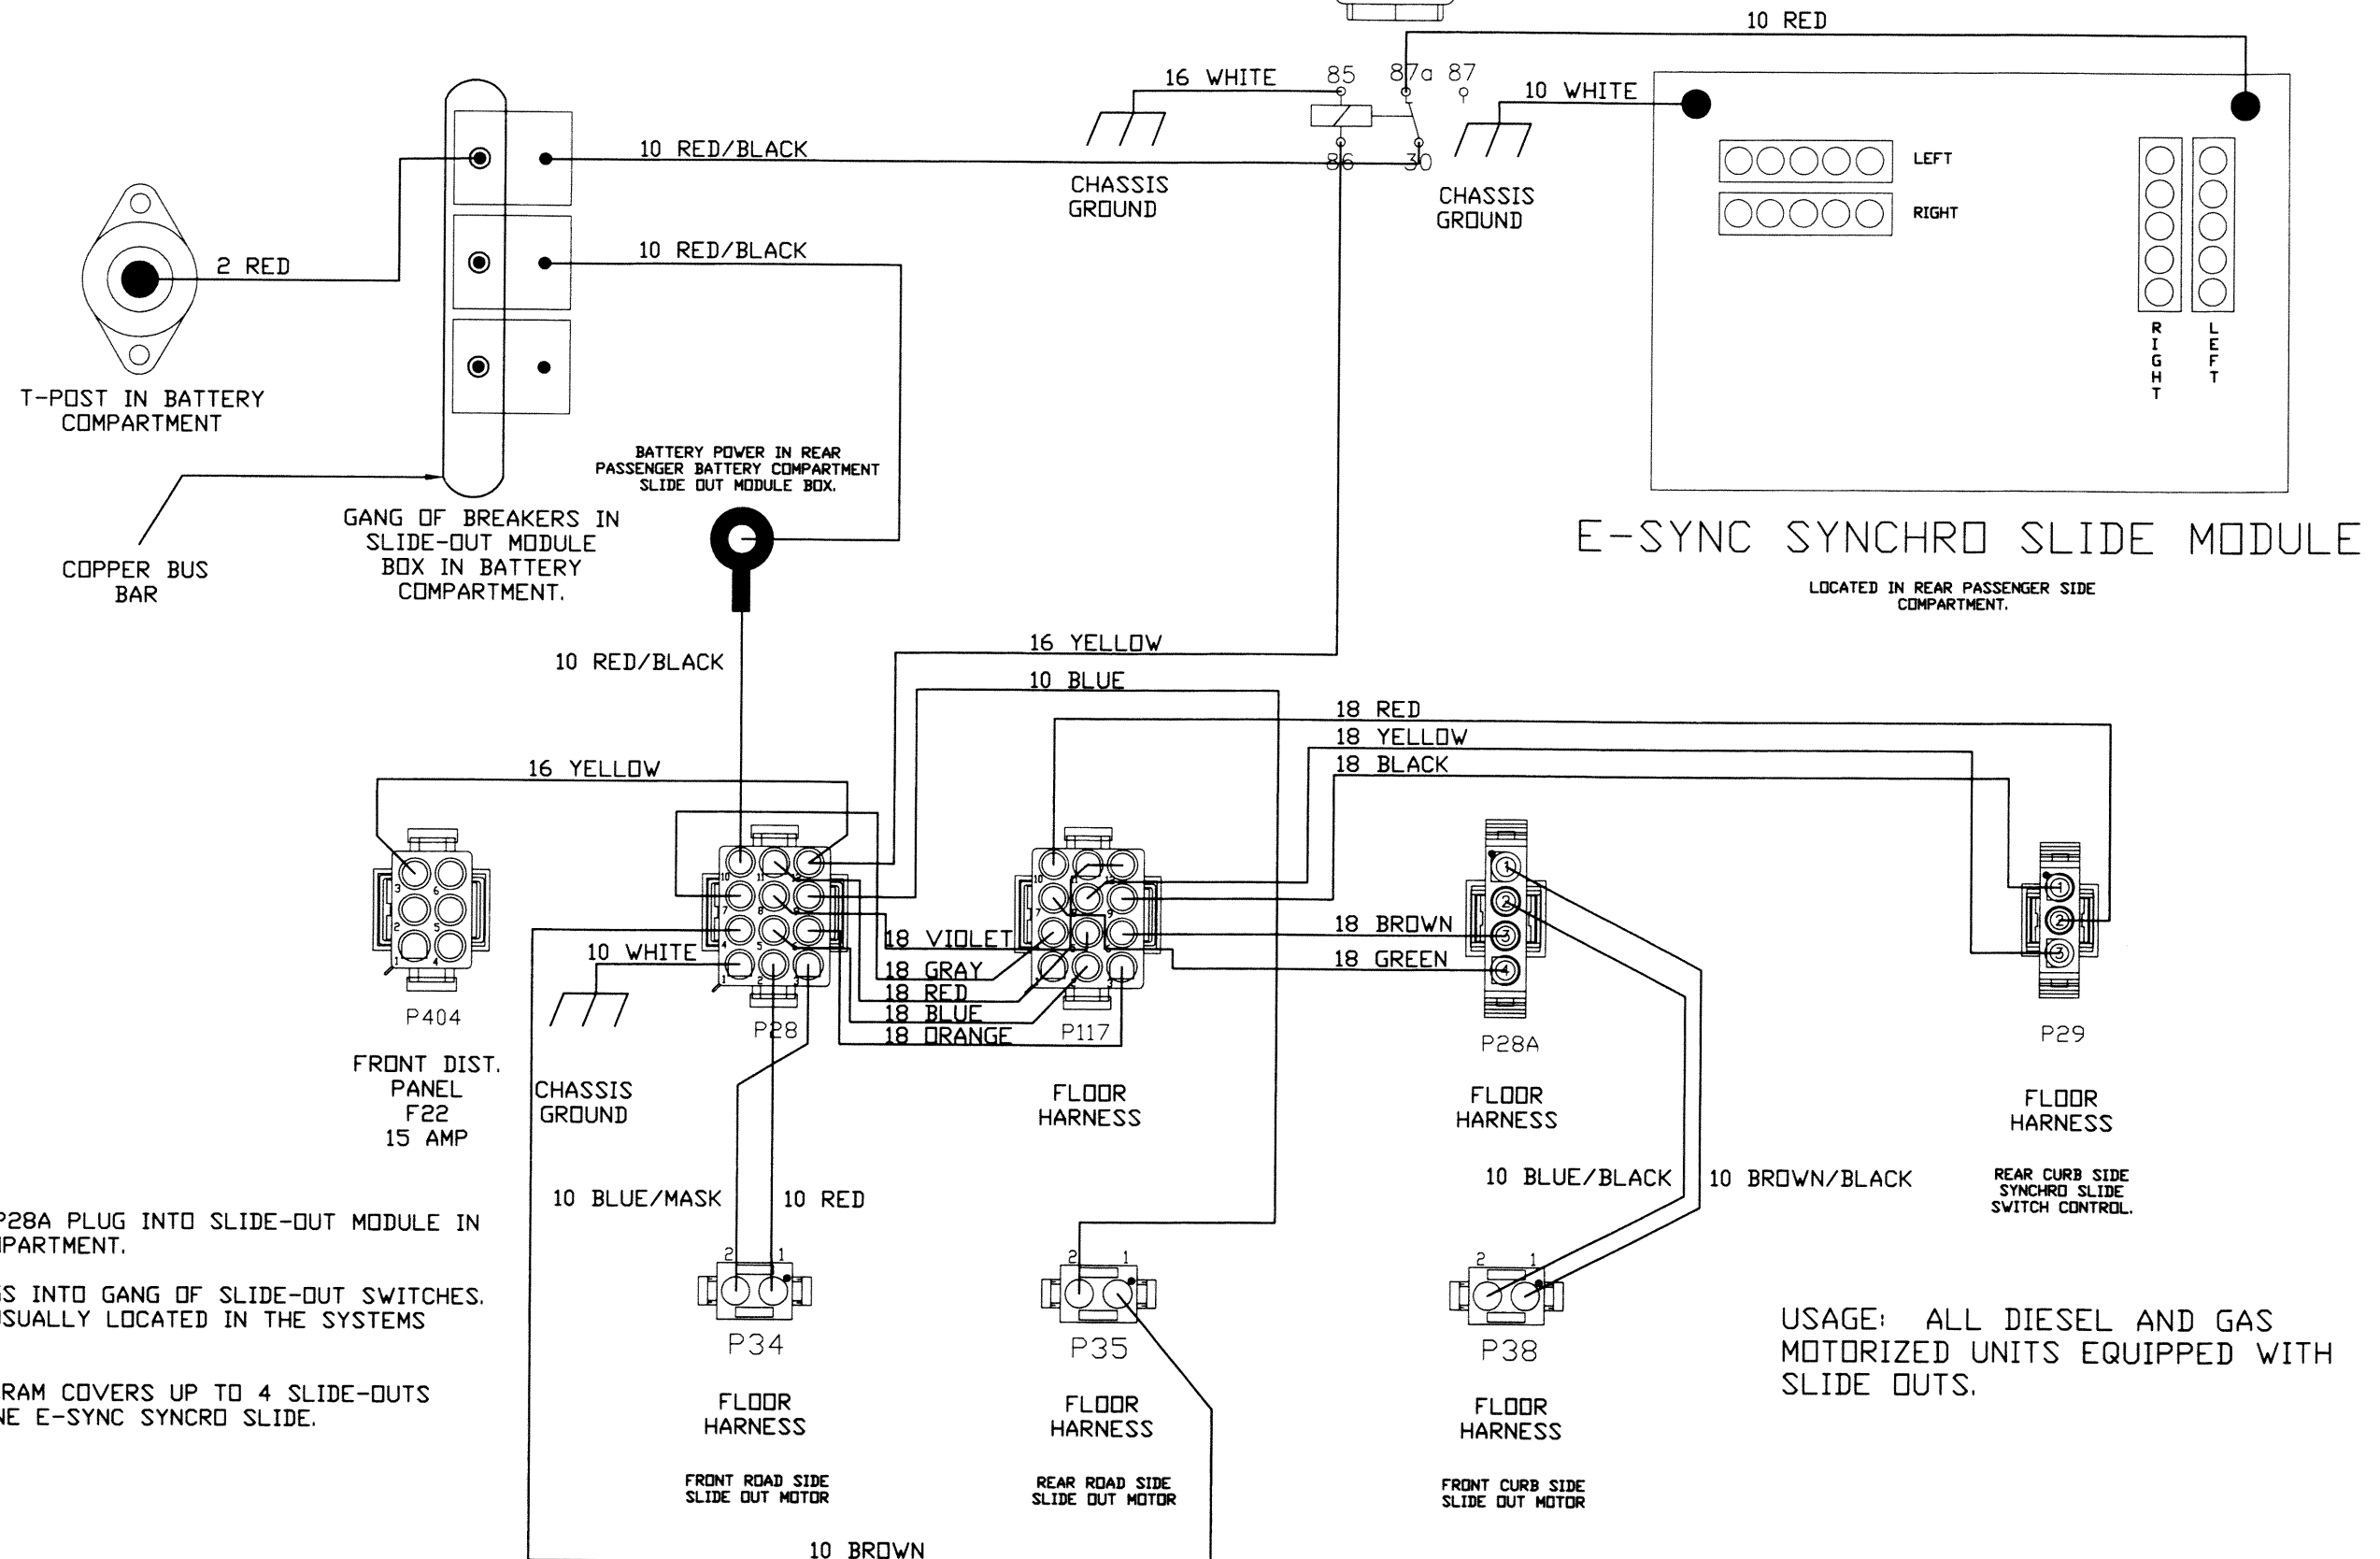


- NOTES:
- 1) P28 AND P28A PLUG INTO SLIDE-OUT MODULE IN BATTERY COMPARTMENT.
  - 2) P117 PLUGS INTO GANG OF SLIDE-OUT SWITCHES. THESE ARE USUALLY LOCATED IN THE SYSTEMS PANEL.
  - 3) THIS DIAGRAM COVERS UP TO 4 SLIDE-OUTS INCLUDING ONE E-SYNC SYNCHRO SLIDE.

USAGE: ALL DIESEL AND GAS  
MOTORIZED UNITS EQUIPPED WITH  
SLIDE OUTS.

REV.	UNIT	DESCRIPTION OF CHANGE	BY	DATE
A	04	RELEASE TO PRODUCTION	KEC	1/09/03

N:\30-49\38\04\38040245.dwg, 10/1/2003 2:15:23 PM

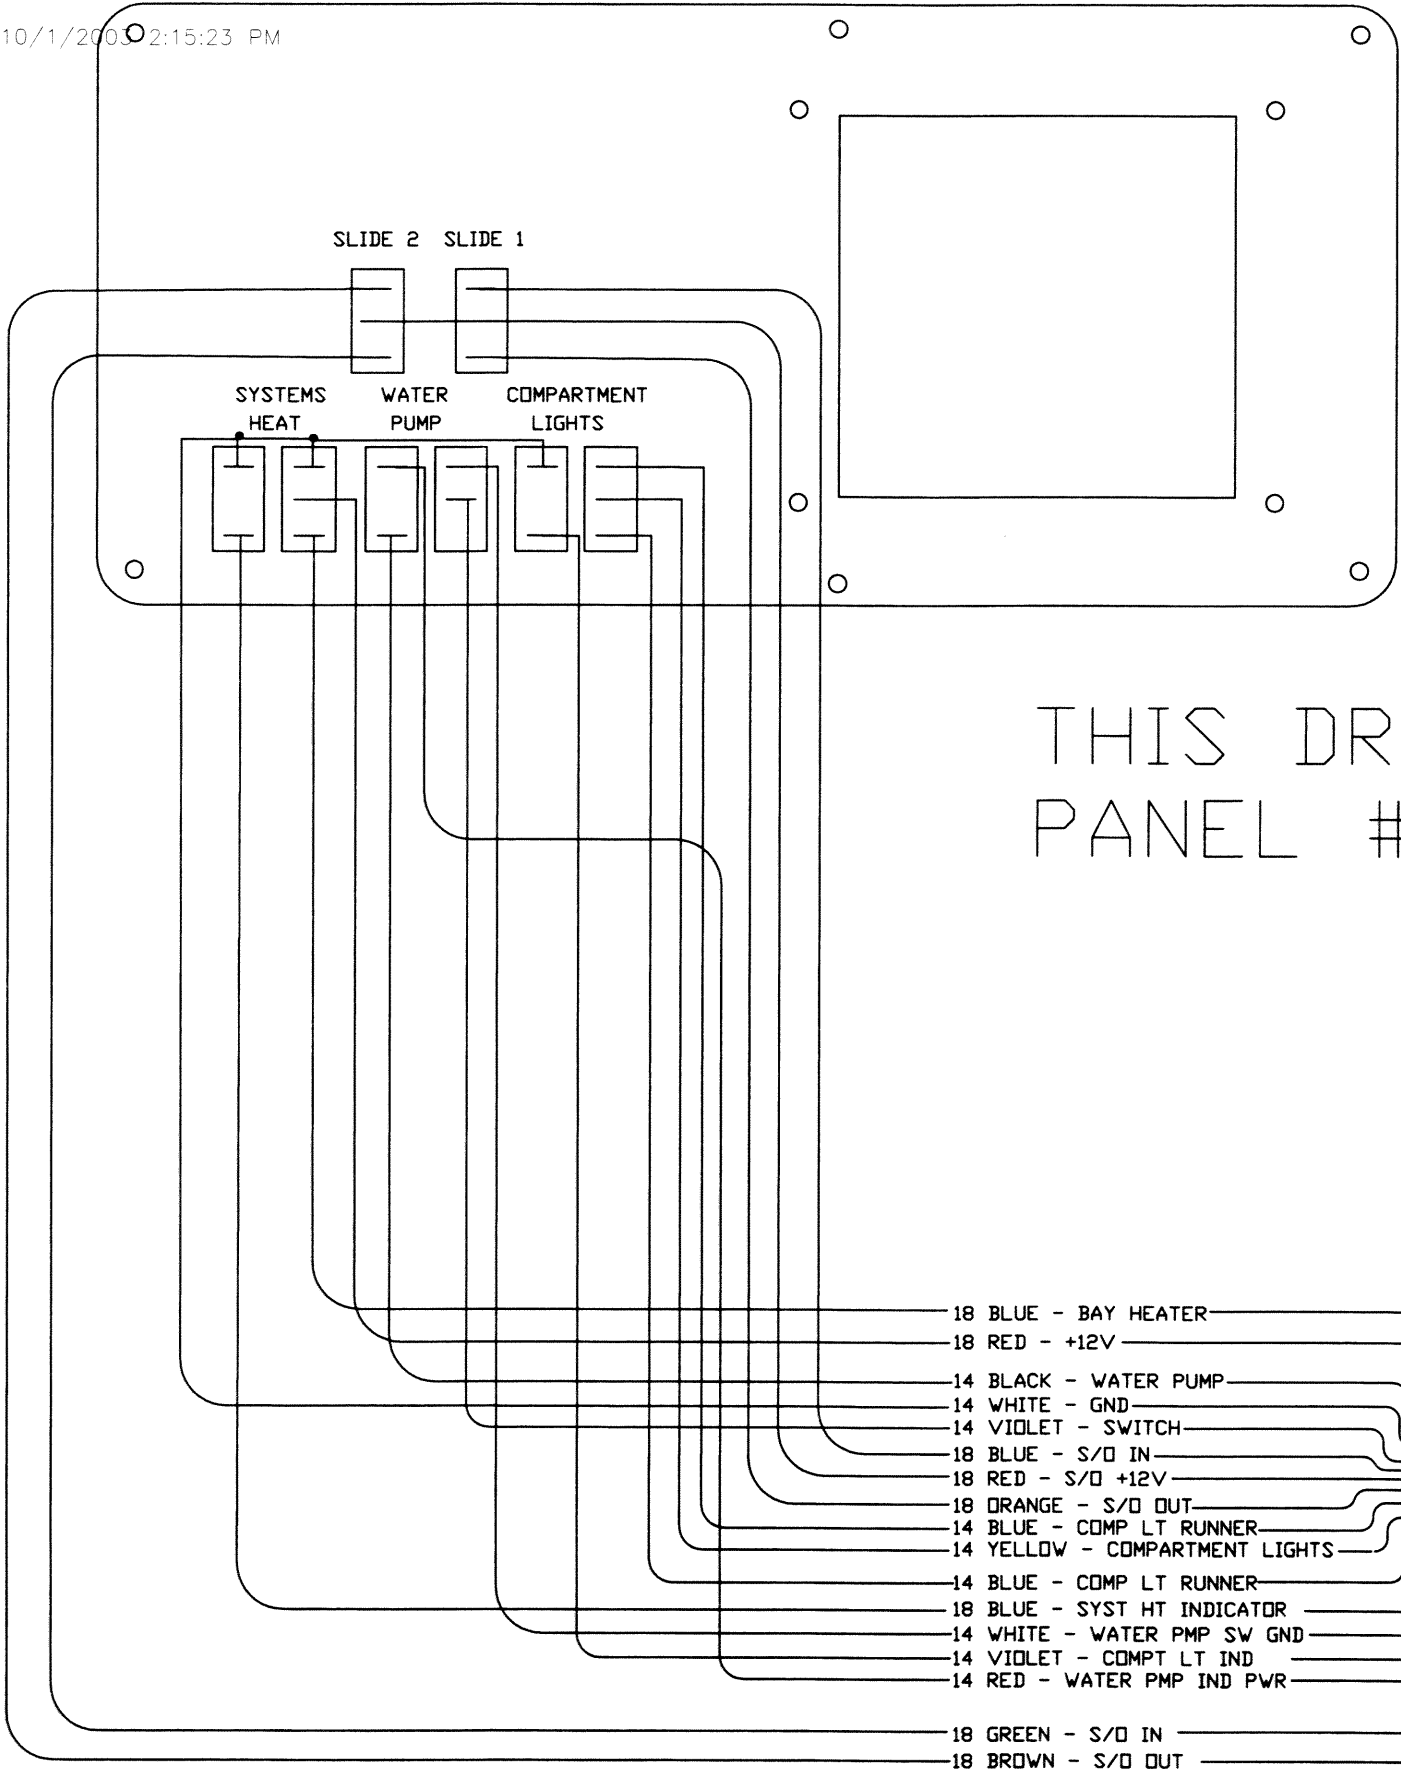

THIS DRAWING GOES WITH  
PANEL #16619340

- 1. 14 WHITE - GND
  - 2. 14 BLACK - PUMP INDICATOR
  - 3. 14 VIOLET - PUMP SWITCH
  - 4. 18 BLUE (1) - SYST HEAT INDICATOR
  - 5. 18 RED (1) - SYST HEAT +12V
  - 6. 18 BLUE (2) - S/D IN
  - 7. 18 RED (2) - S/D SWITCH +12V
  - 8. 18 ORANGE - S/D SWITCH OUT
  - 9. 14 BLUE - COMPT LT RUNNER
  - 10. 14 YELLOW - COMPT LT +12V
  - 11. 14 BLUE - COMPT LT RUNNER
  - 12. 18 BLUE - SYSTEMS HEAT SW INDICATOR
  - 13. 14 WHITE - WATER PUMP SW GND
  - 14. 14 RED - WATER PUMP IND POWER
  - 15. 14 VIOLET - COMPT LIGHT IND
- AMP MATE-N-LOK  
CONN # 1-480711-0  
TERM# 350536-1


- 1. 18 BLUE - S/D IN
  - 2. 18 ORANGE - S/D OUT
- AMP MATE-N-LOK  
CONN # 1-480699-0  
TERM3 350536-1

N:\30-49\38\04\38041033.dwg, 10/1/2003 2:16:07 PM

REV.	UNIT	DESCRIPTION OF CHANGE	BY	DATE
A		RELEASED FOR PRODUCTION.	WKS	06/16/03

TO 110 PANEL  
6GA THHN

6/3 W/G  
TO SHORE POWER

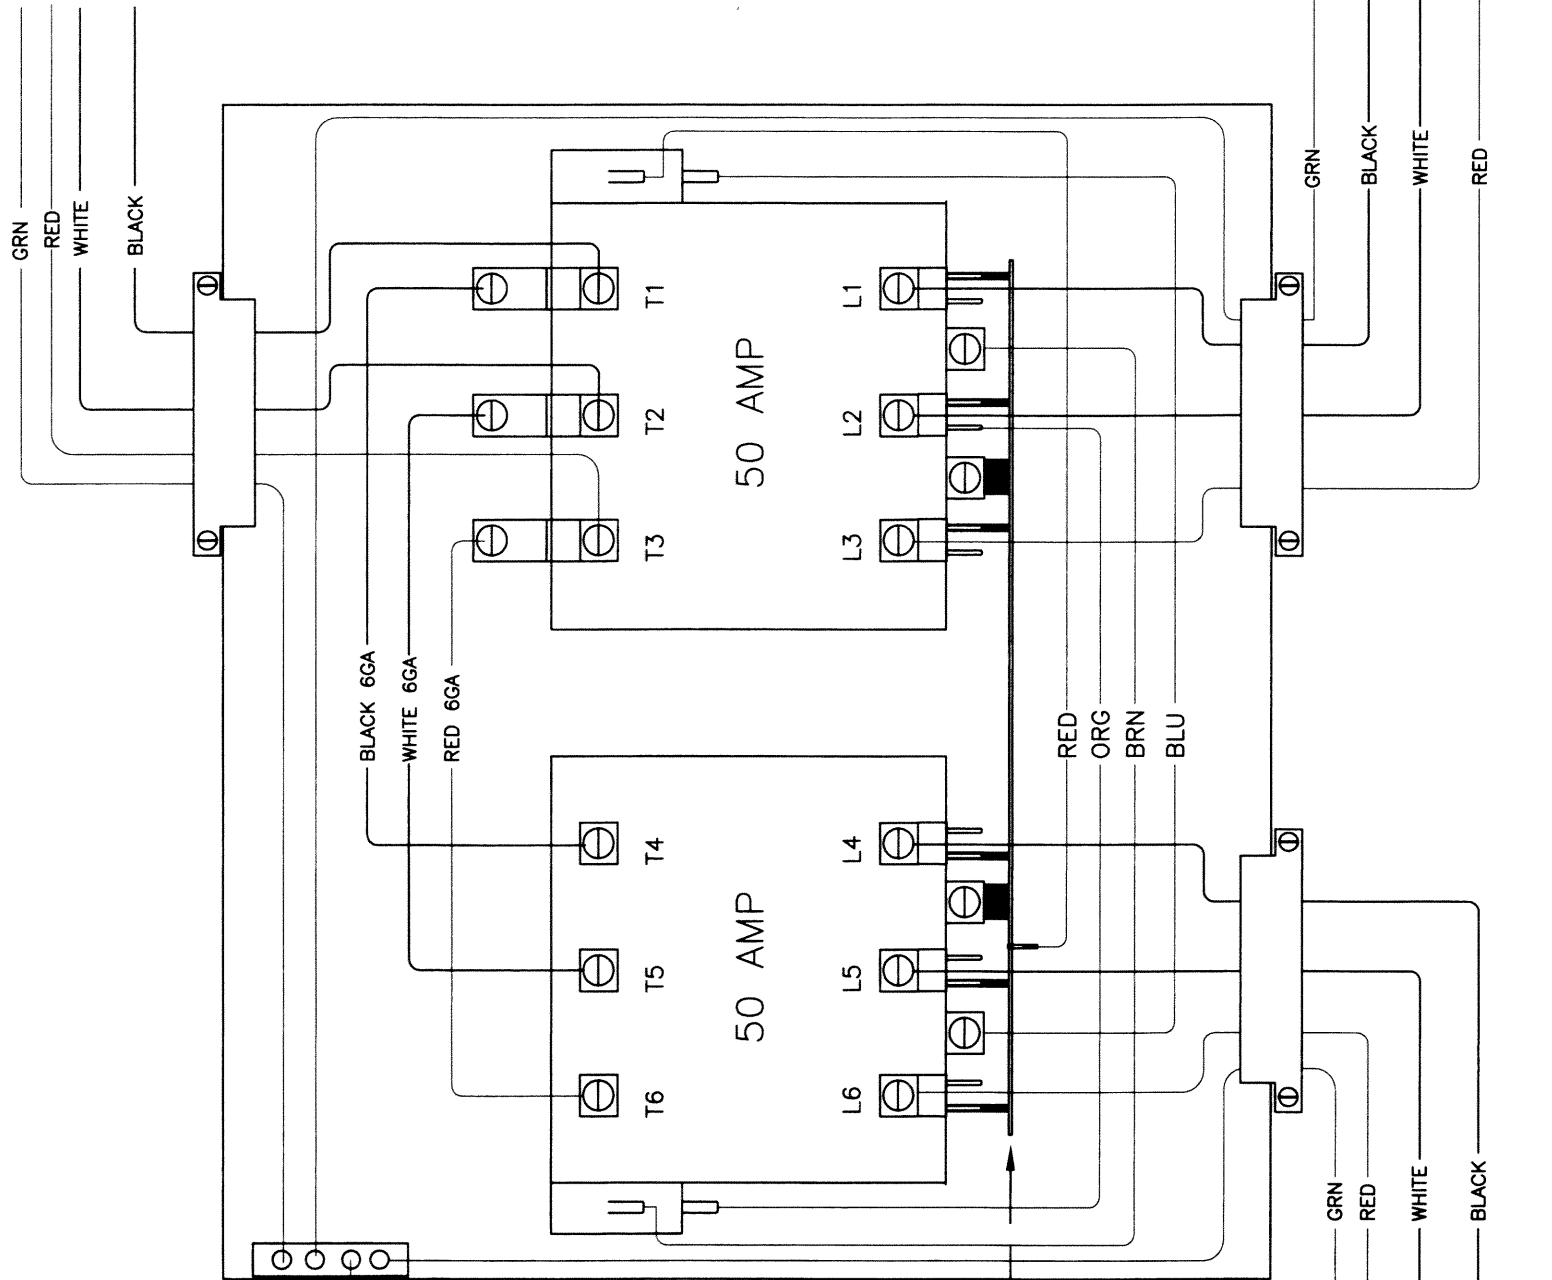

TO GENERATOR  
8GA THHN

STD ON '04 WIN/IMP, CAM/SCE,  
DIP/END/SAN, CHE/SAH/ZAN, KNI/AMB,  
CAY/NEP, TREK/TRAV

OPT. ON '04 VAC/LAP, ADM/MON

6GA BARE COPPER  
CHASSIS

PC BOARD

THE MONACO COACH CORP. AND ALL OF ITS SUBSIDIARIES CLAIMS PROPRIETARY RIGHTS IN THE MATERIAL HEREON. NEITHER THIS DRAWING NOR ANY REPRODUCTION THEREOF MAY BE USED TO MANUFACTURE ANYTHING WITHOUT PERMISSION IN WRITING FROM MONACO COACH CORP. OR ANY OF ITS SUBSIDIARIES TO THE USER SPECIFICALLY REFERRING TO THIS DRAWING.

DRAWN BY:  
WKS  
DATE:  
6/16/03

CHECKED BY:

UNLESS SPECIFIED  
DIMENSIONS ARE IN INCHES  
.XX .06 .XXX .030  
ANGLES (PLUS OR MINUS) 0 ~30'


MONACO COACH CORP  
HOLIDAY RAMBLER  
DO NOT SCALE DRAWING

TITLE:  
DIAGRAM, 120V 50A TRANSFER SW/  
SERIES:  
SEE USAGE

SHEET 1 OF 1  
DWG.# 38041033  
REV: A




REV	UNIT	DESCRIPTION OF CHANGE	BY	DATE
B		CORRECT P159 GRN RT & VIO LFT WIRES TO GRN LFT & VIO RT.	WKS	09/18/03

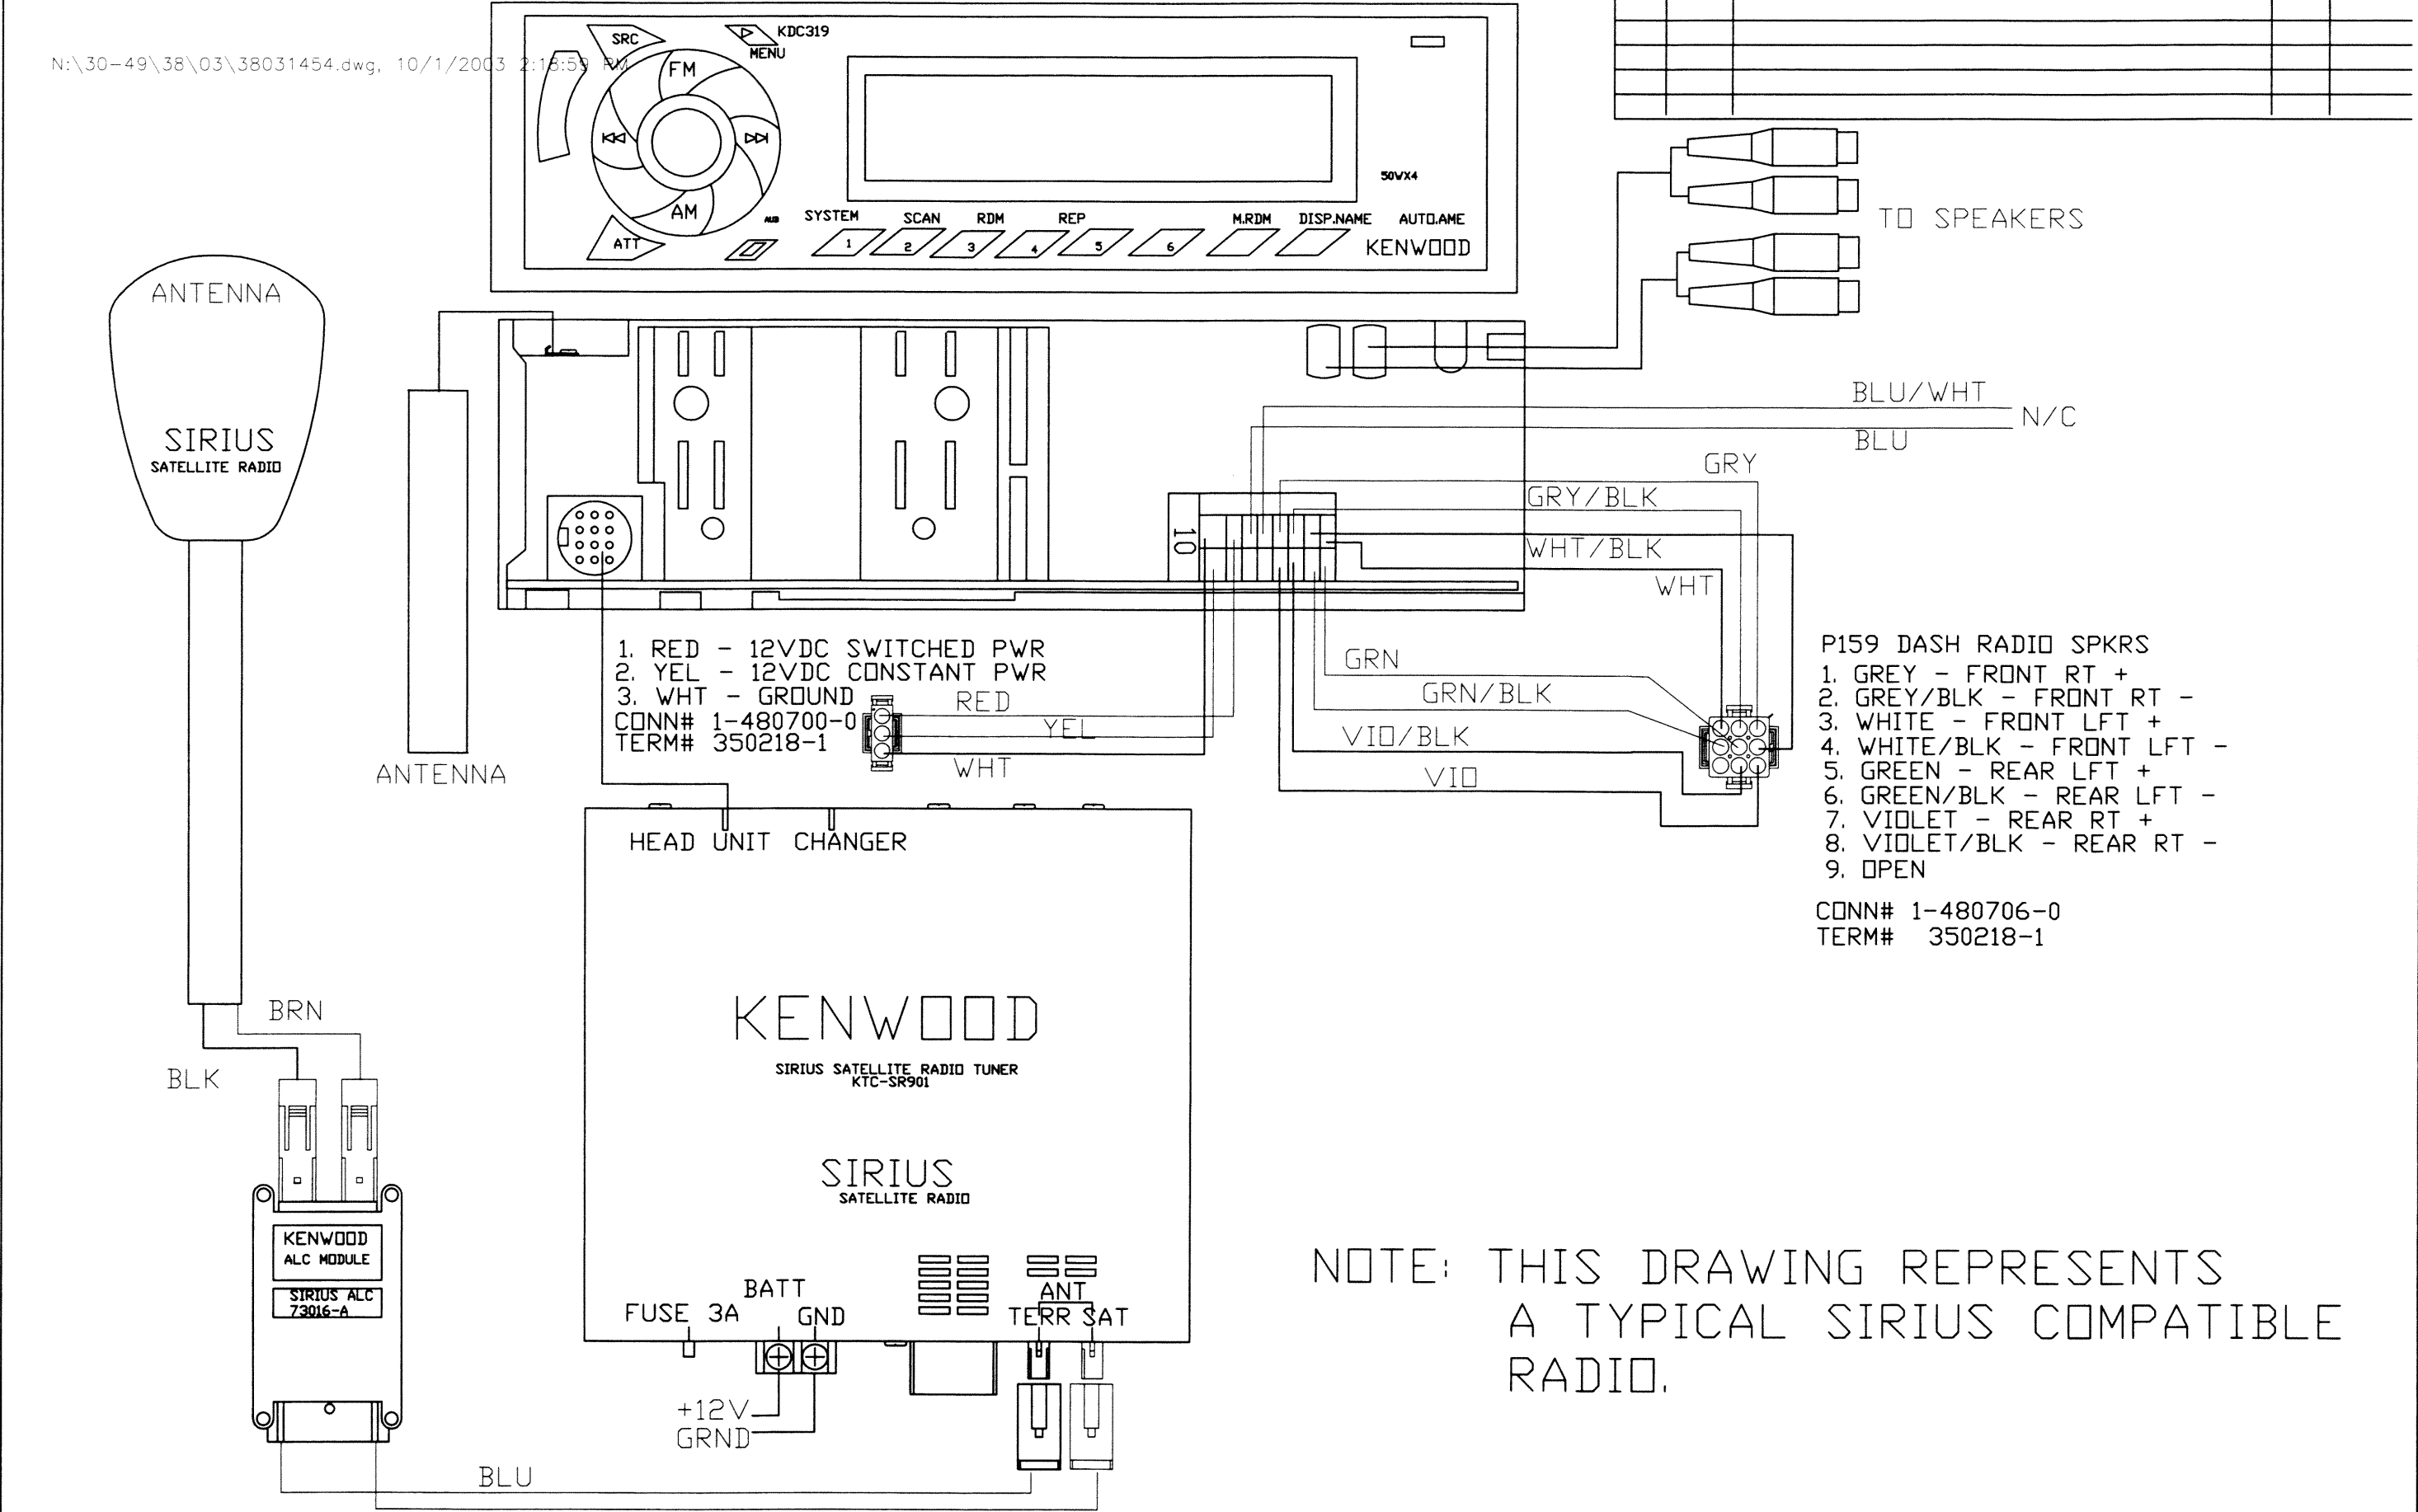





REV.	UNIT	DESCRIPTION OF CHANGE	BY	DATE
B		ADDED WIRING FOR SWITCHES AND OMRON RELAY	KEC	11-19-02

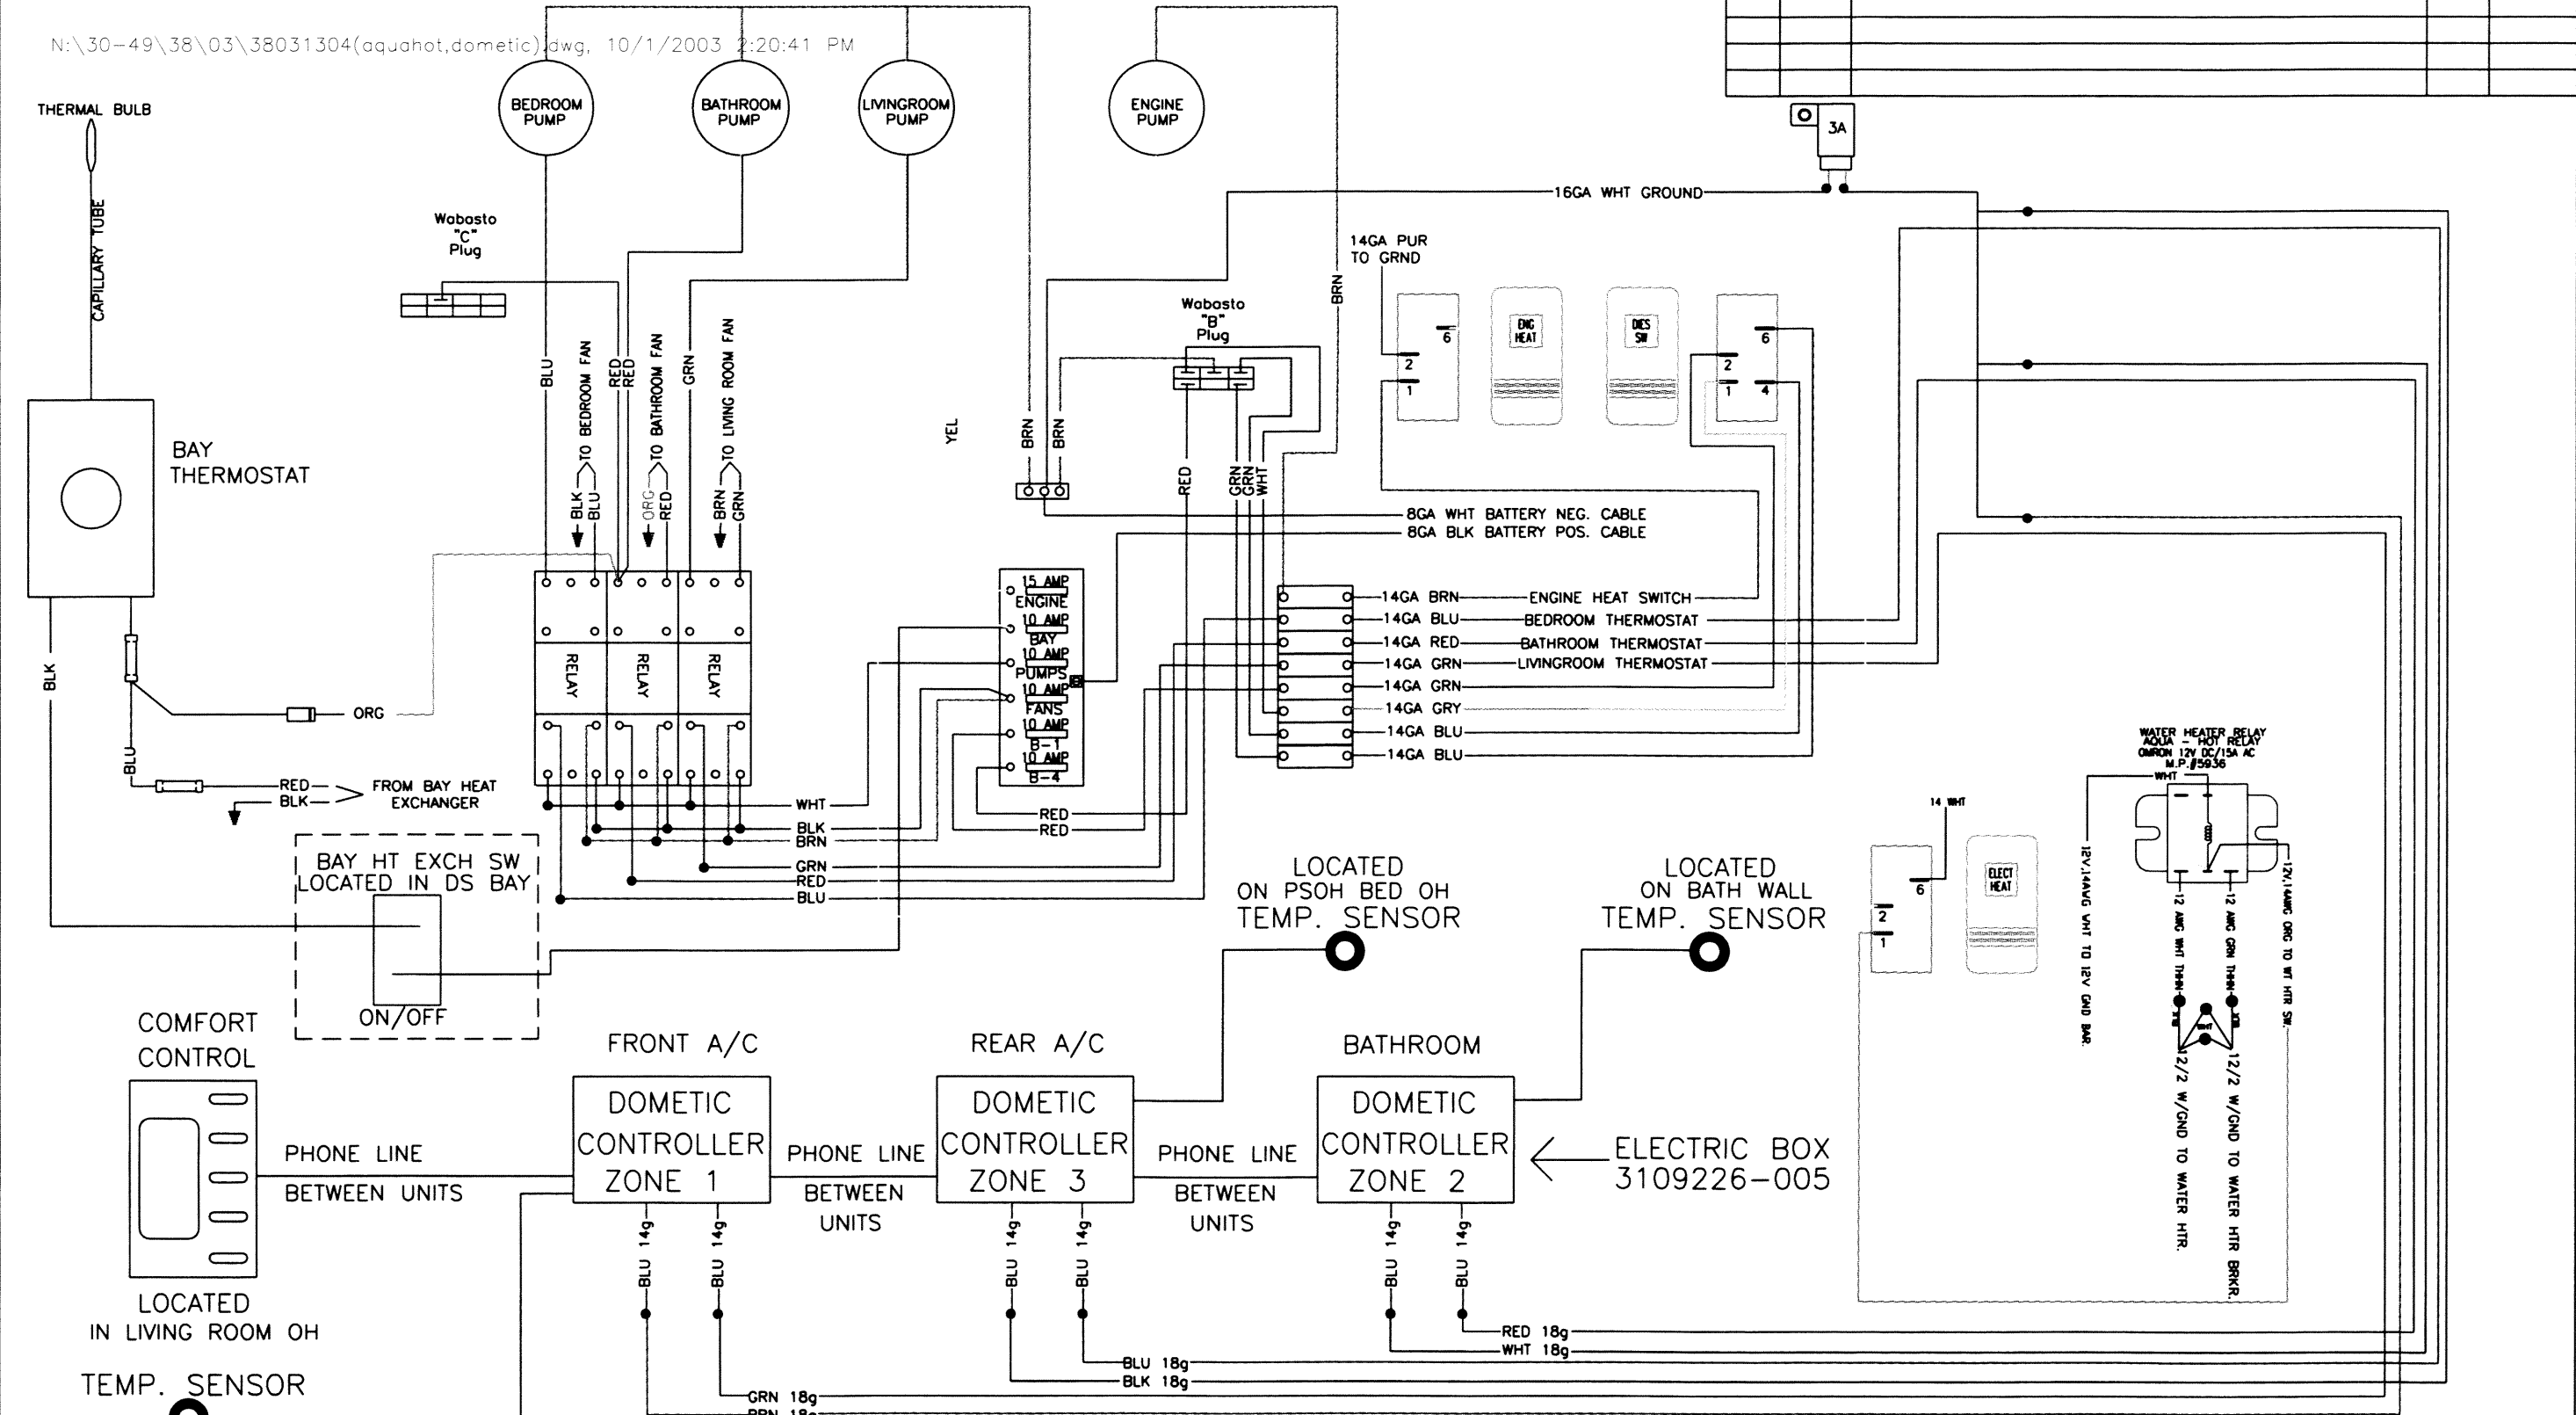

AT LIVING ROOM A/C, ZONE 1 AND FURNACE DIP SWITCH ARE ON  
AT EXTRA A/C BOX ZONE 2 AND FURNACE DIP SWITCHES ARE ON  
AT BED ROOM A/C ZONE 3 AND FURNACE DIP SWITCH ARE ON  
FOR THE EXTRA ZONE, USE ELECTRIC BOX 3109226-005


THE EXTRA ELECTRIC BOX WILL BE LOCATED BEHIND THE REAR TV.

DOMETIC ZONES  
ZONE 1 CONTROLS LIVINGROOM A/C AND FRT HEAT EXCHANGERS  
ZONE 2 CONTROLS BATHROOM A/C AND BED HEAT EXCHANGER  
ZONE 3 CONTROLS BEDROOM A/C AND BED HEAT EXCHANGER




100115

REV.	UNIT	DESCRIPTION OF CHANGE	BY	DATE
--	-	-----	---	--/--/--

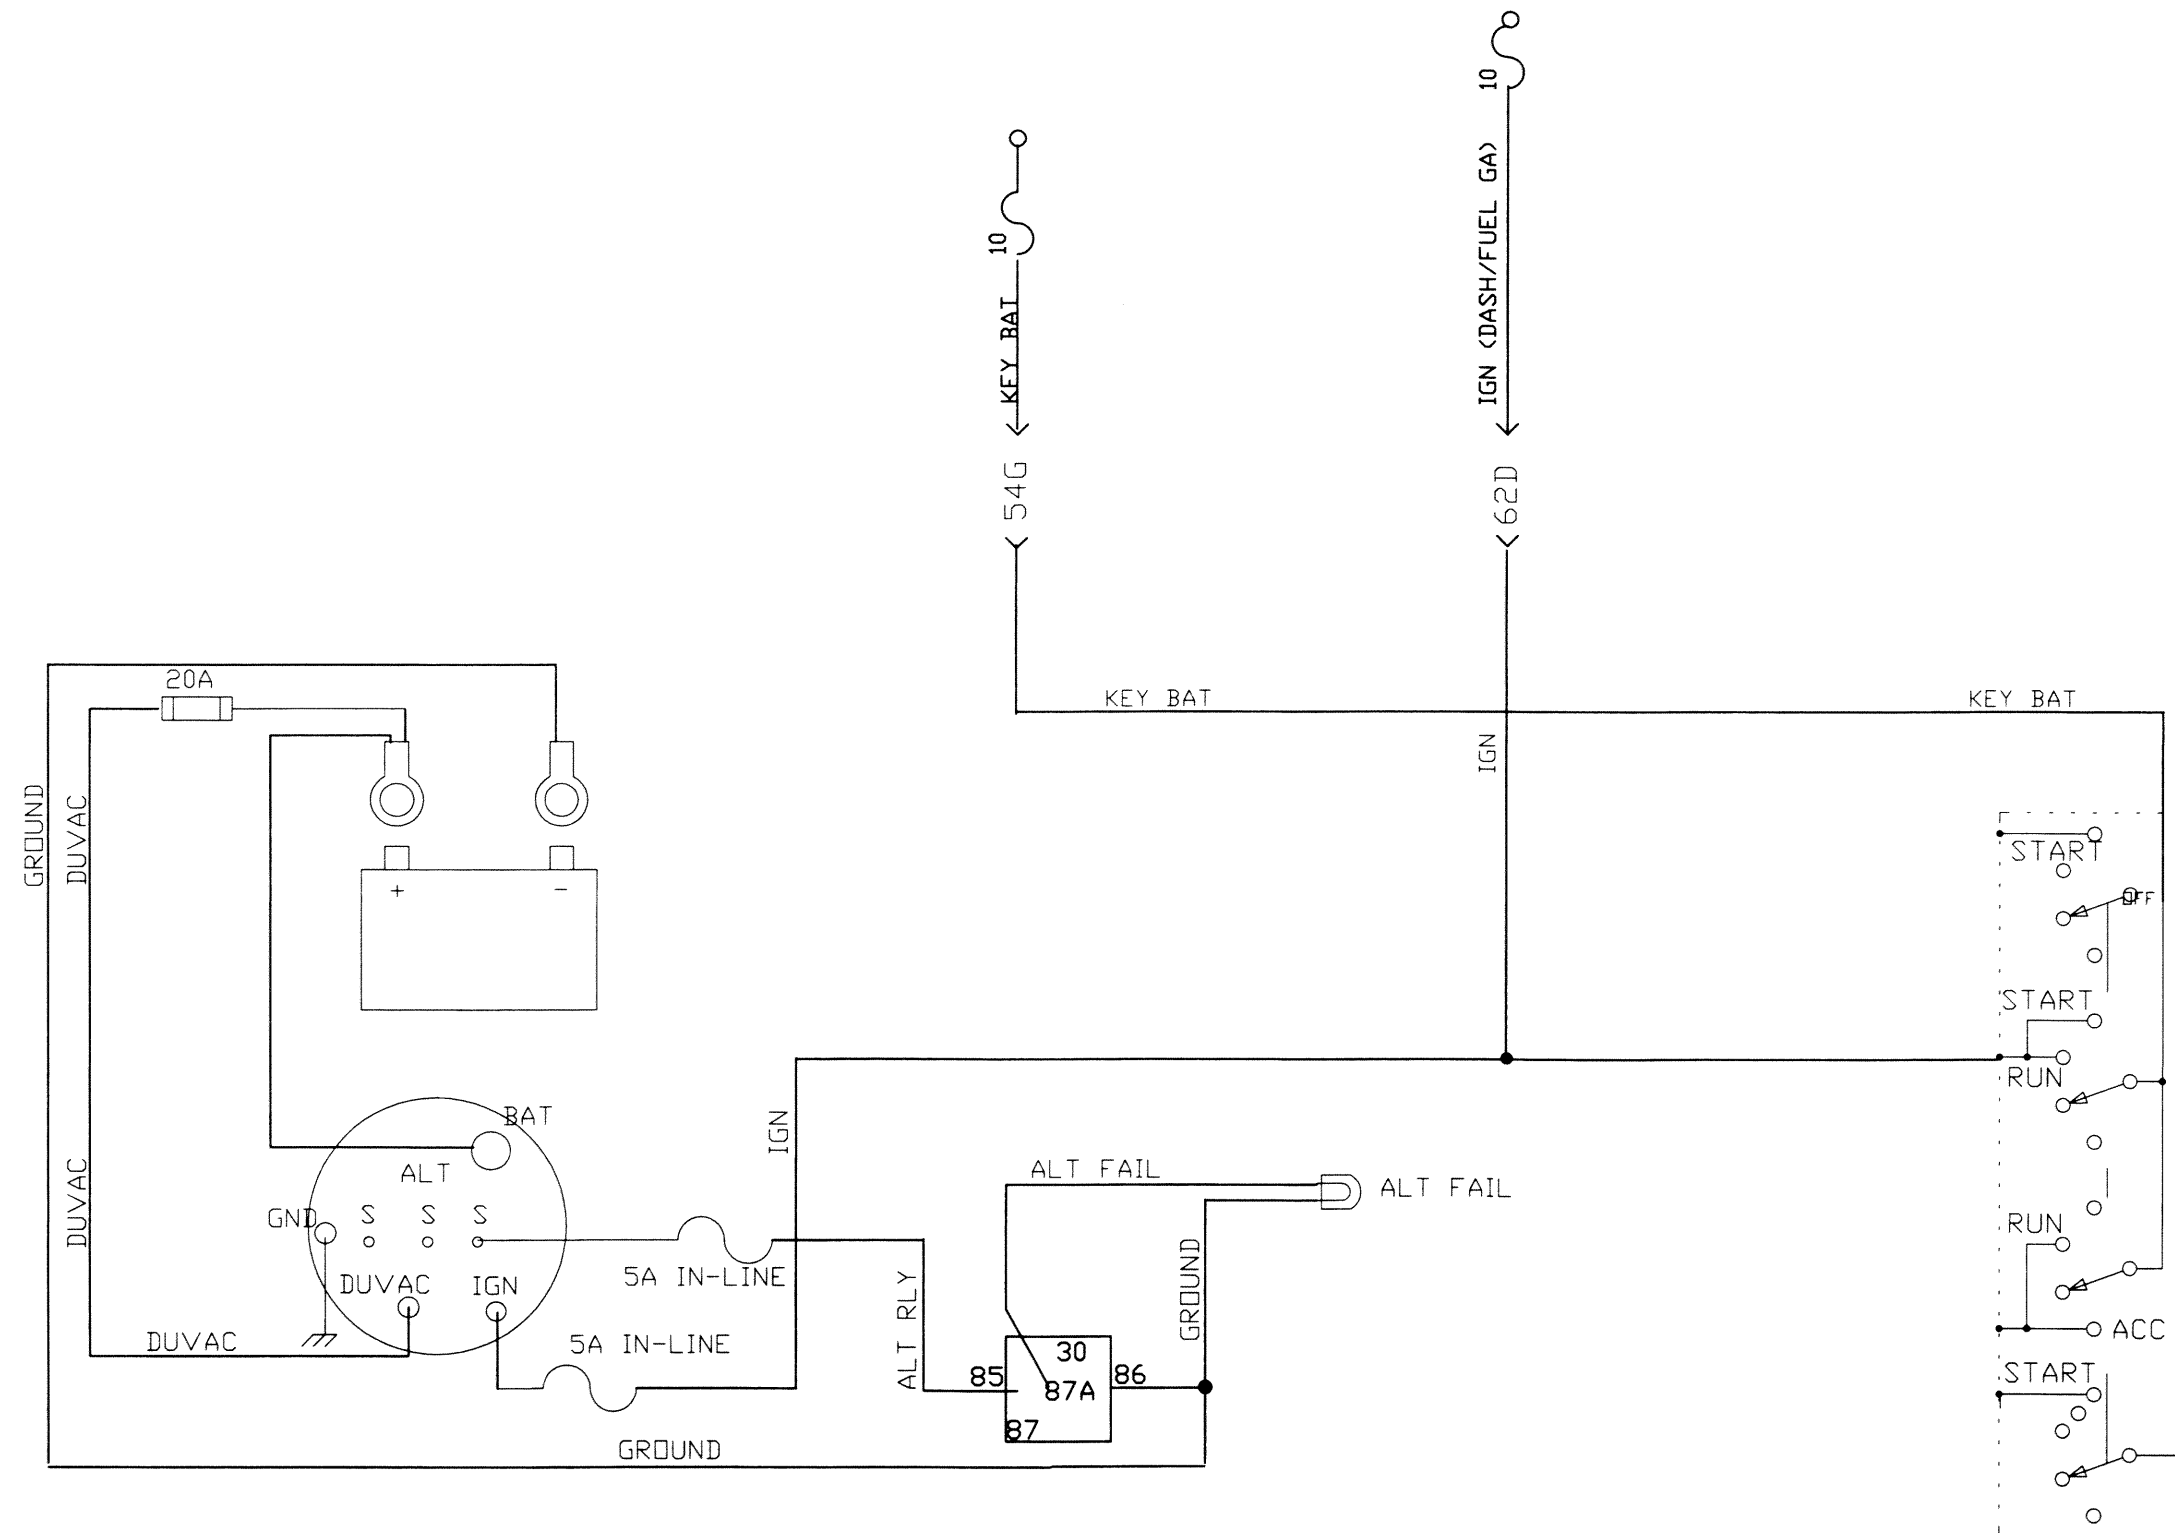


SAT. PREP CABLE LOCATED ON  
ROOF UNDER SAT BACKER

N:\30-49\38\04\38041395.dwg, 10/1/2003 2:02:36 PM

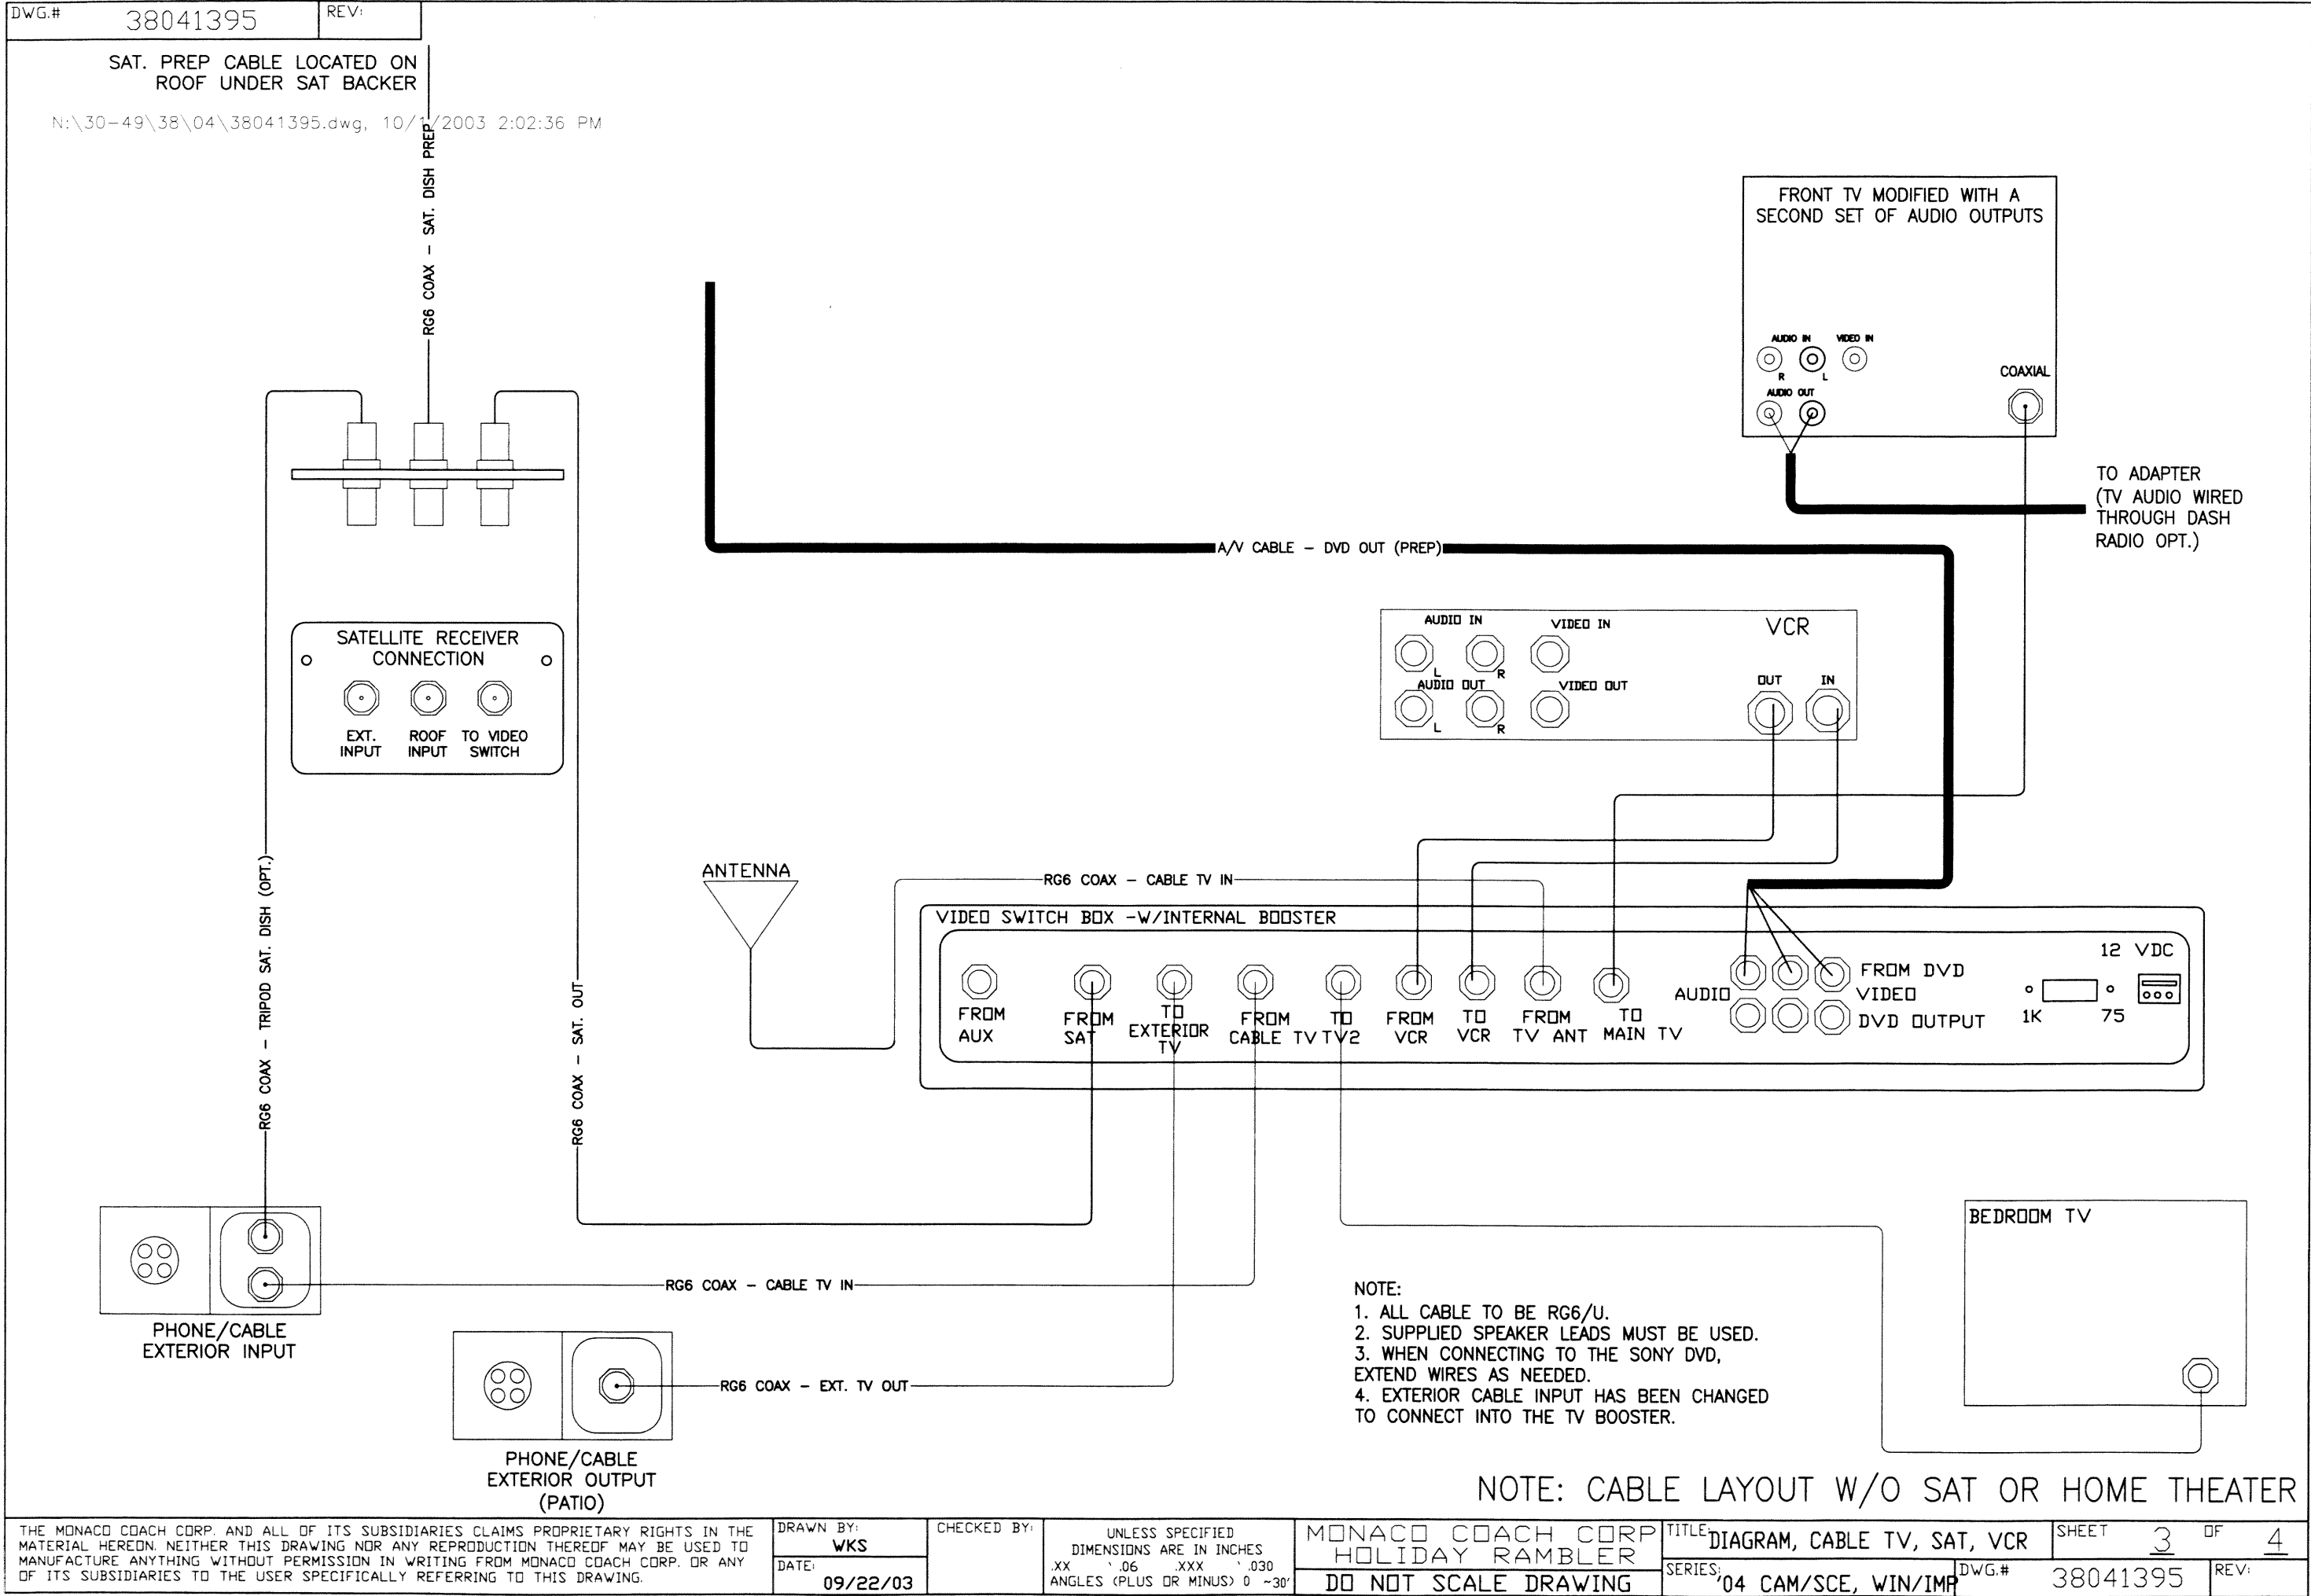

SAT. PREP CABLE LOCATED ON  
ROOF UNDER SAT BACKER


N:\30-49\38\04\38041395.dwg, 10/2003 2:02:57 PM

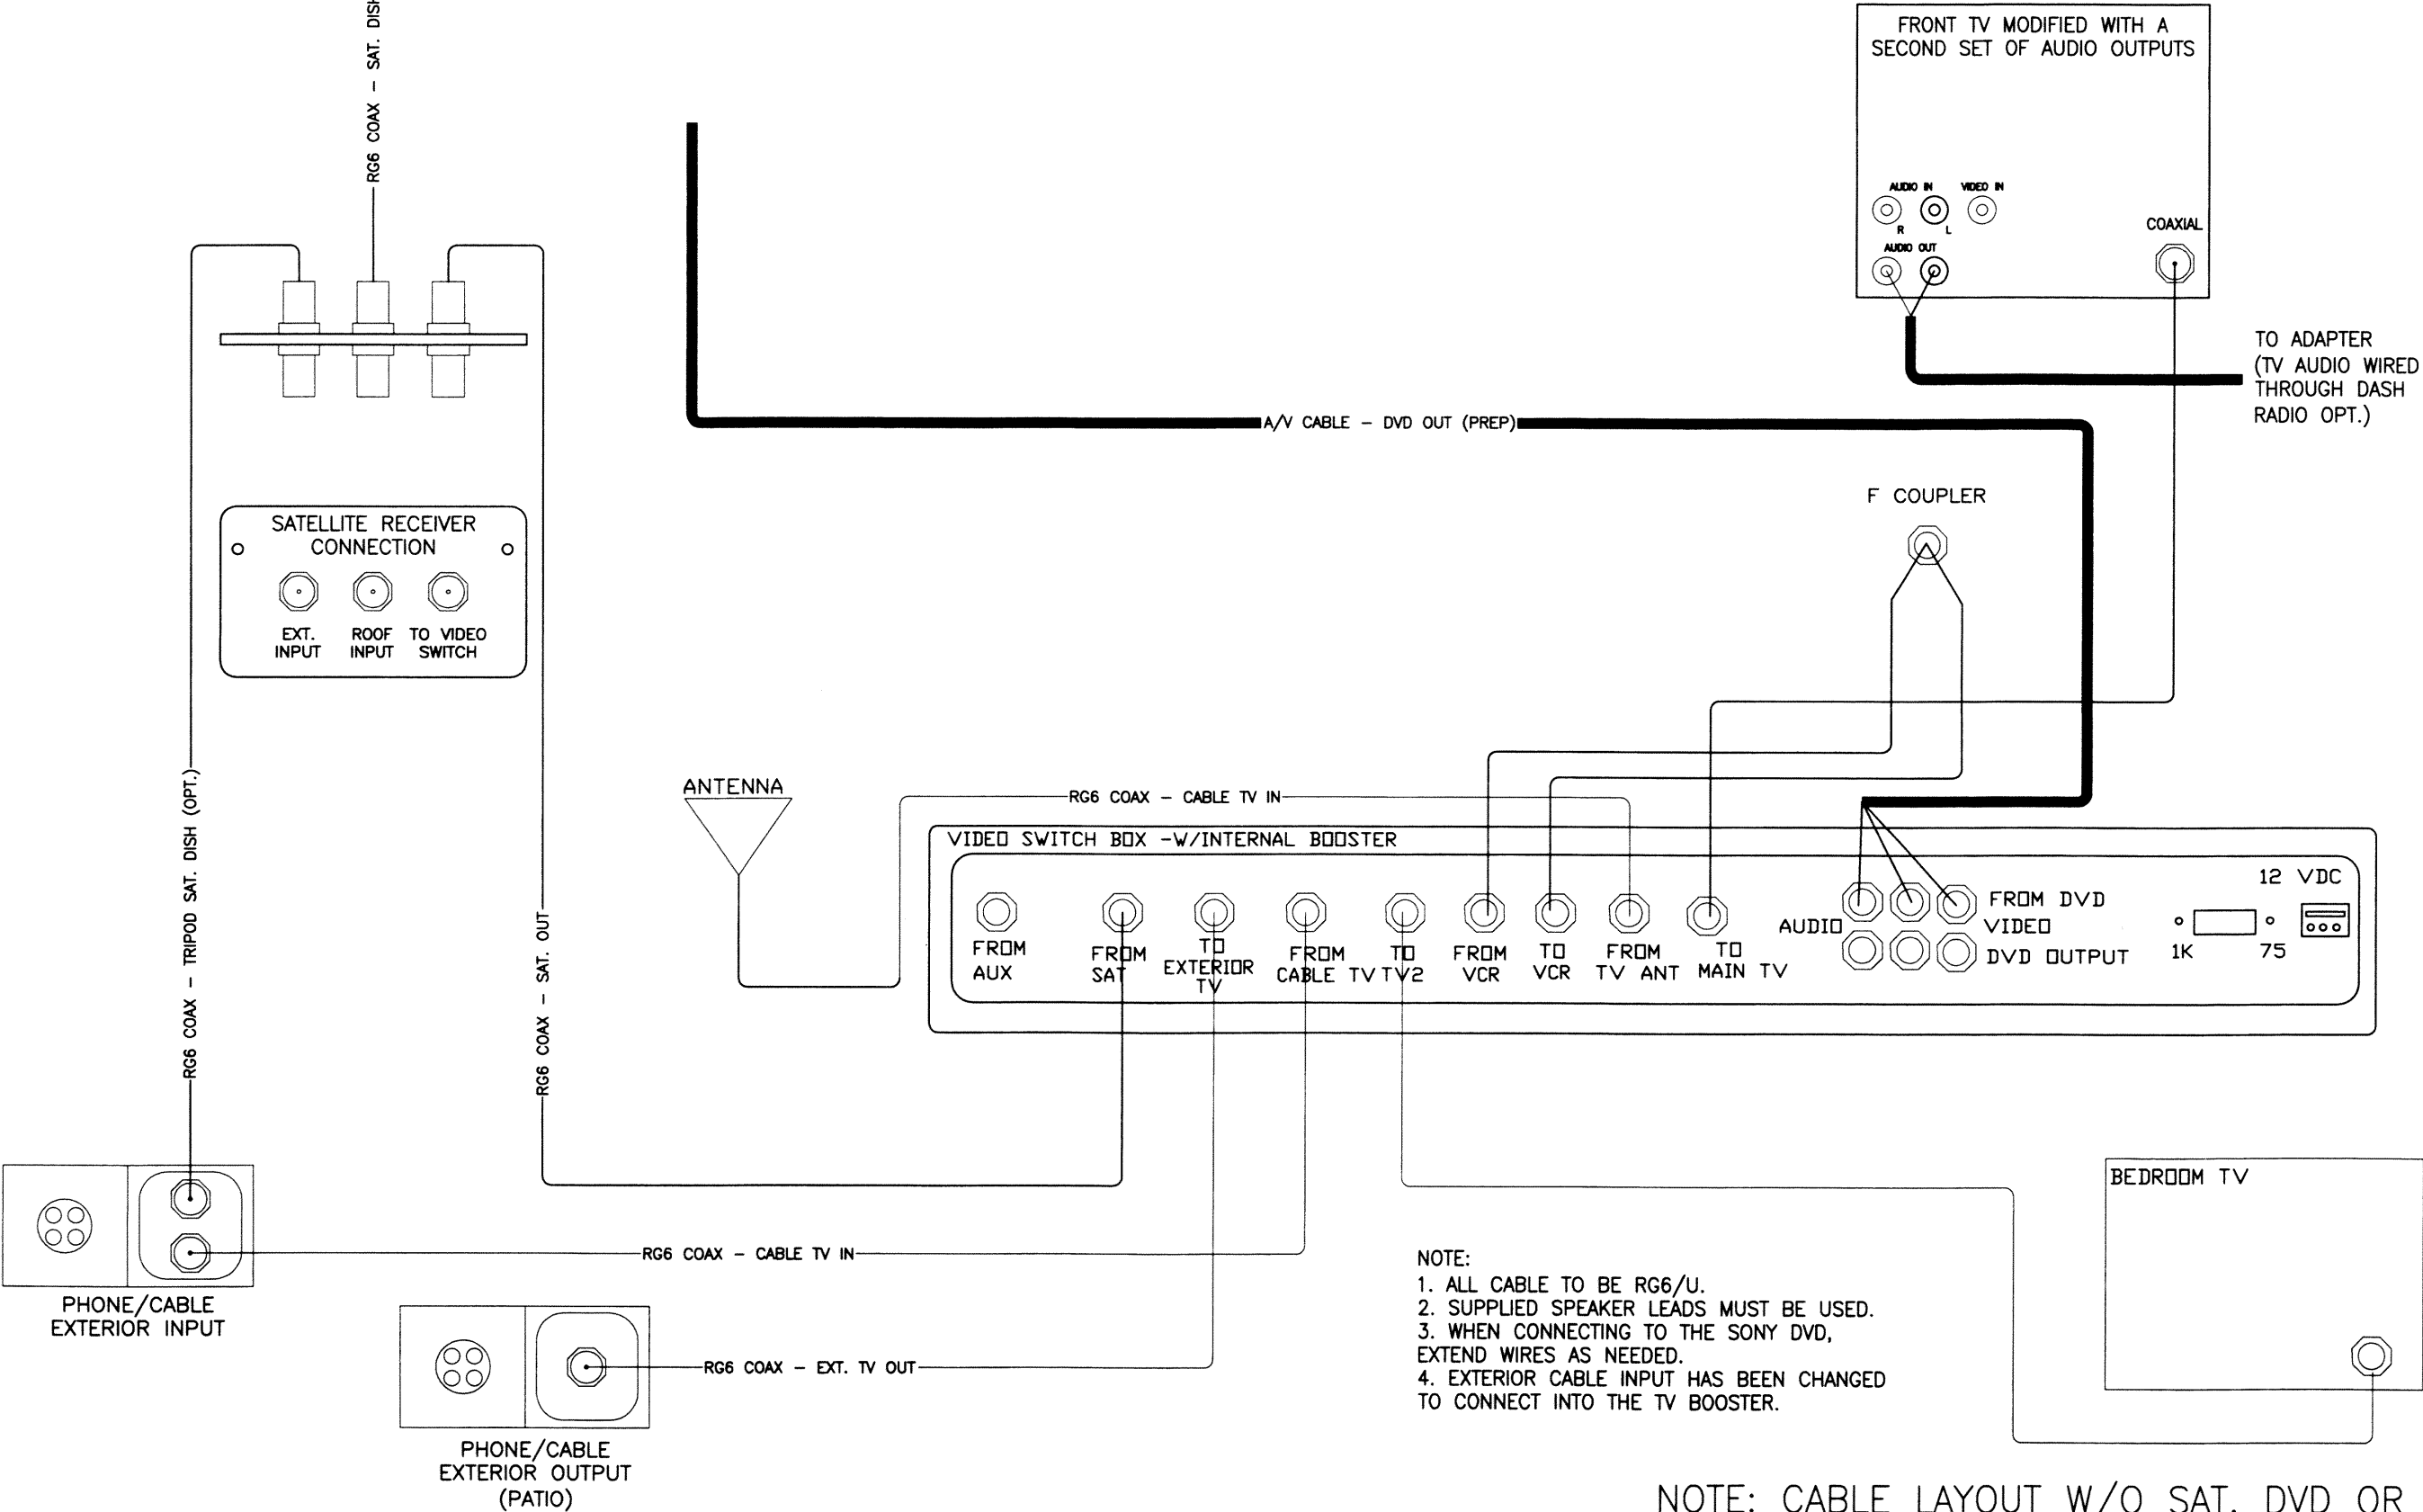

NOTE: CABLE LAYOUT W/O SAT, DVD OR VCR.

N:\30-49\38\04\38040920.dwg, 10/1/2003 2:03:56 PM

SWITCH IS TO BE SPST, (ON)-OFF.

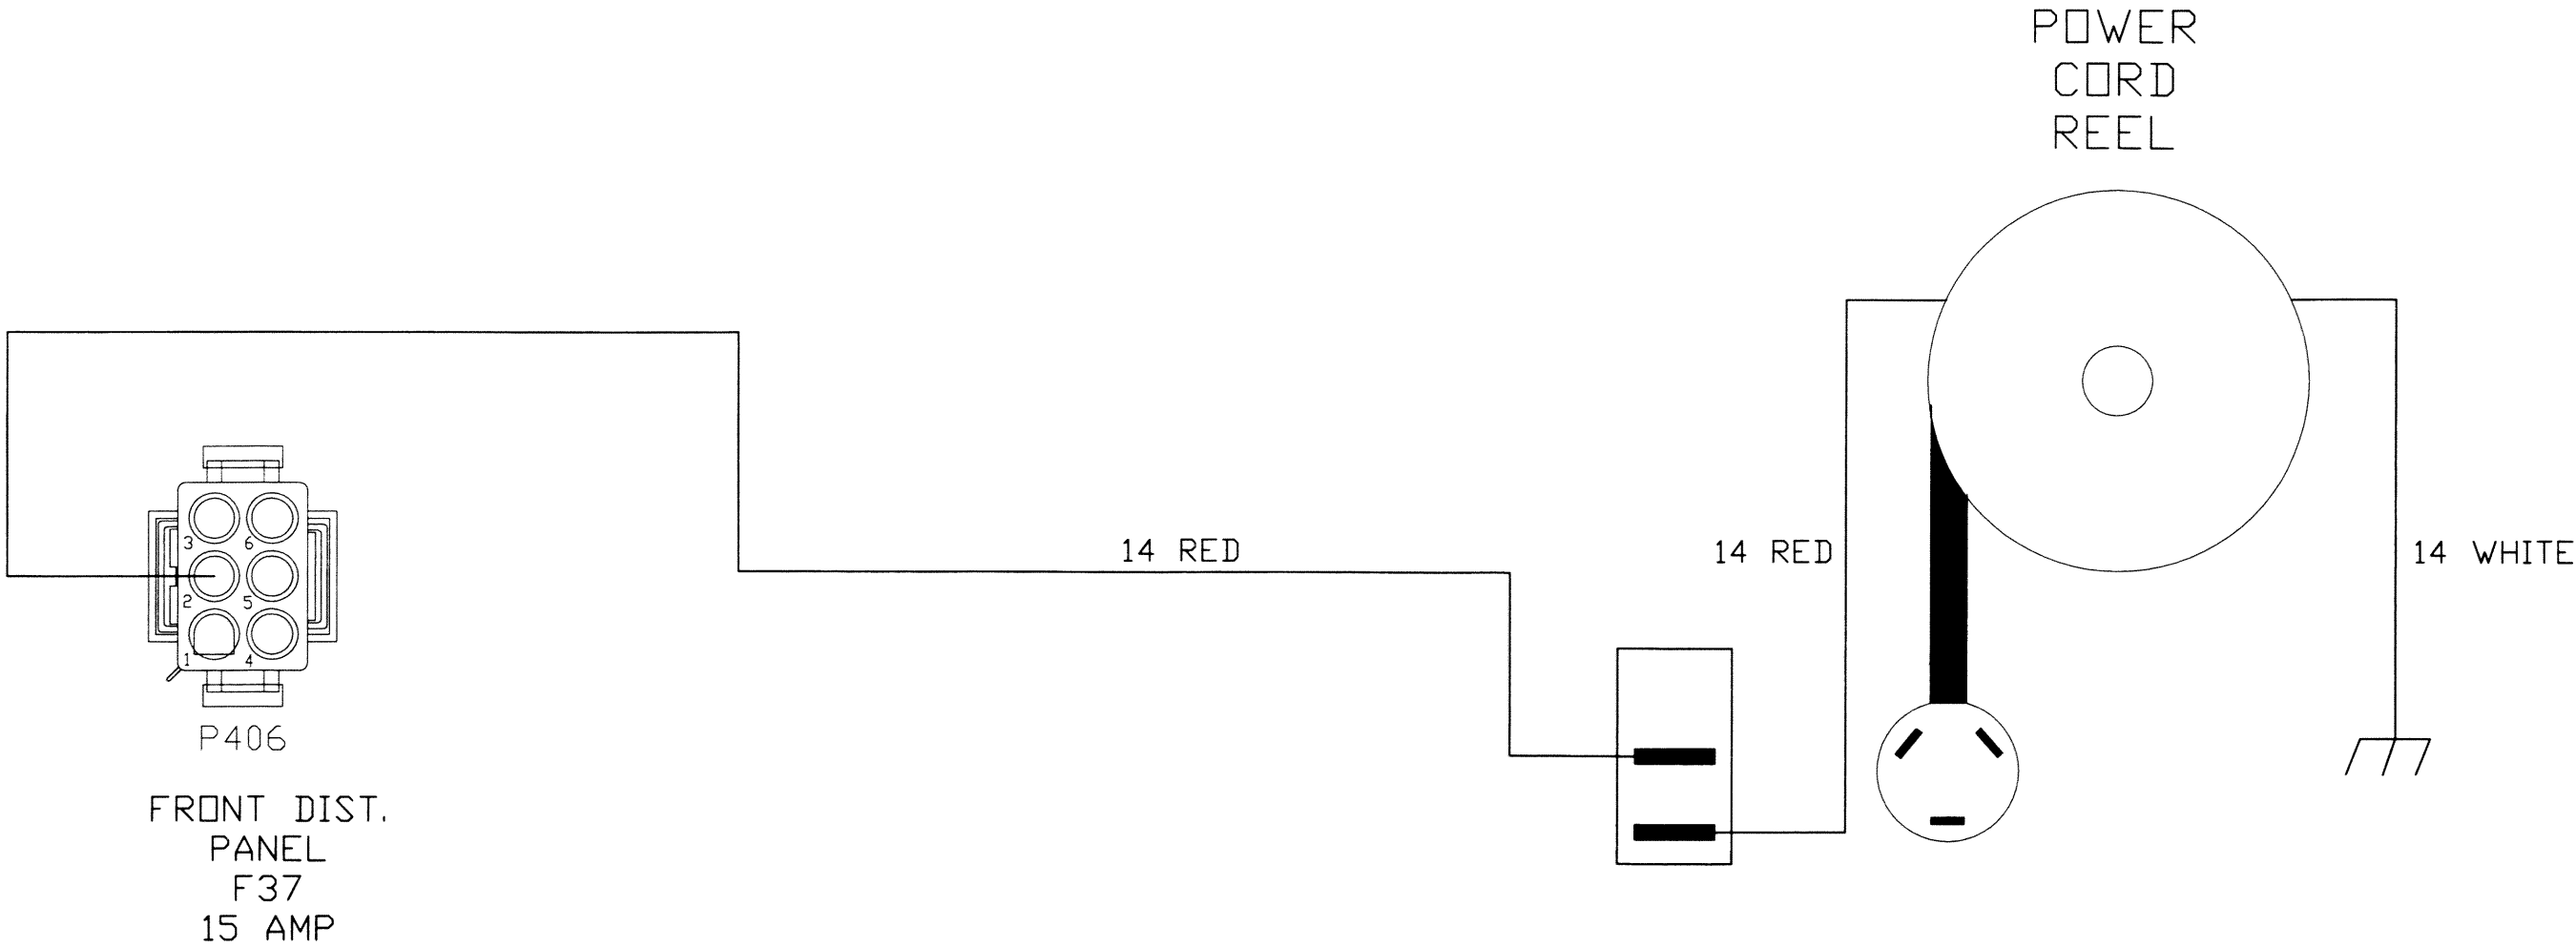


USAGE: OPTIONAL ON ZANZIBAR, SANTIAM, ENEAVOR, DIPLOMAT, SCEPTER, CAMELOT, WINDSOR, IMPERIAL.


N:\30-49\38\04\38040983.dwg, 10/1/2003 2:04:33 PM

SWITCH IS TO BE A SPST, ON-OFF SWITCH WITH BACKLIT LEGEND AND FUNCTION-ON INDICATOR.

USAGE: ALL MOTORIZED, DIESEL AND GAS UNITS.

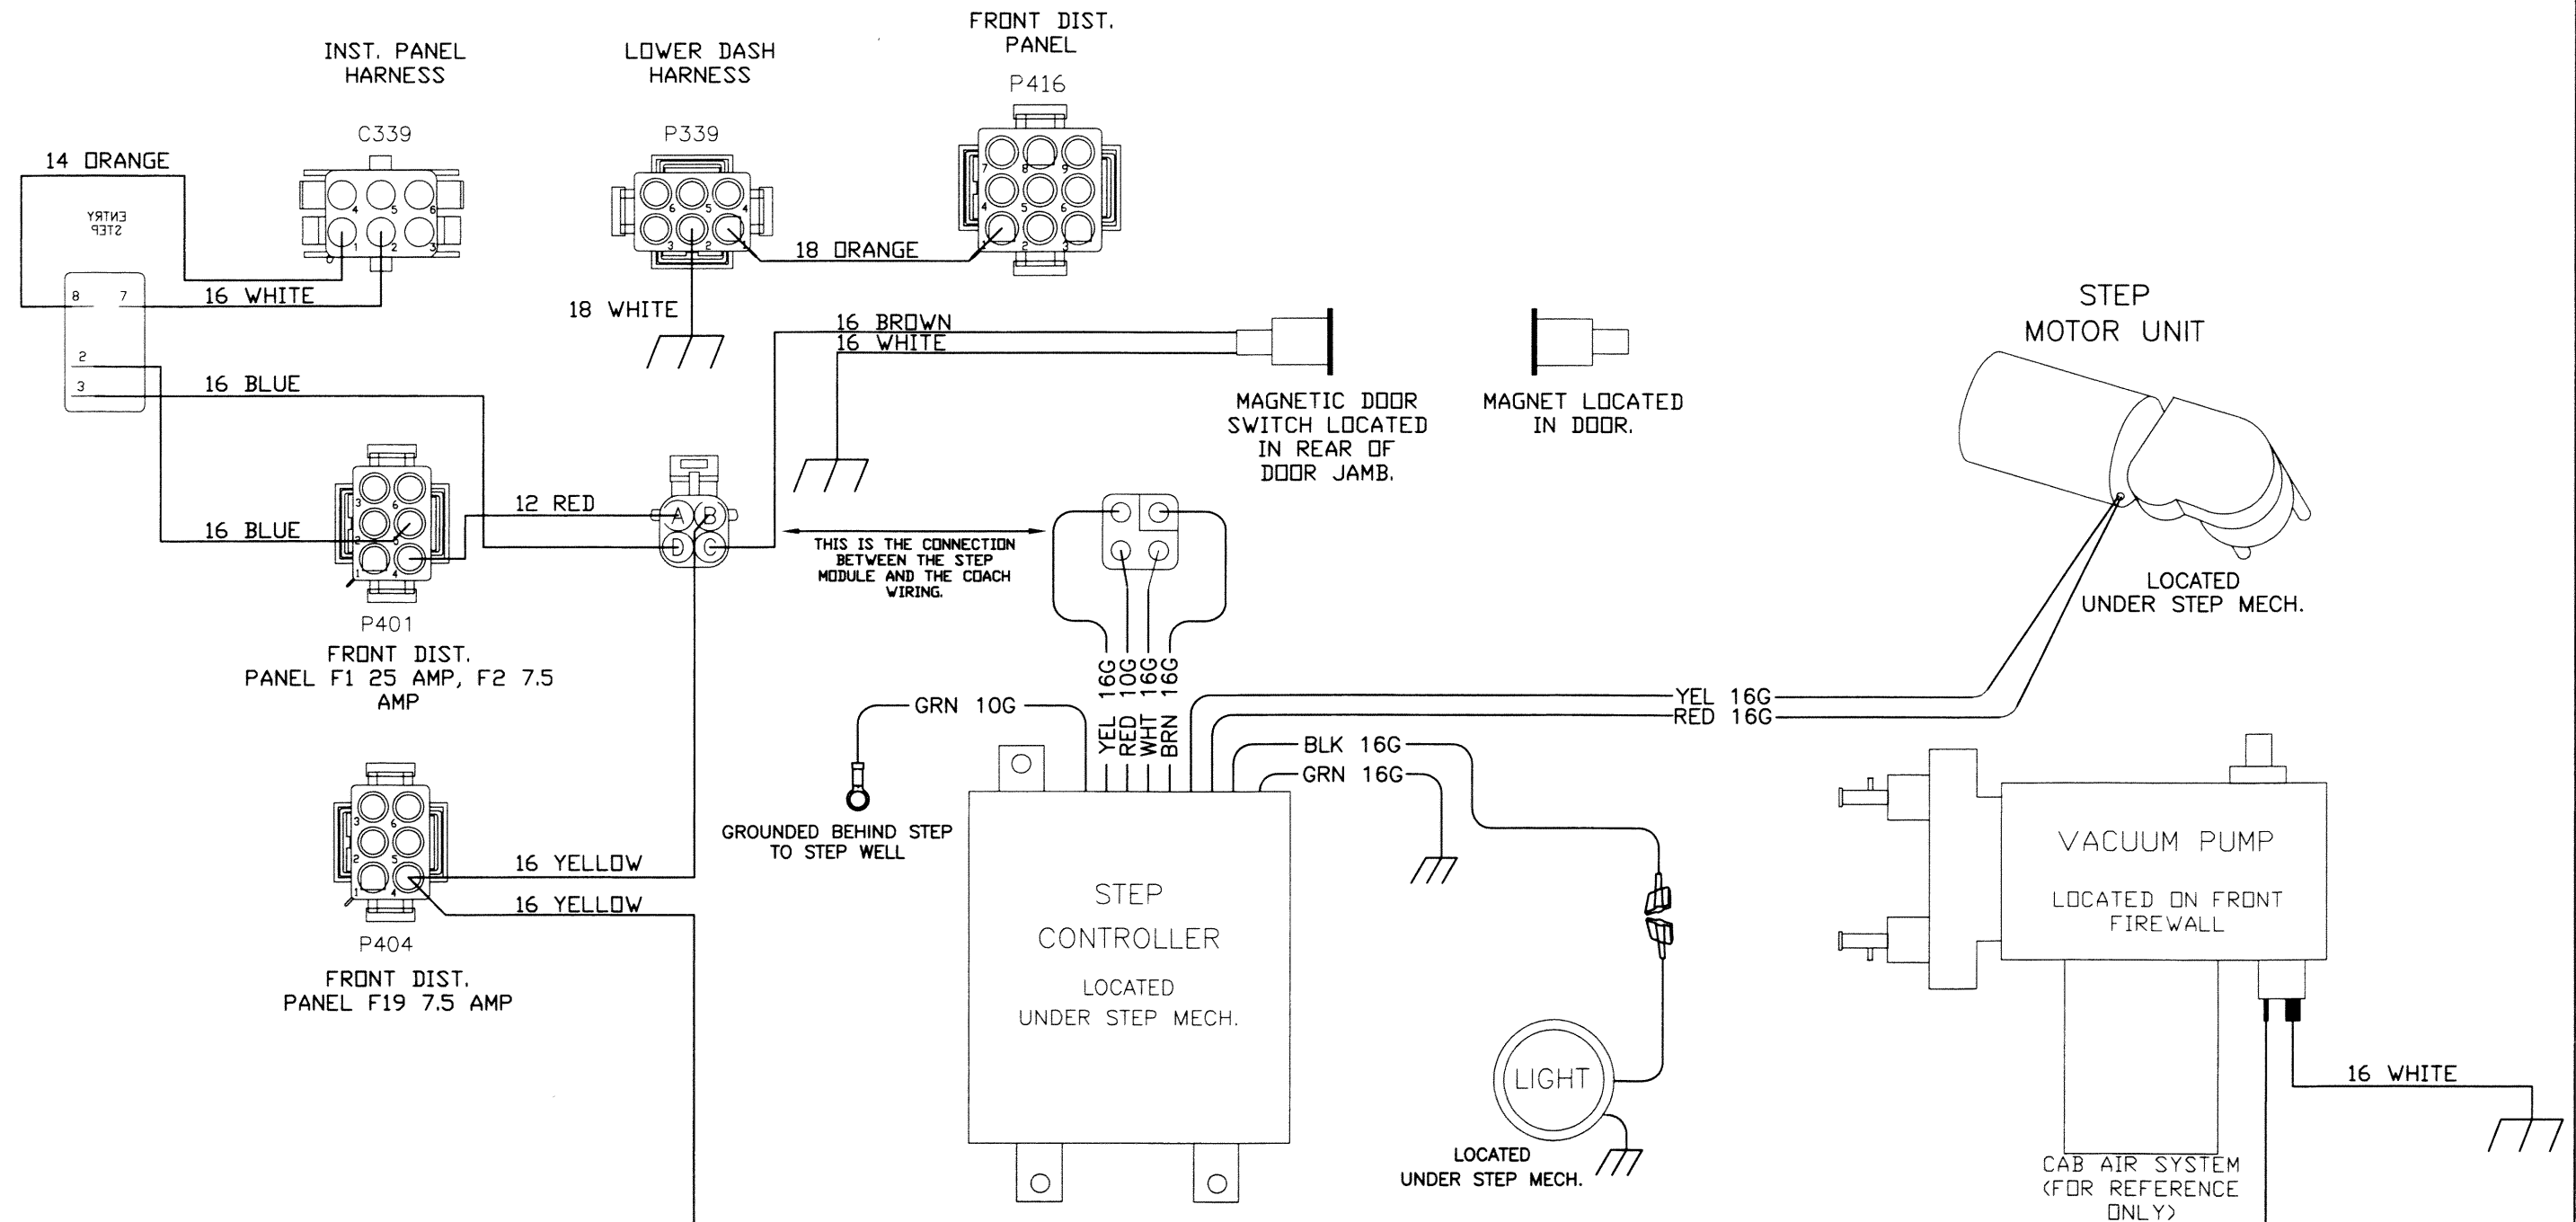


SWITCH IS TO BE DPDT, (ON)-OFF-(ON)  
SWITCH WITH BACKLIT LEGEND.

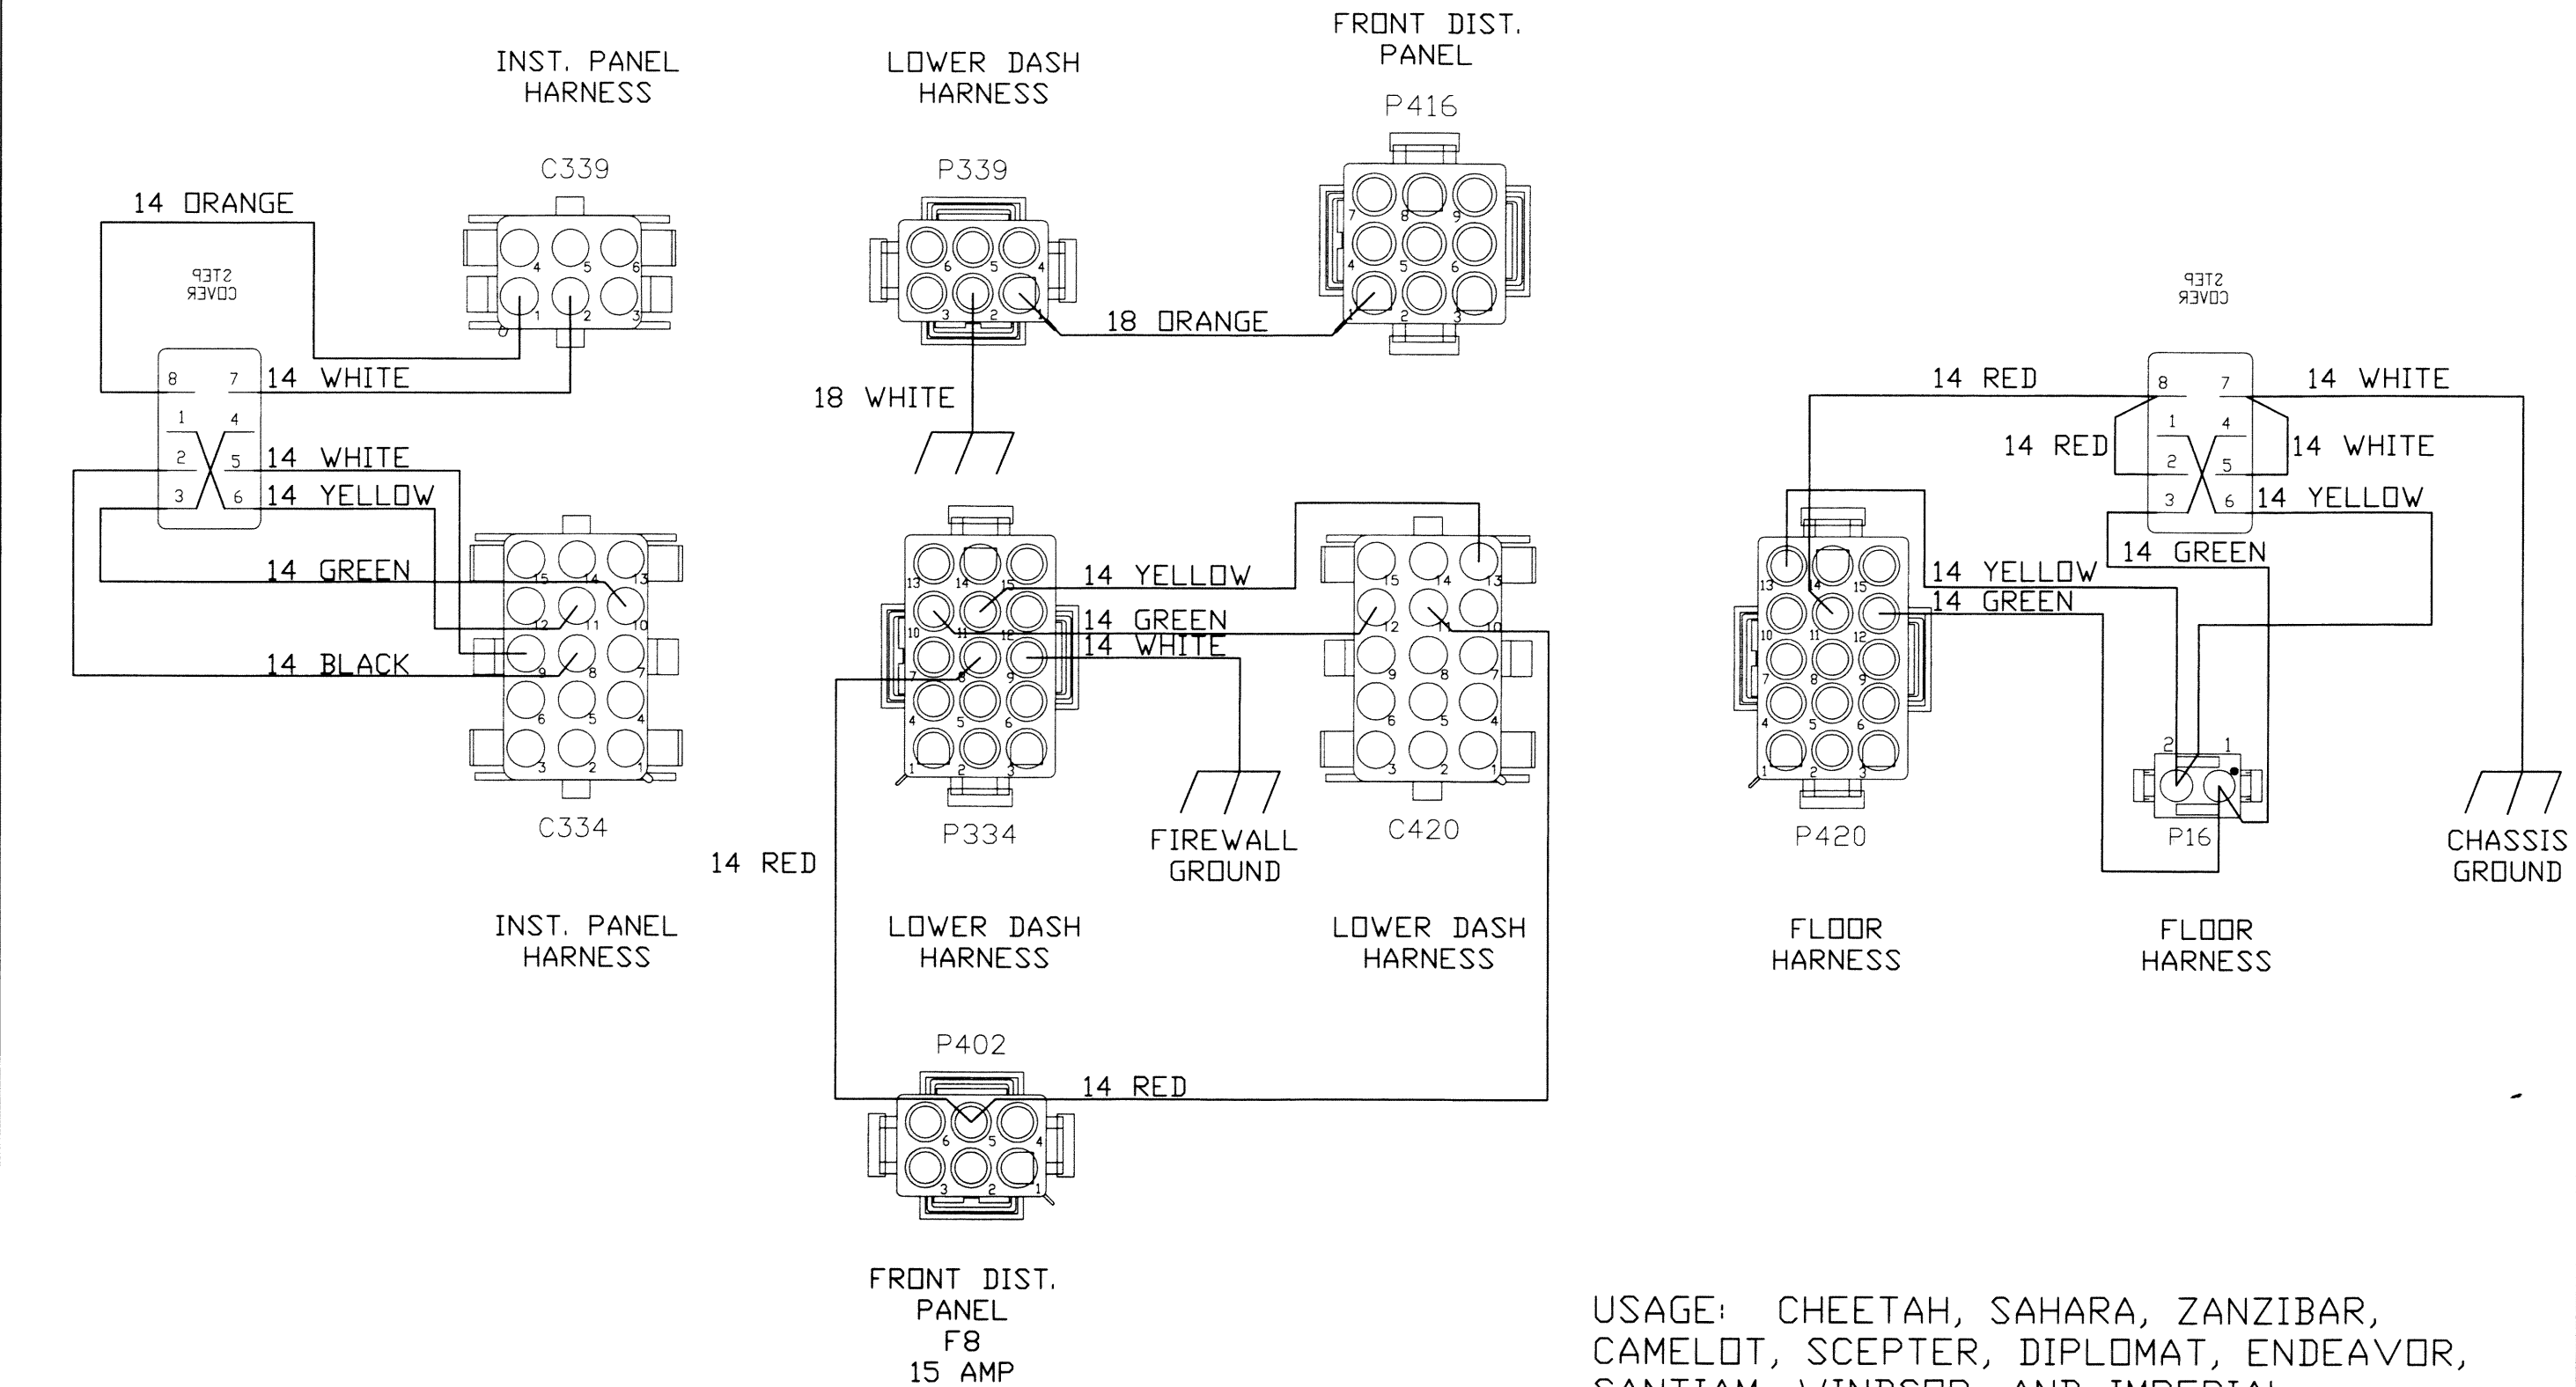


USAGE: CHEETAH, SAHARA, ZANZIBAR,  
CAMELOT, SCEPTER, DIPLOMAT, ENDEAVOR,  
SANTIAM, WINDSOR, AND IMPERIAL.

OPTIONAL  
ENERGY MGMT.  
SYSTEM  
  
FLOOR  
HARNESS

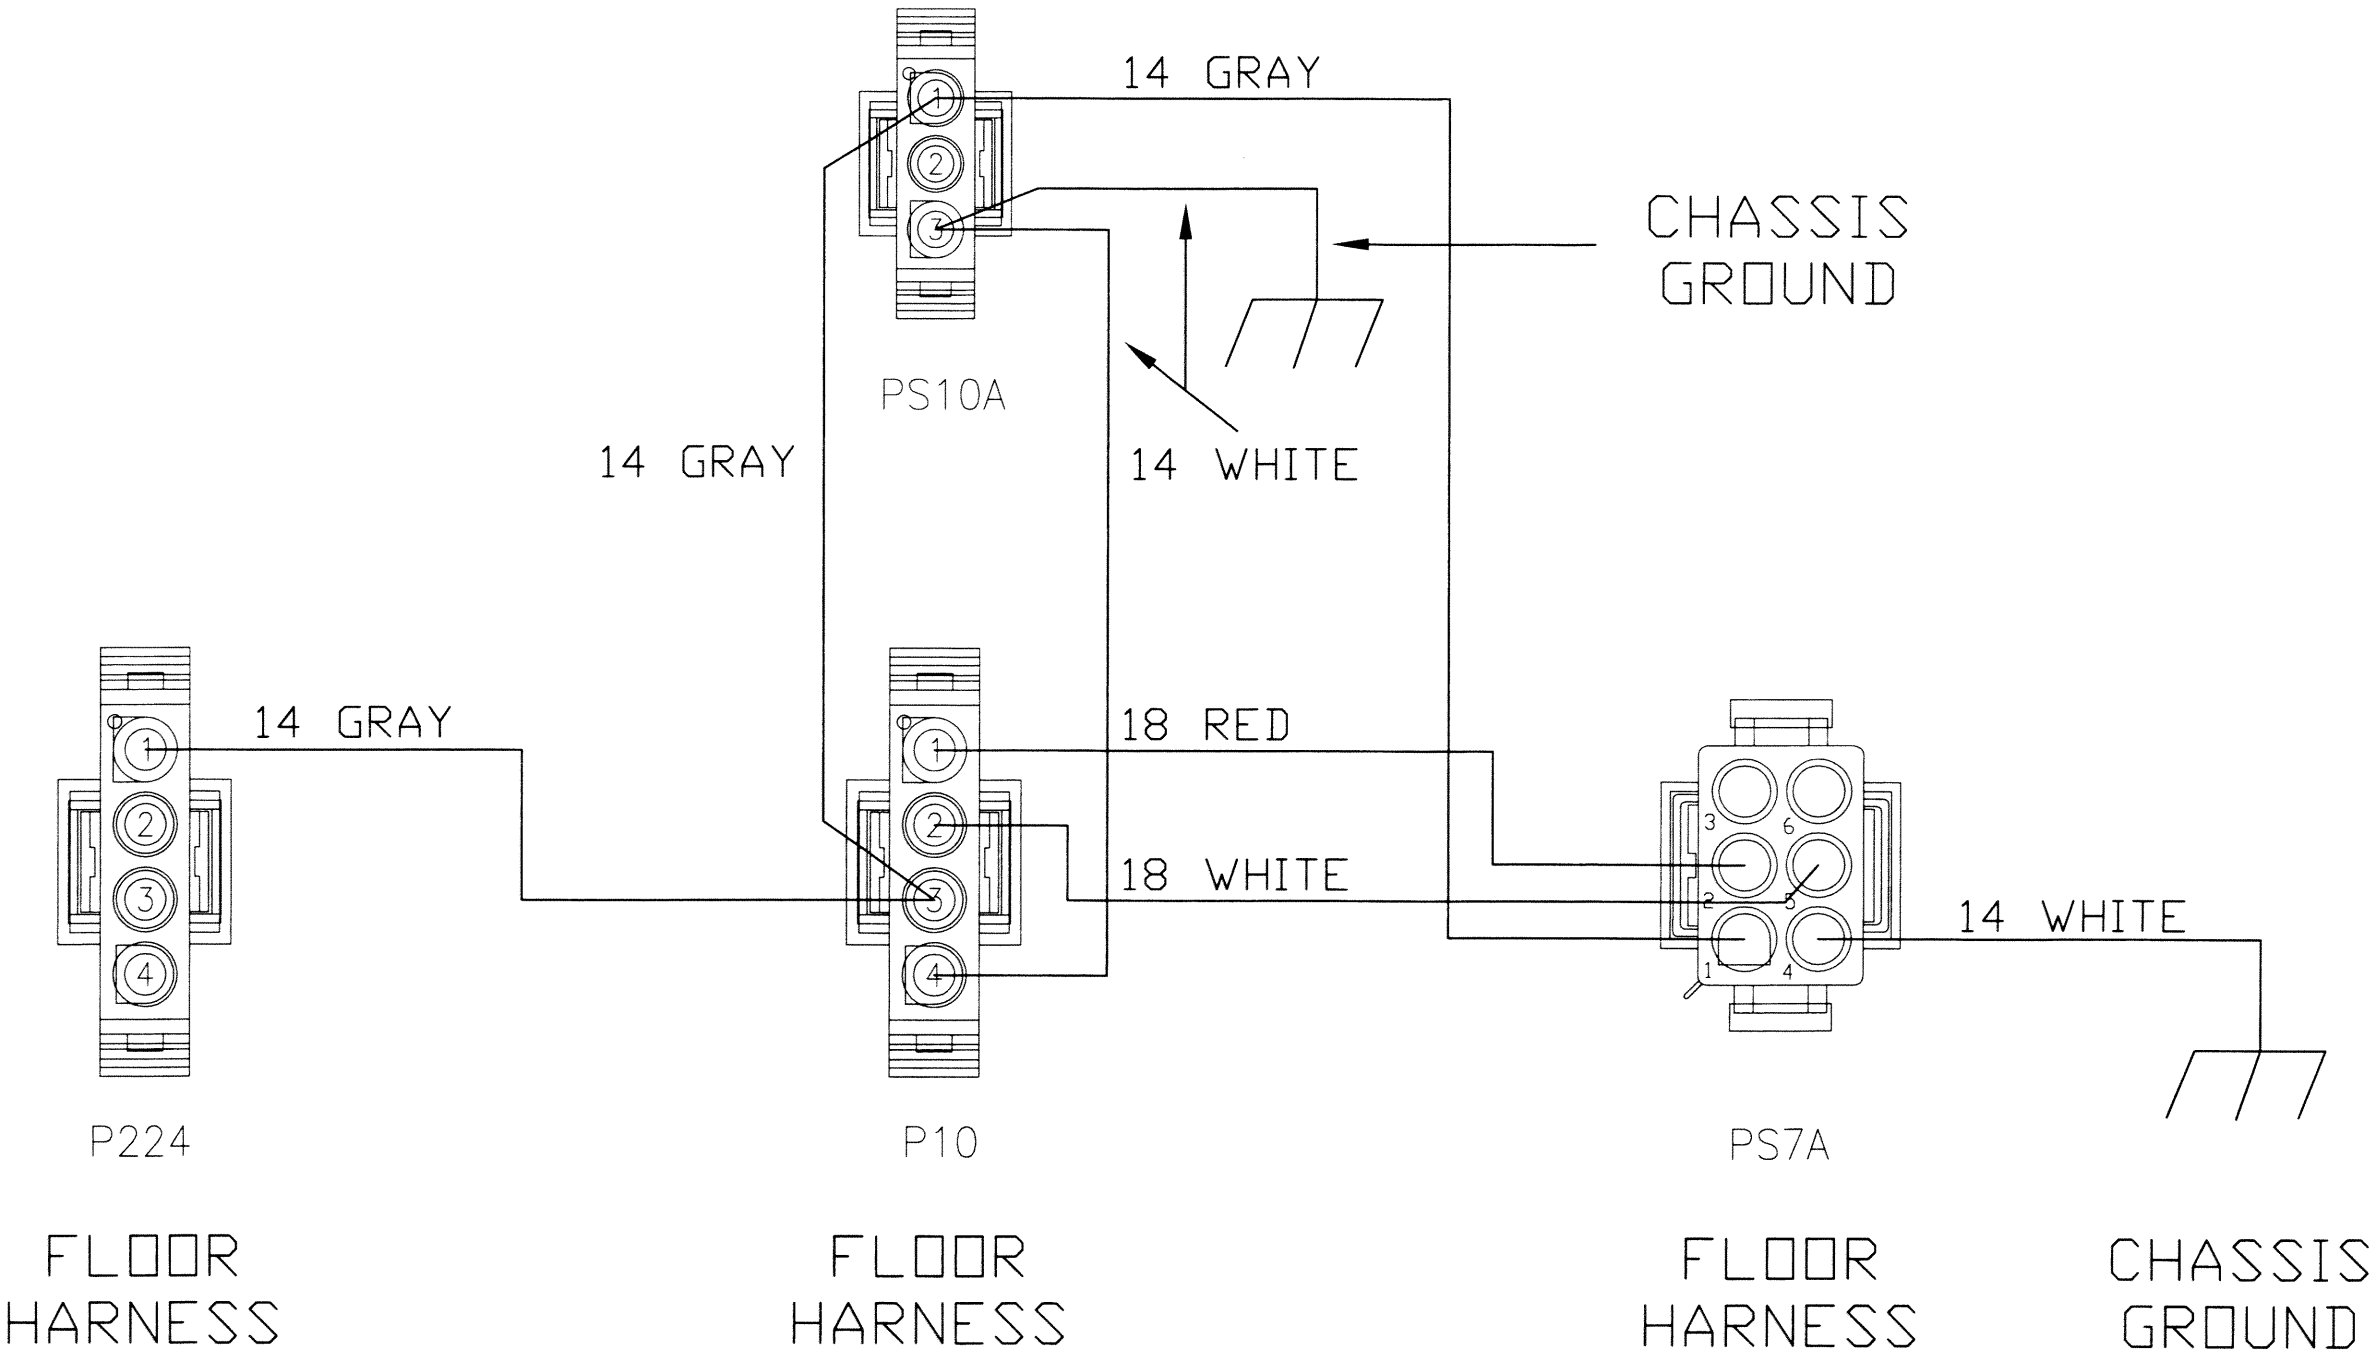




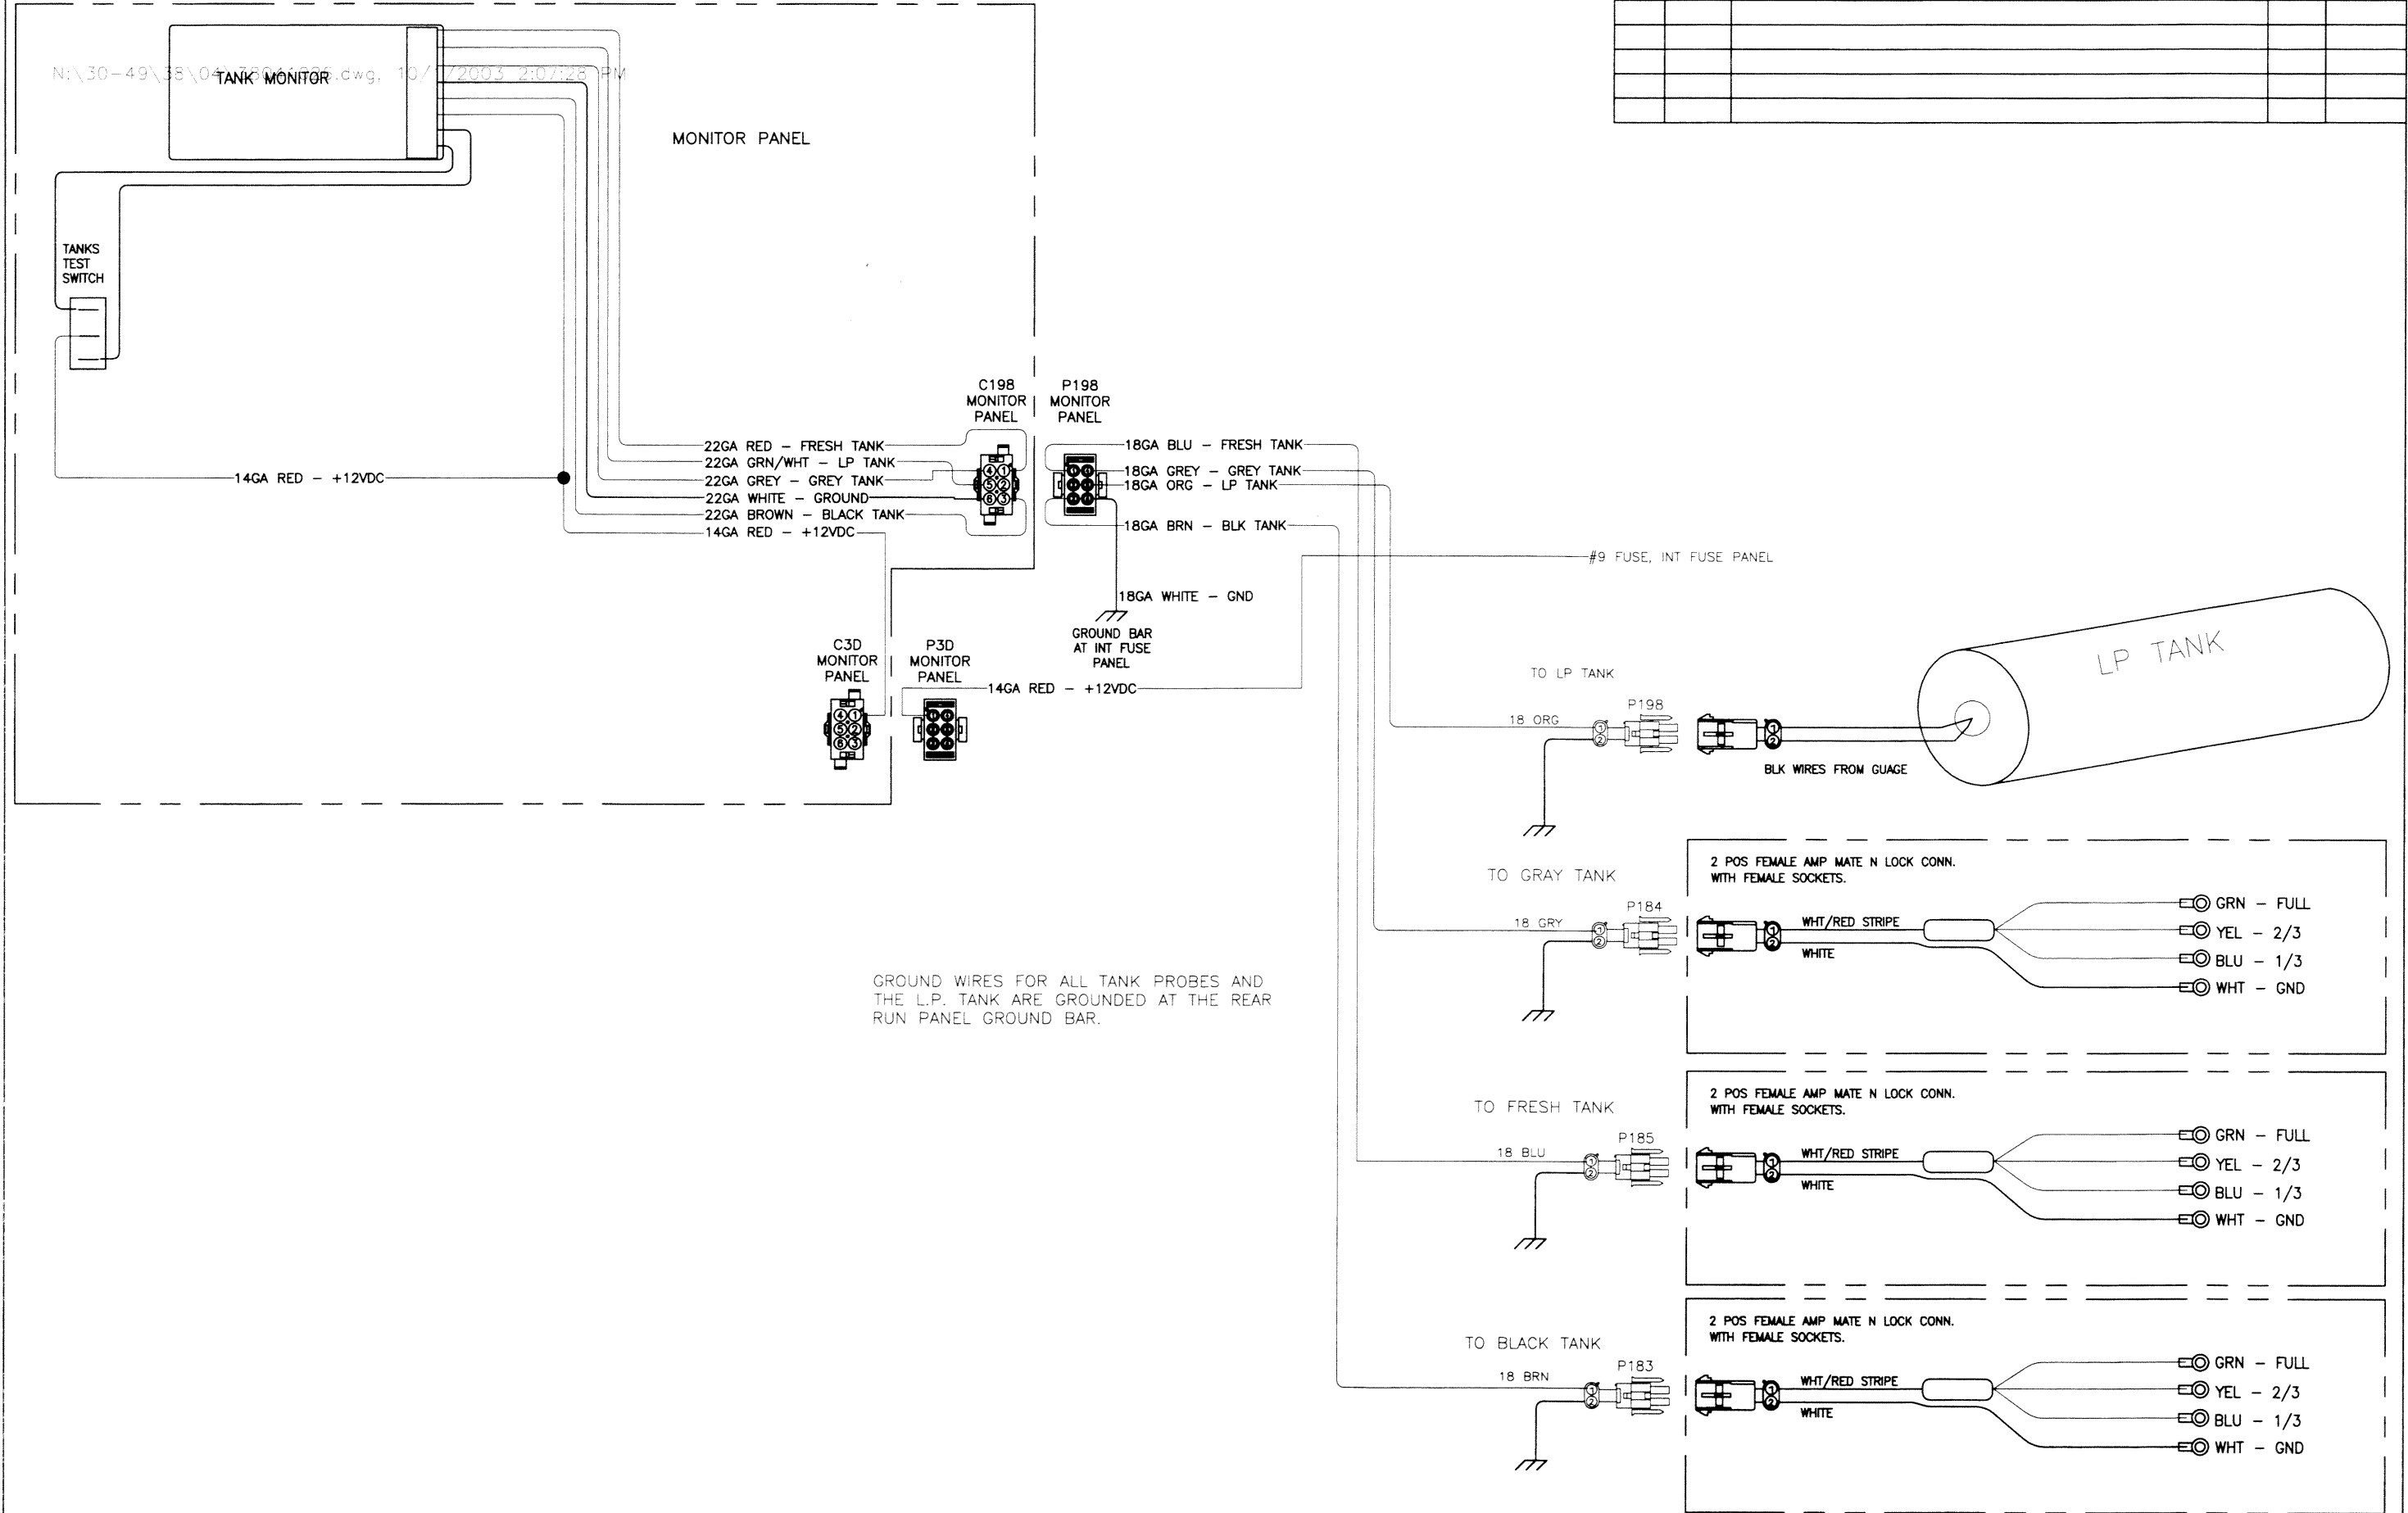

N:\30-49\38\04\38040921.dwg, 10/1/2003 2:08:16 PM


SWITCH IS TO BE SPST, (ON)-OFF.

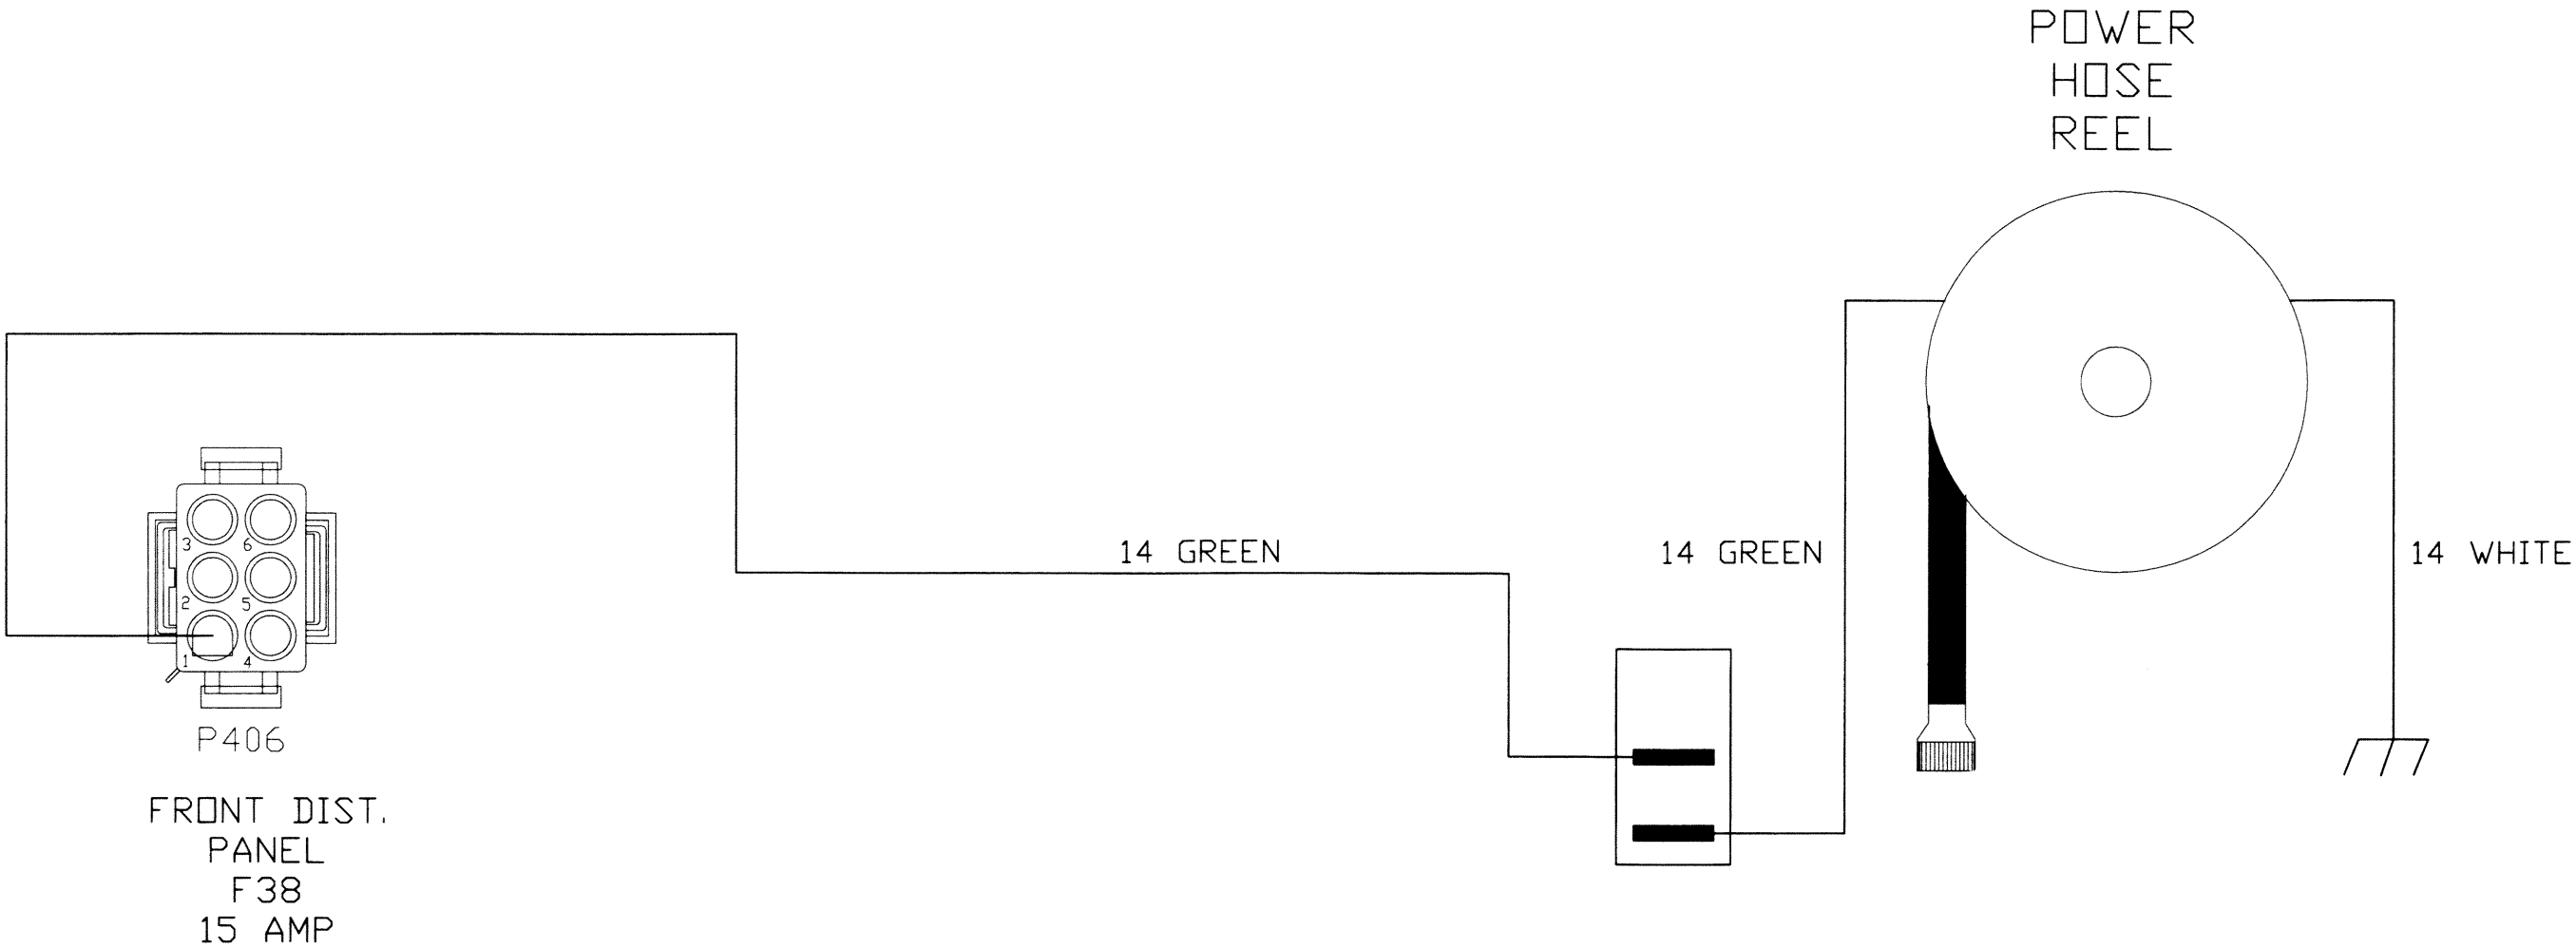

USAGE: OPTIONAL ON DIPLOMAT, SCEPTER,  
CAMELOT, WINDSOR, IMPERIAL.


N:\30-49\38\04\38040501.dwg, 10/1/2003 2:08:49 PM

SWITCH IS TO BE A SPST,  
ON-(OFF) SWITCH WITH BACKLIT  
LEGEND.

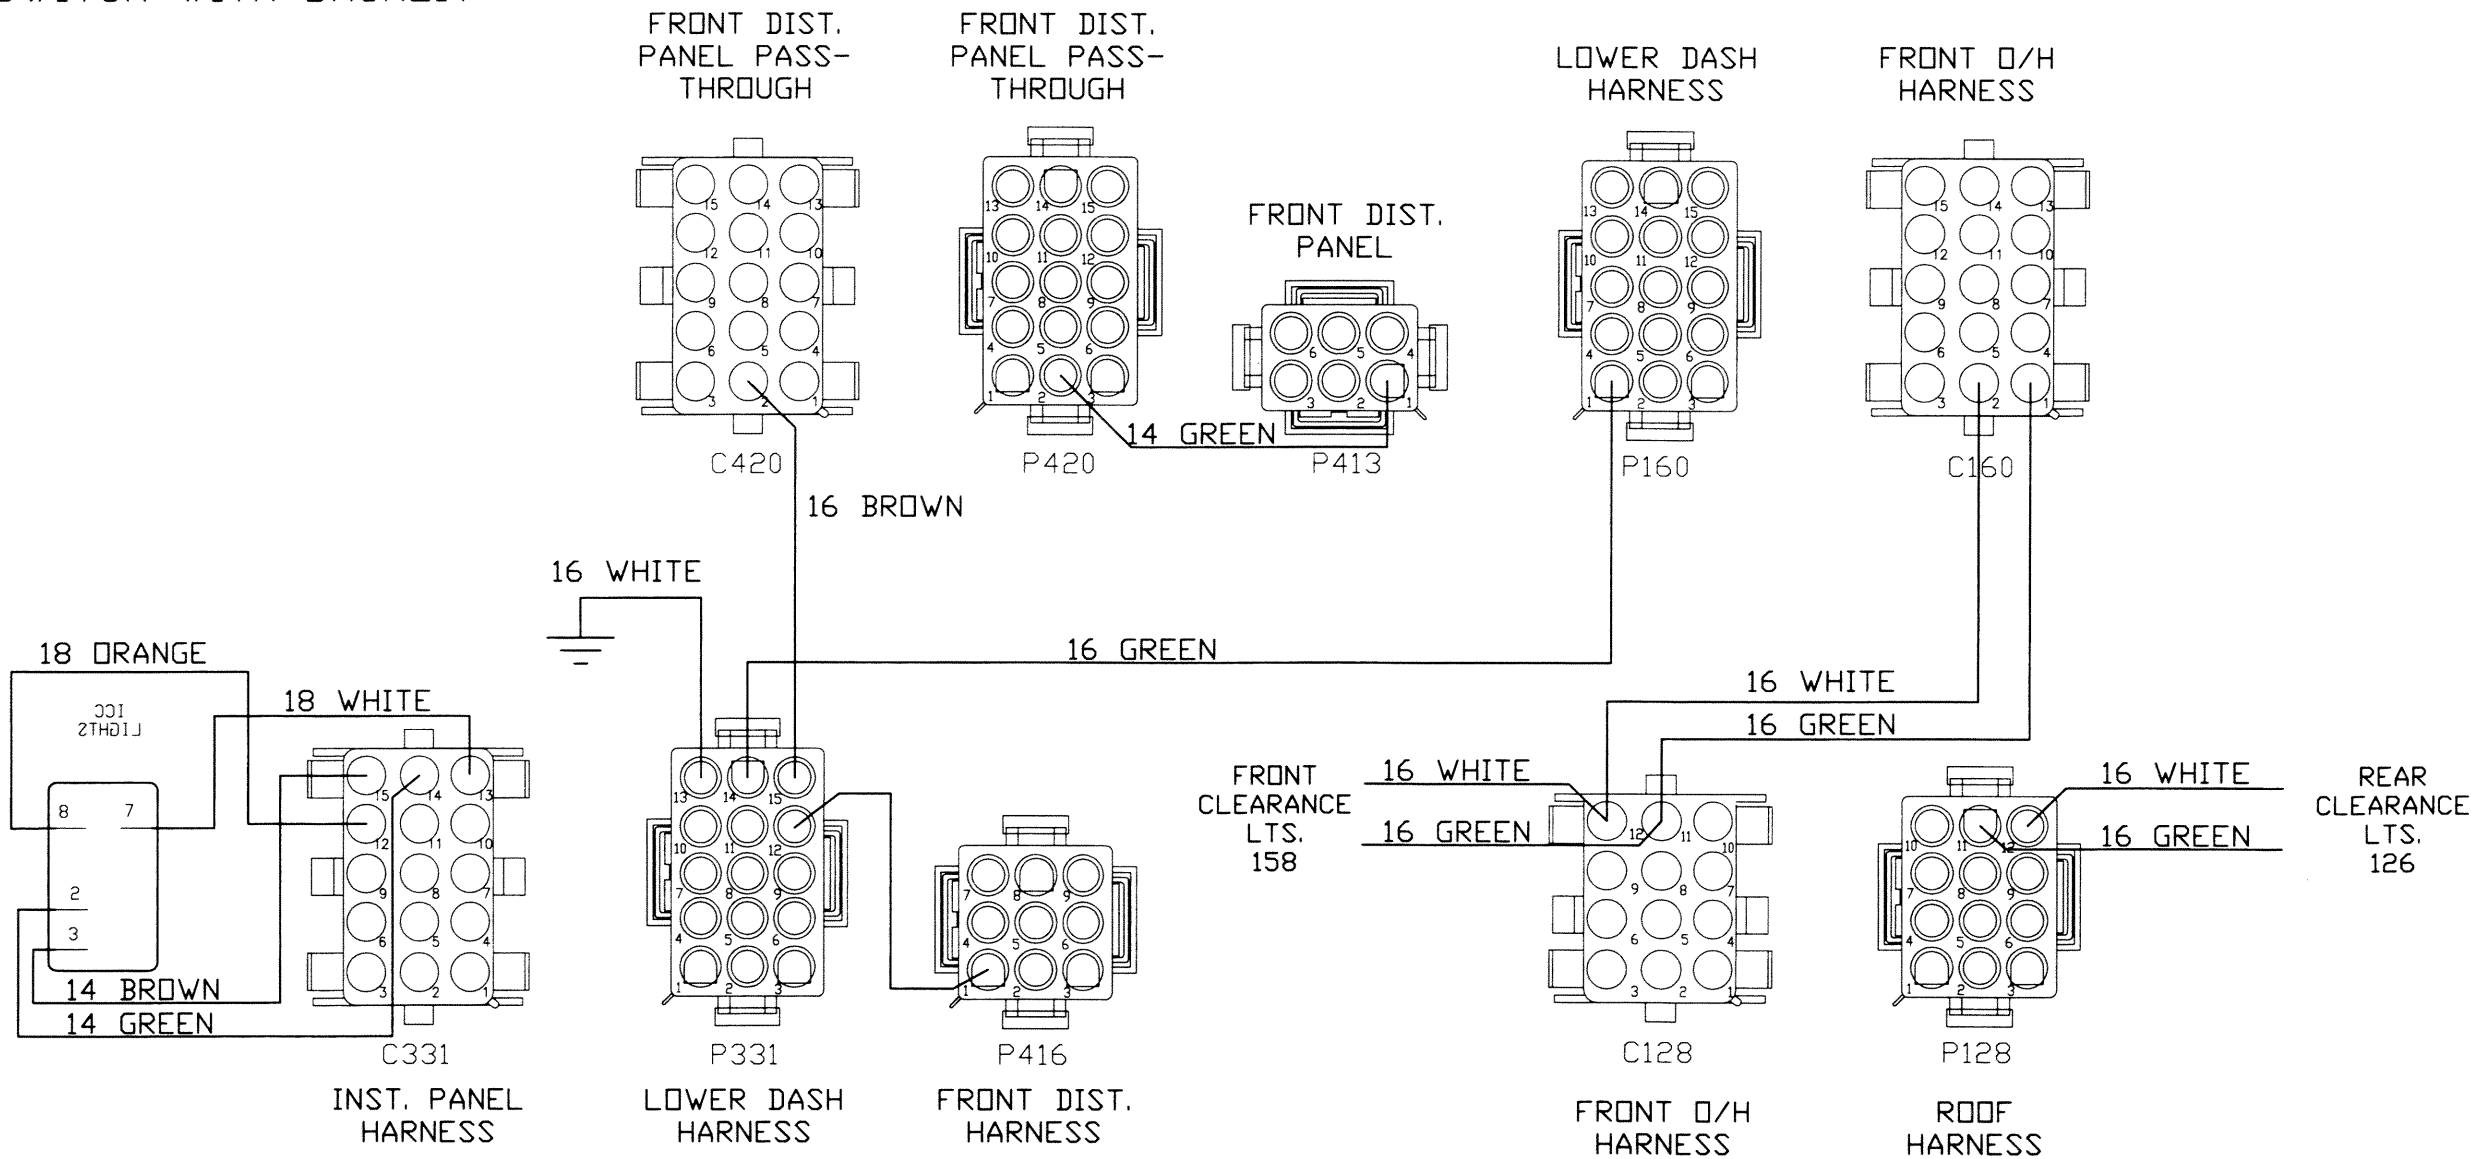


USAGE: DIPLOMAT, ENDEAVOR, CAYMAN, NEPTUNE,  
KNIGHT, AMBASSADOR, CHEETAH, SCEPTER,  
CAMELOT, WINDSOR, AND IMPERIAL.

N:\30-49\38\04\38041032.dwg, 10/1/2003 2:09:43 PM

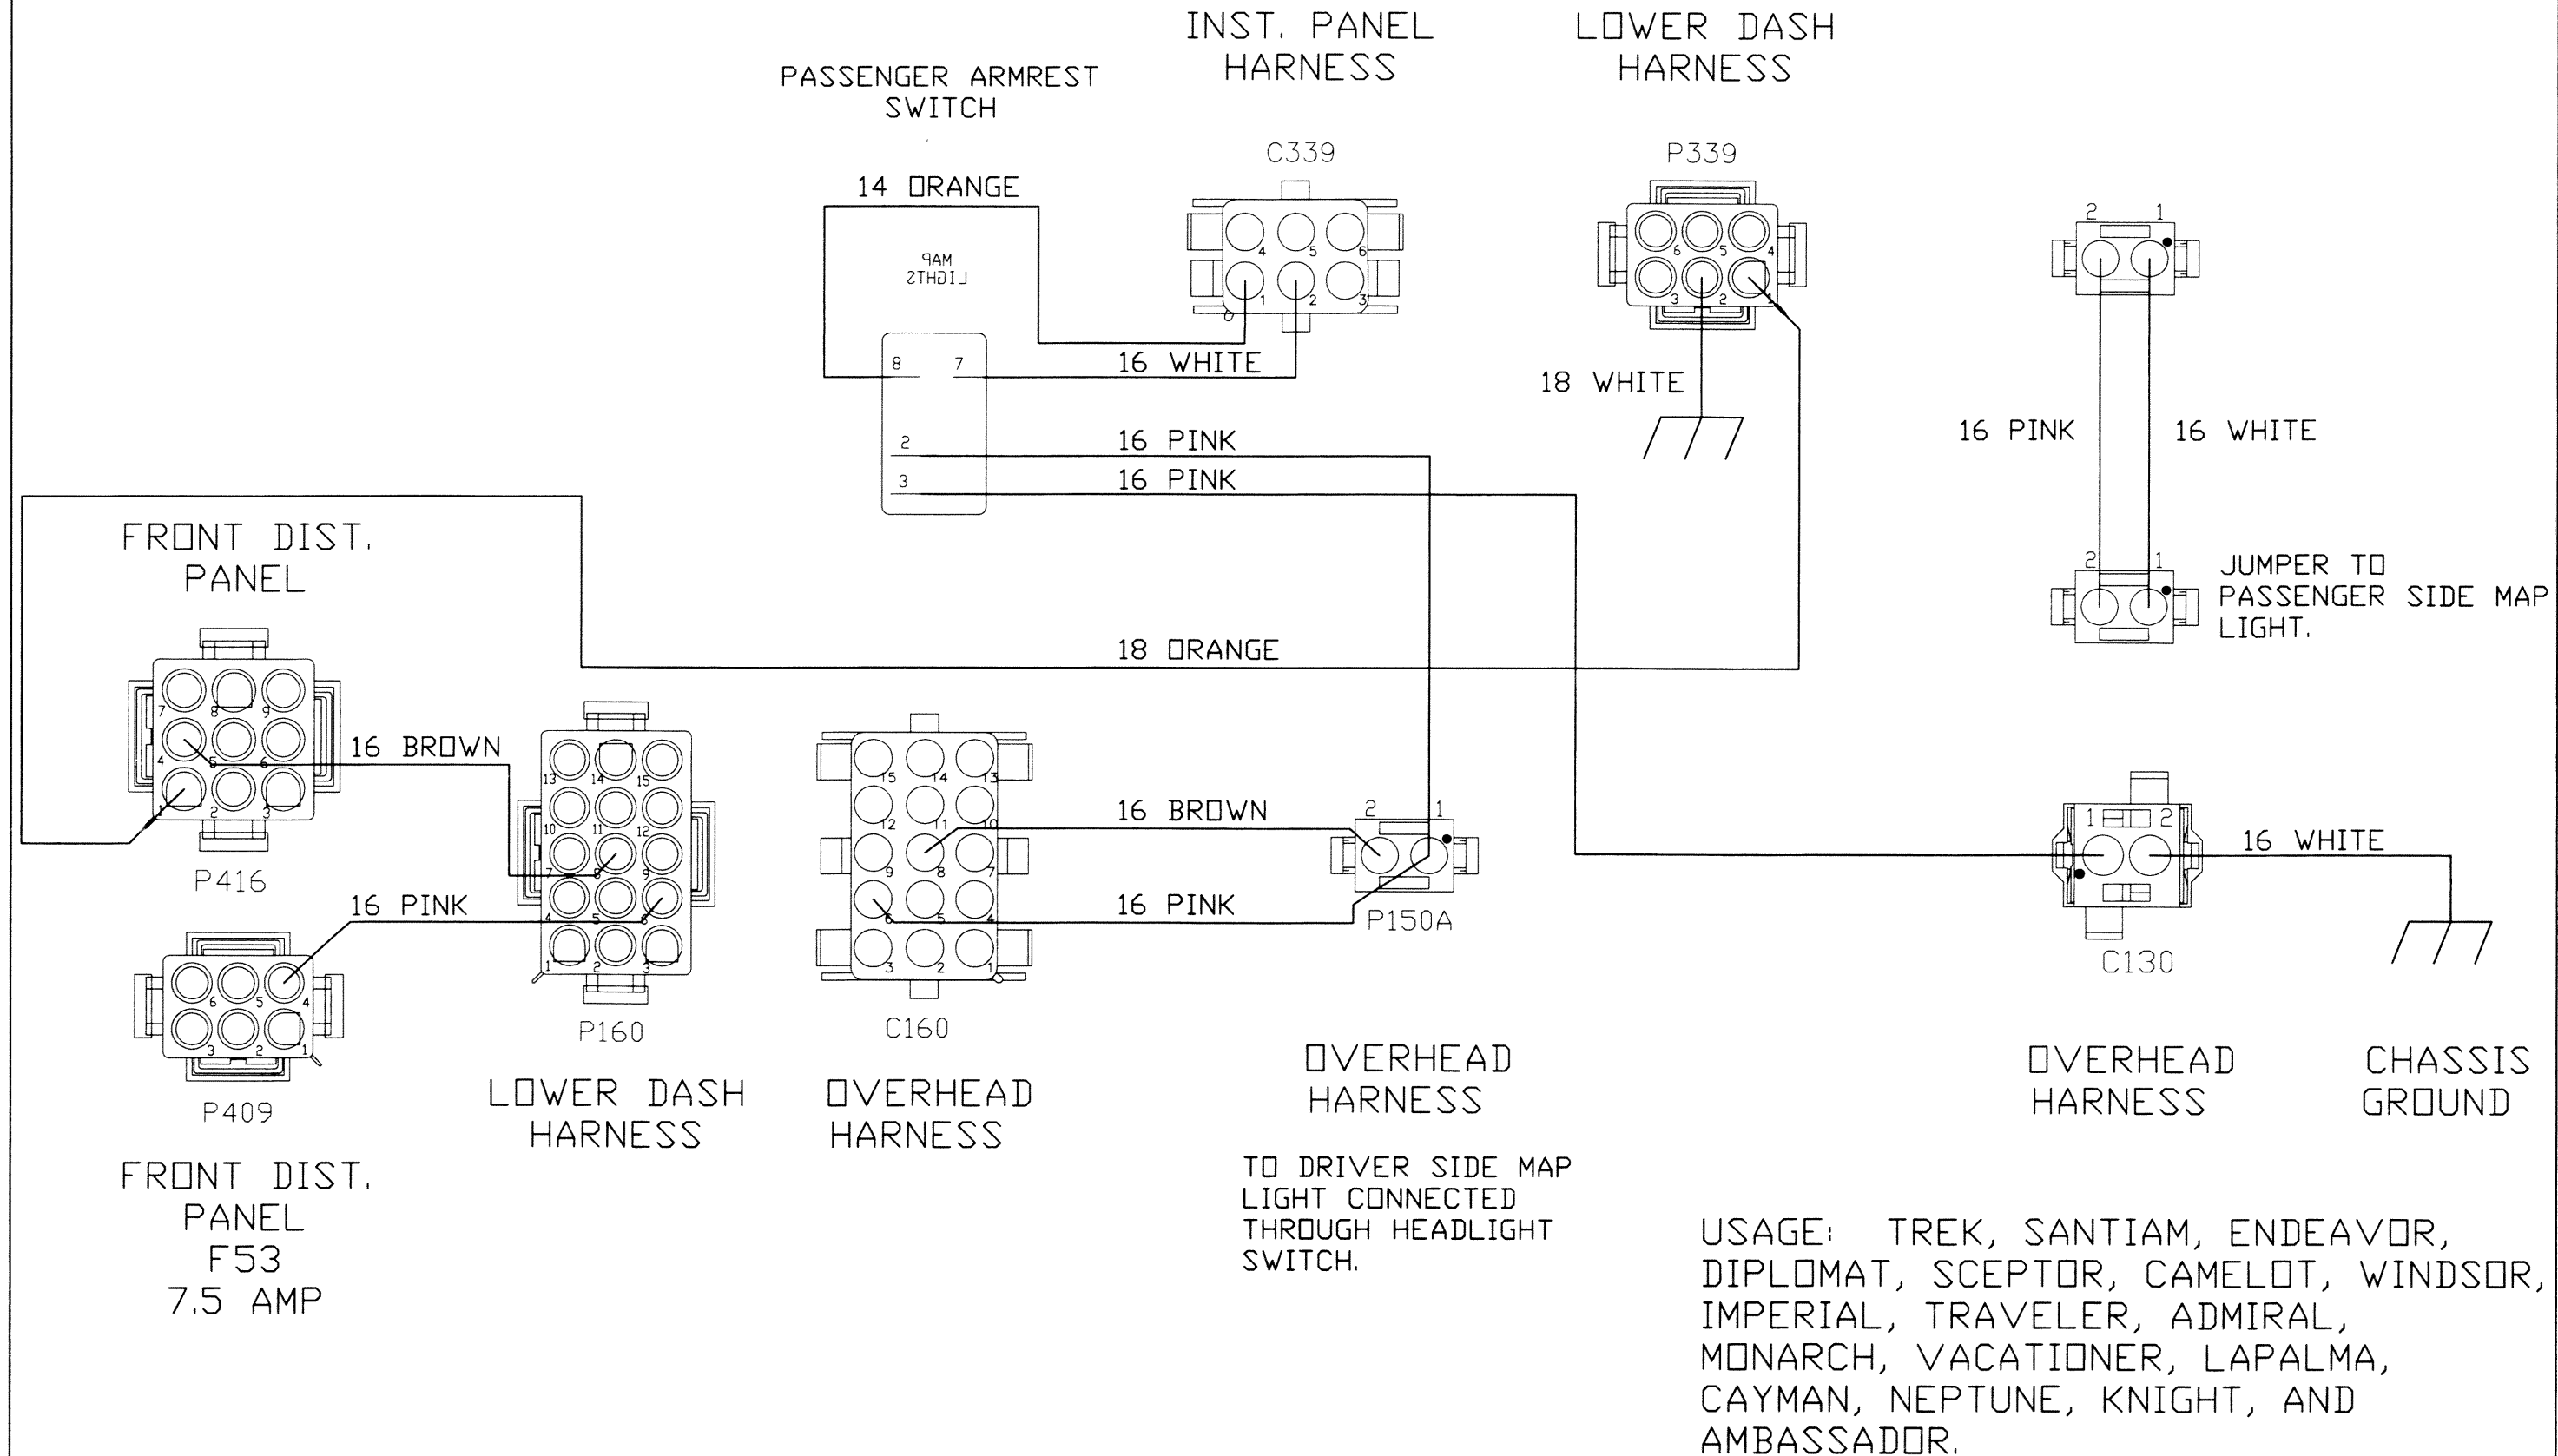

REV.	UNIT	DESCRIPTION OF CHANGE	BY	DATE
A		RELEASED FOR PRODUCTION.	WKS	06/18/03

N:\30-49\38\04\38041044.dwg, 10/1/2003 2:10:20 PM

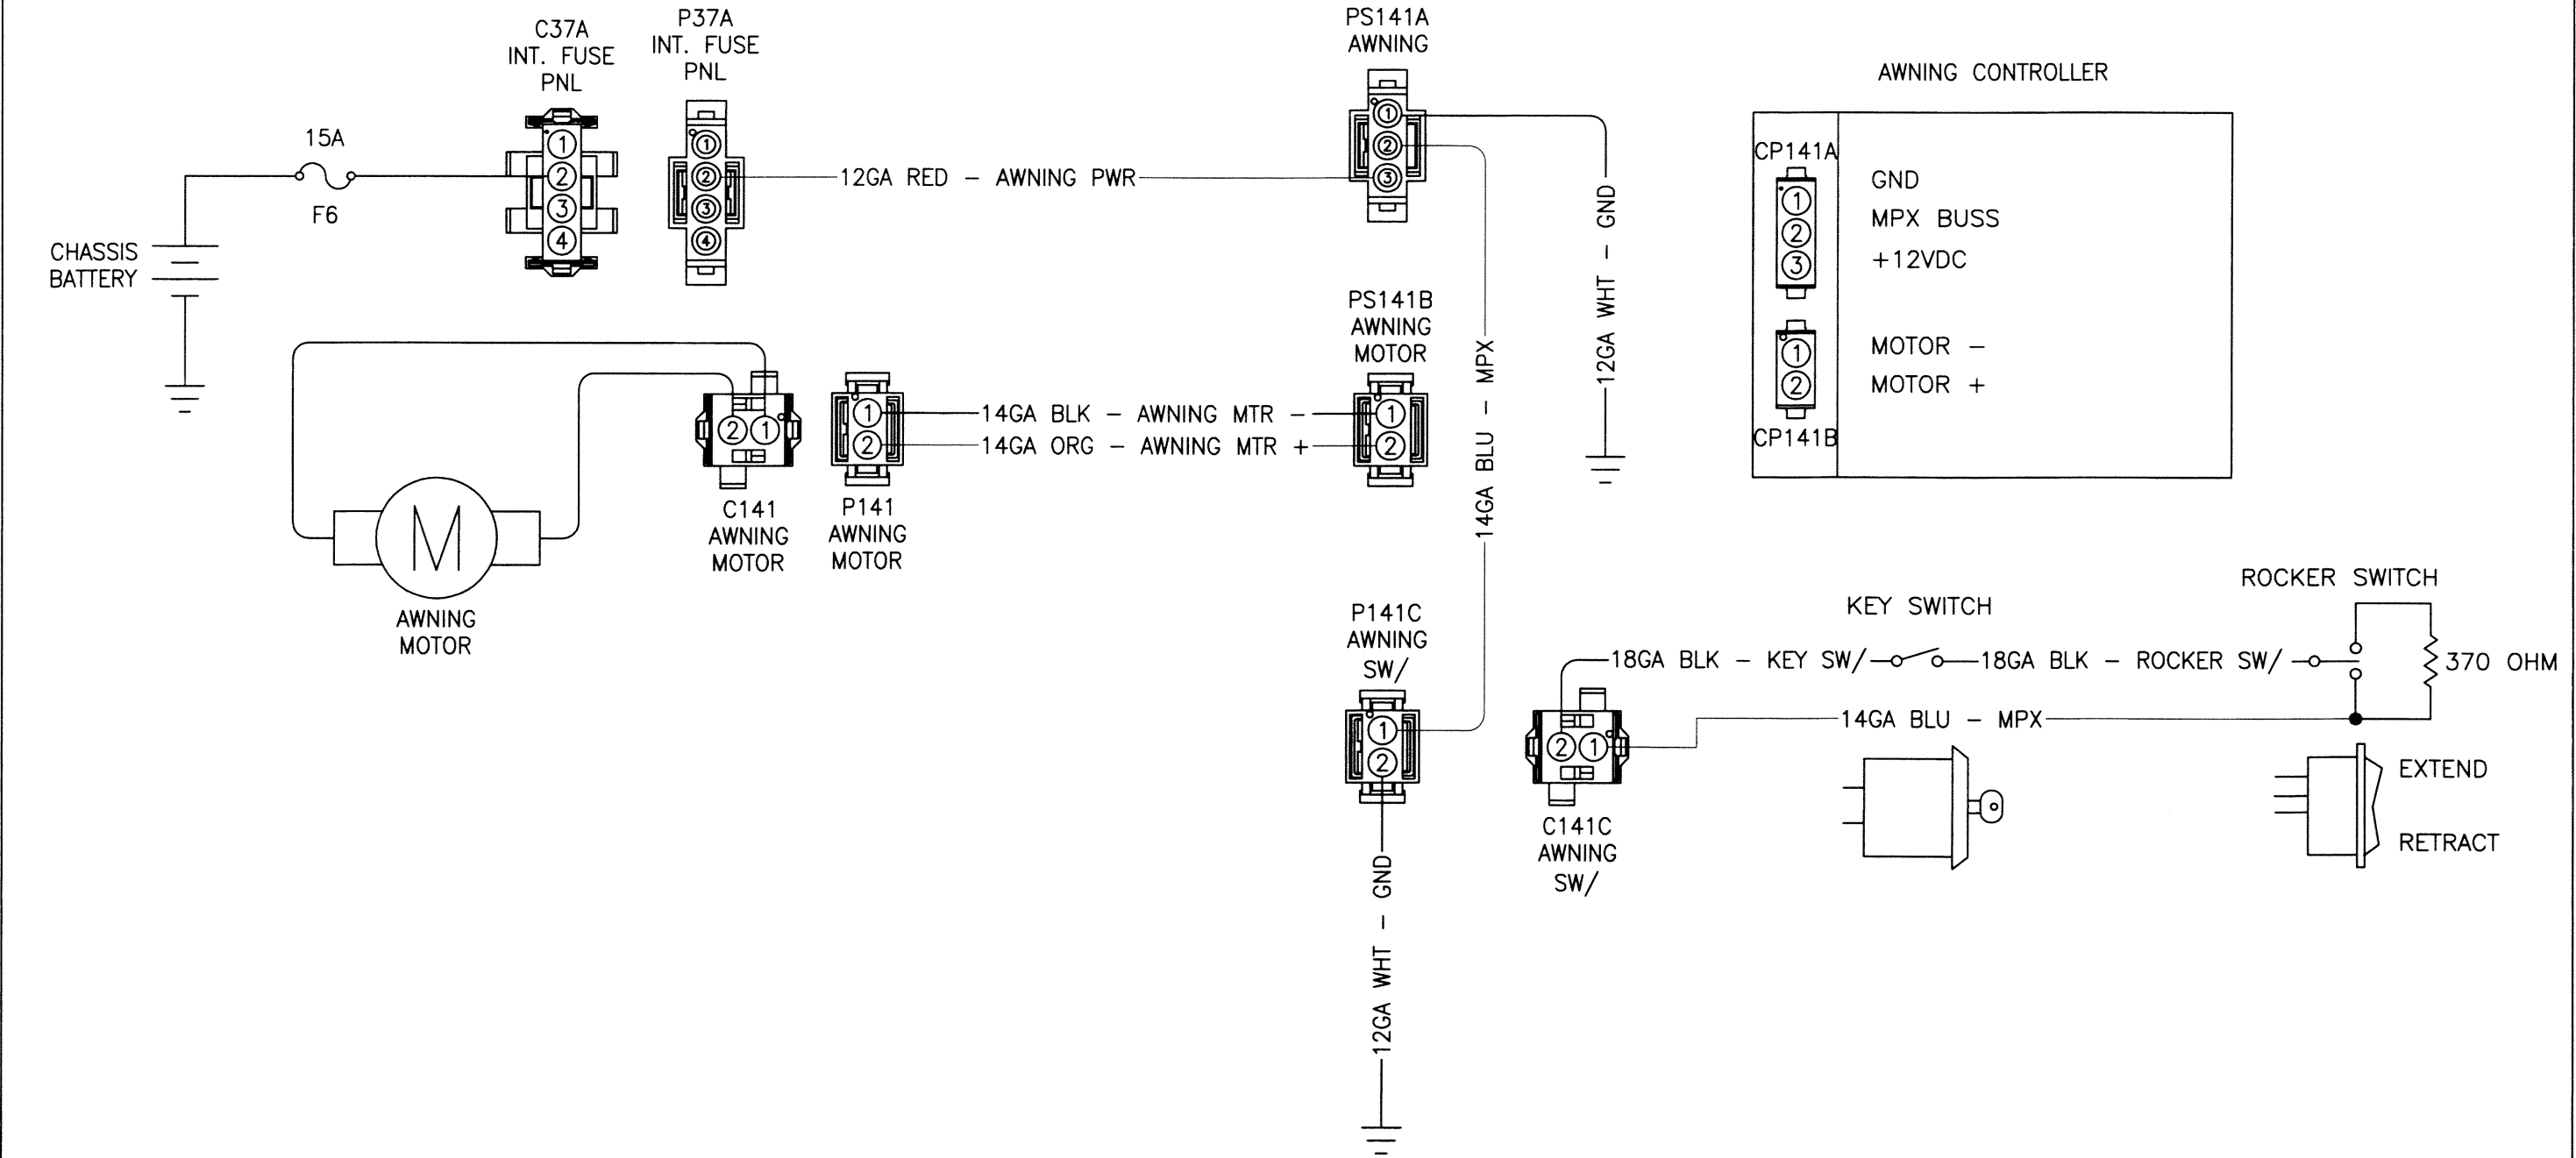


REV.	UNIT	DESCRIPTION OF CHANGE	BY	DATE
A		RELEASED TO PRODUCTION.	WKS	06/11/03
B		CHG F17 ( POWER MIR MTR FUSE) FROM 15A TO 2A..	WKS	07/15/03

NOTES:

1. SWITCH TO BE SPST (ON)/OFF WHT BACKLIT  
LEGEND WITH BLK LETTERING 8TERM.  
UNSEALED, WITH INDICATOR LIGHT.

LEGEND WITH BLK LETTERING 8TERM

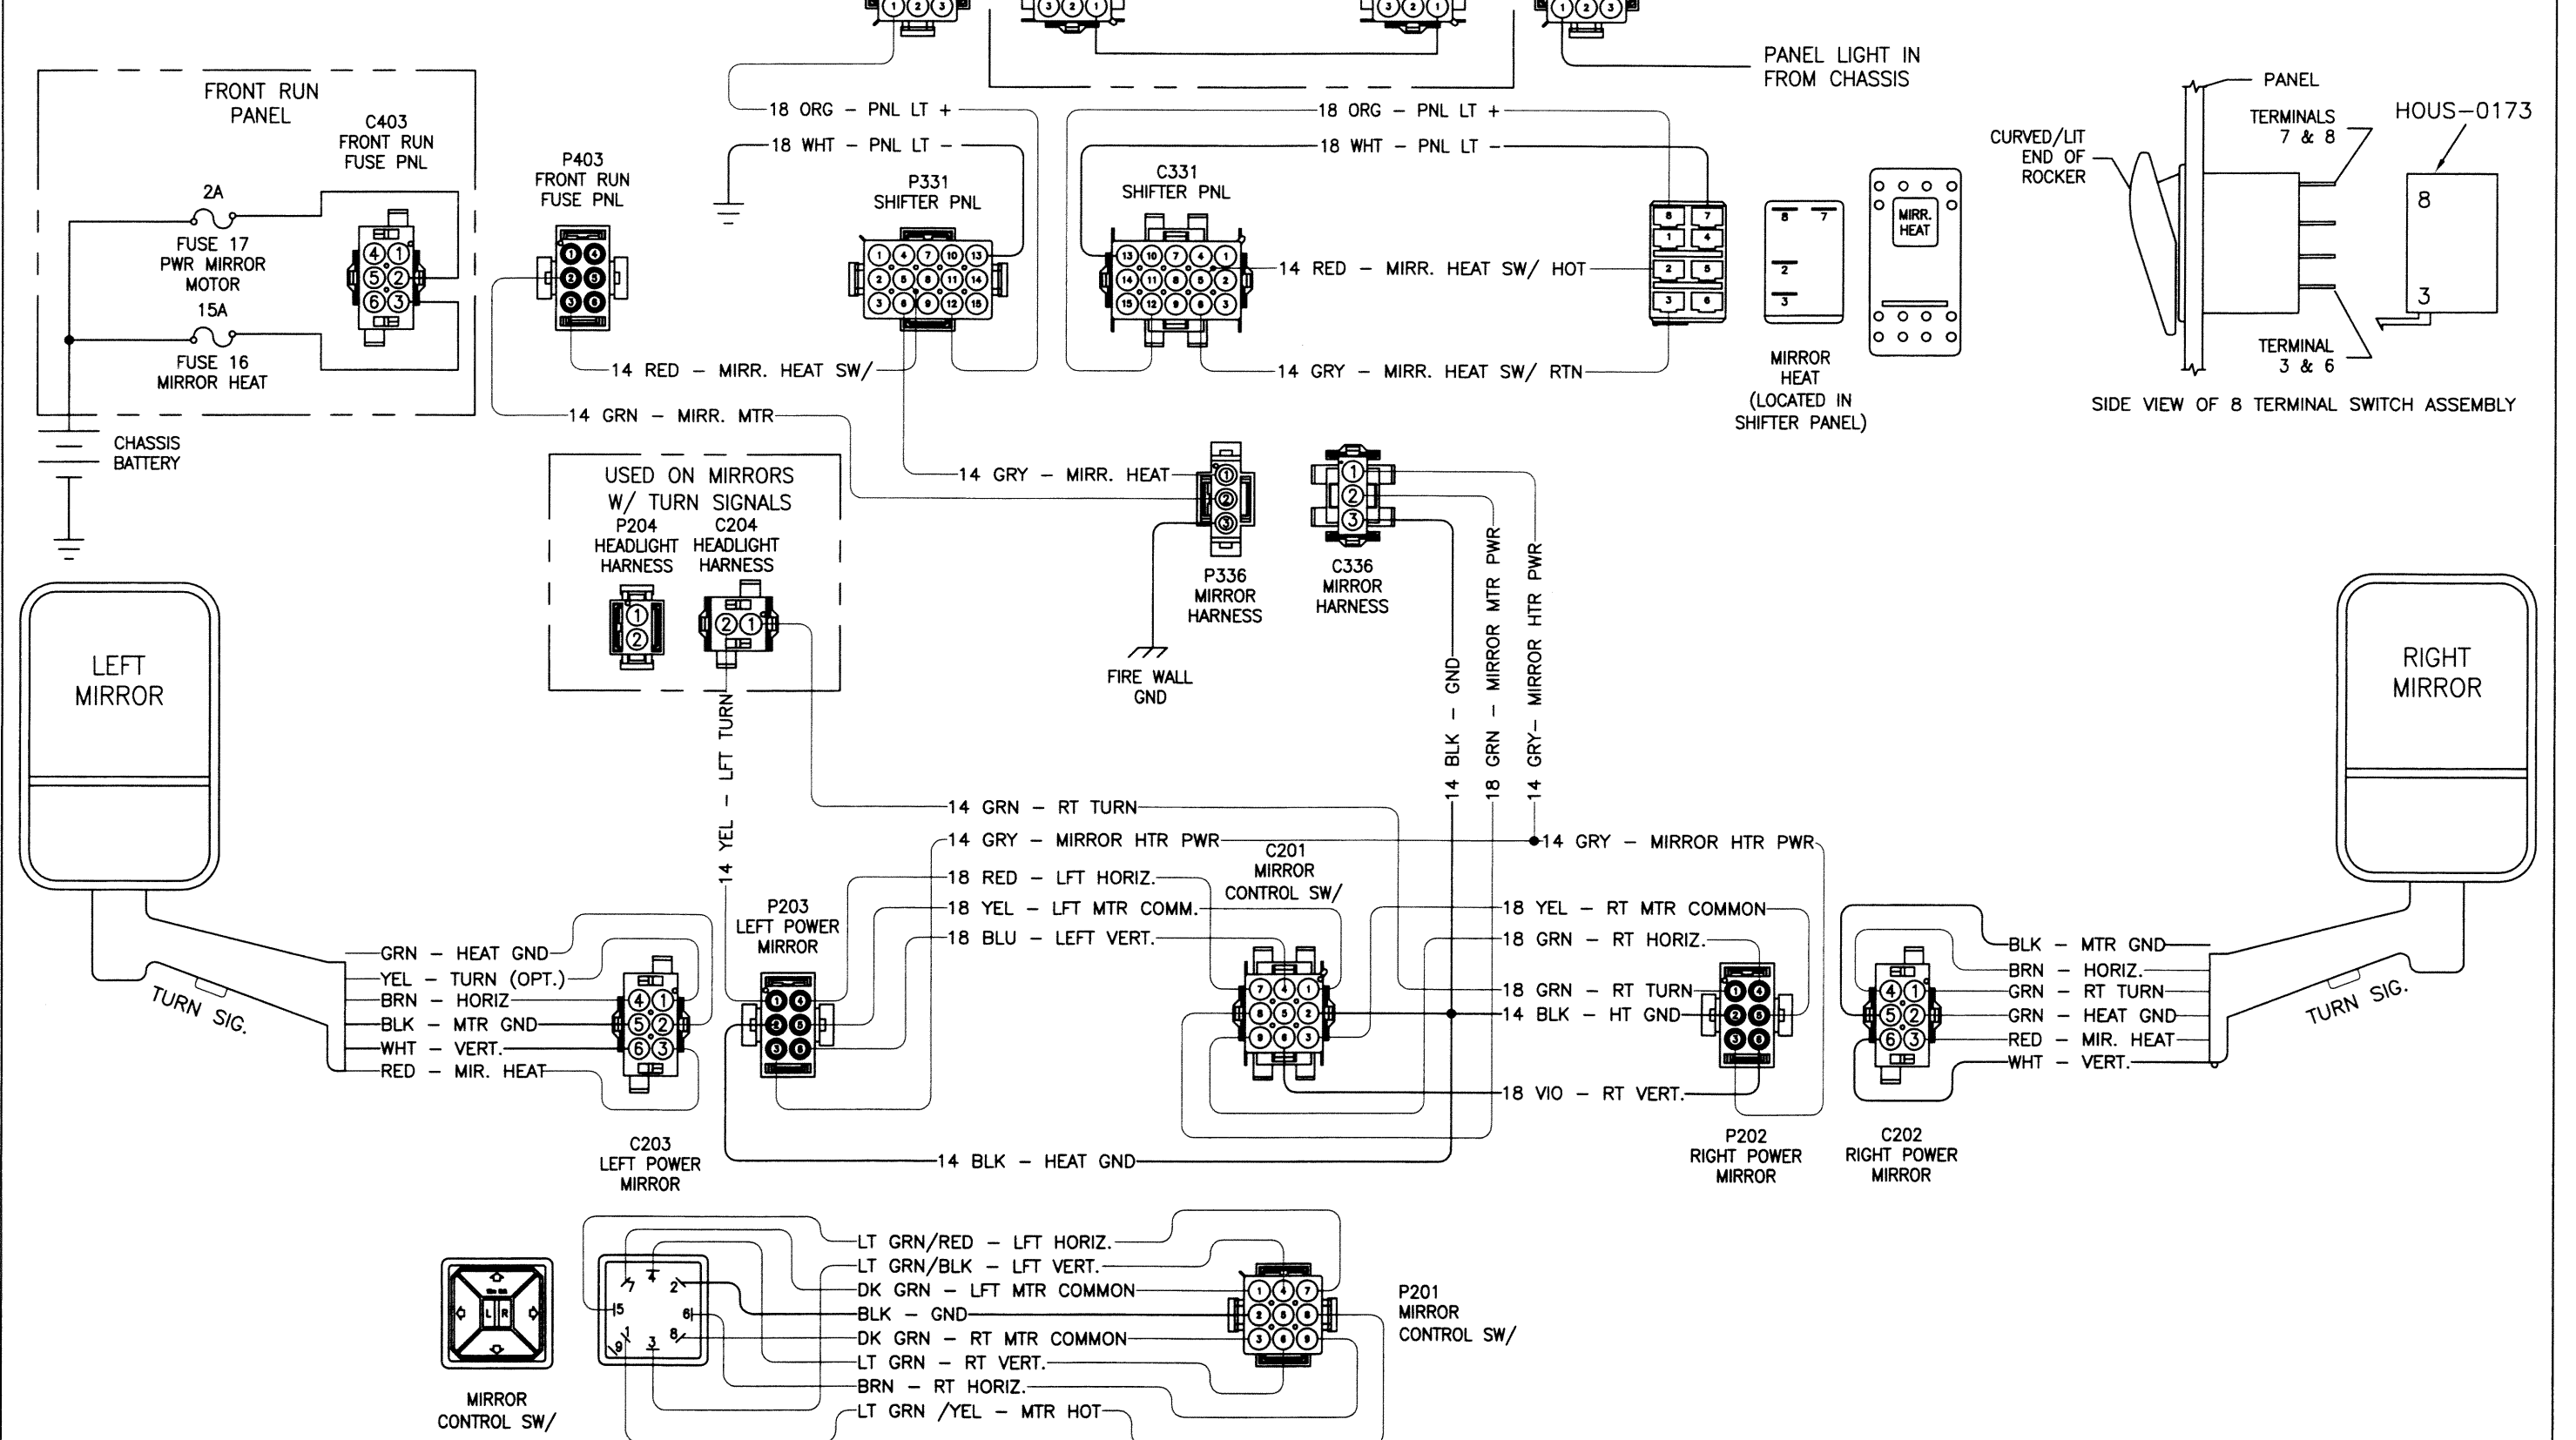

THE MONACO COACH CORP. AND ALL OF ITS SUBSIDIARIES CLAIMS PROPRIETARY RIGHTS IN THE MATERIAL HEREON. NEITHER THIS DRAWING NOR ANY REPRODUCTION THEREOF MAY BE USED TO MANUFACTURE ANYTHING WITHOUT PERMISSION IN WRITING FROM MONACO COACH CORP. OR ANY OF ITS SUBSIDIARIES TO THE USER SPECIFICALLY REFERRING TO HIS DRAWING.

DRAWN BY:	WKS
DATE:	06/11/03


CHECKED BY:	
-------------	--

UNLESS SPECIFIED  
DIMENSIONS ARE IN INCHES  
.XX .06 .XXX .030  
ANGLES (PLUS OR MINUS) 0 ~30'

MONACO COACH CORP  
HOLIDAY RAMBLER  
DO NOT SCALE DRAWING

TITLE: DIAGRAM, POWER MIRROR WIRING	
SERIES: ALL MOTORIZED	DWG.#


SHEET	<u>1</u>	OF	<u>1</u>
38040992		REV:	B

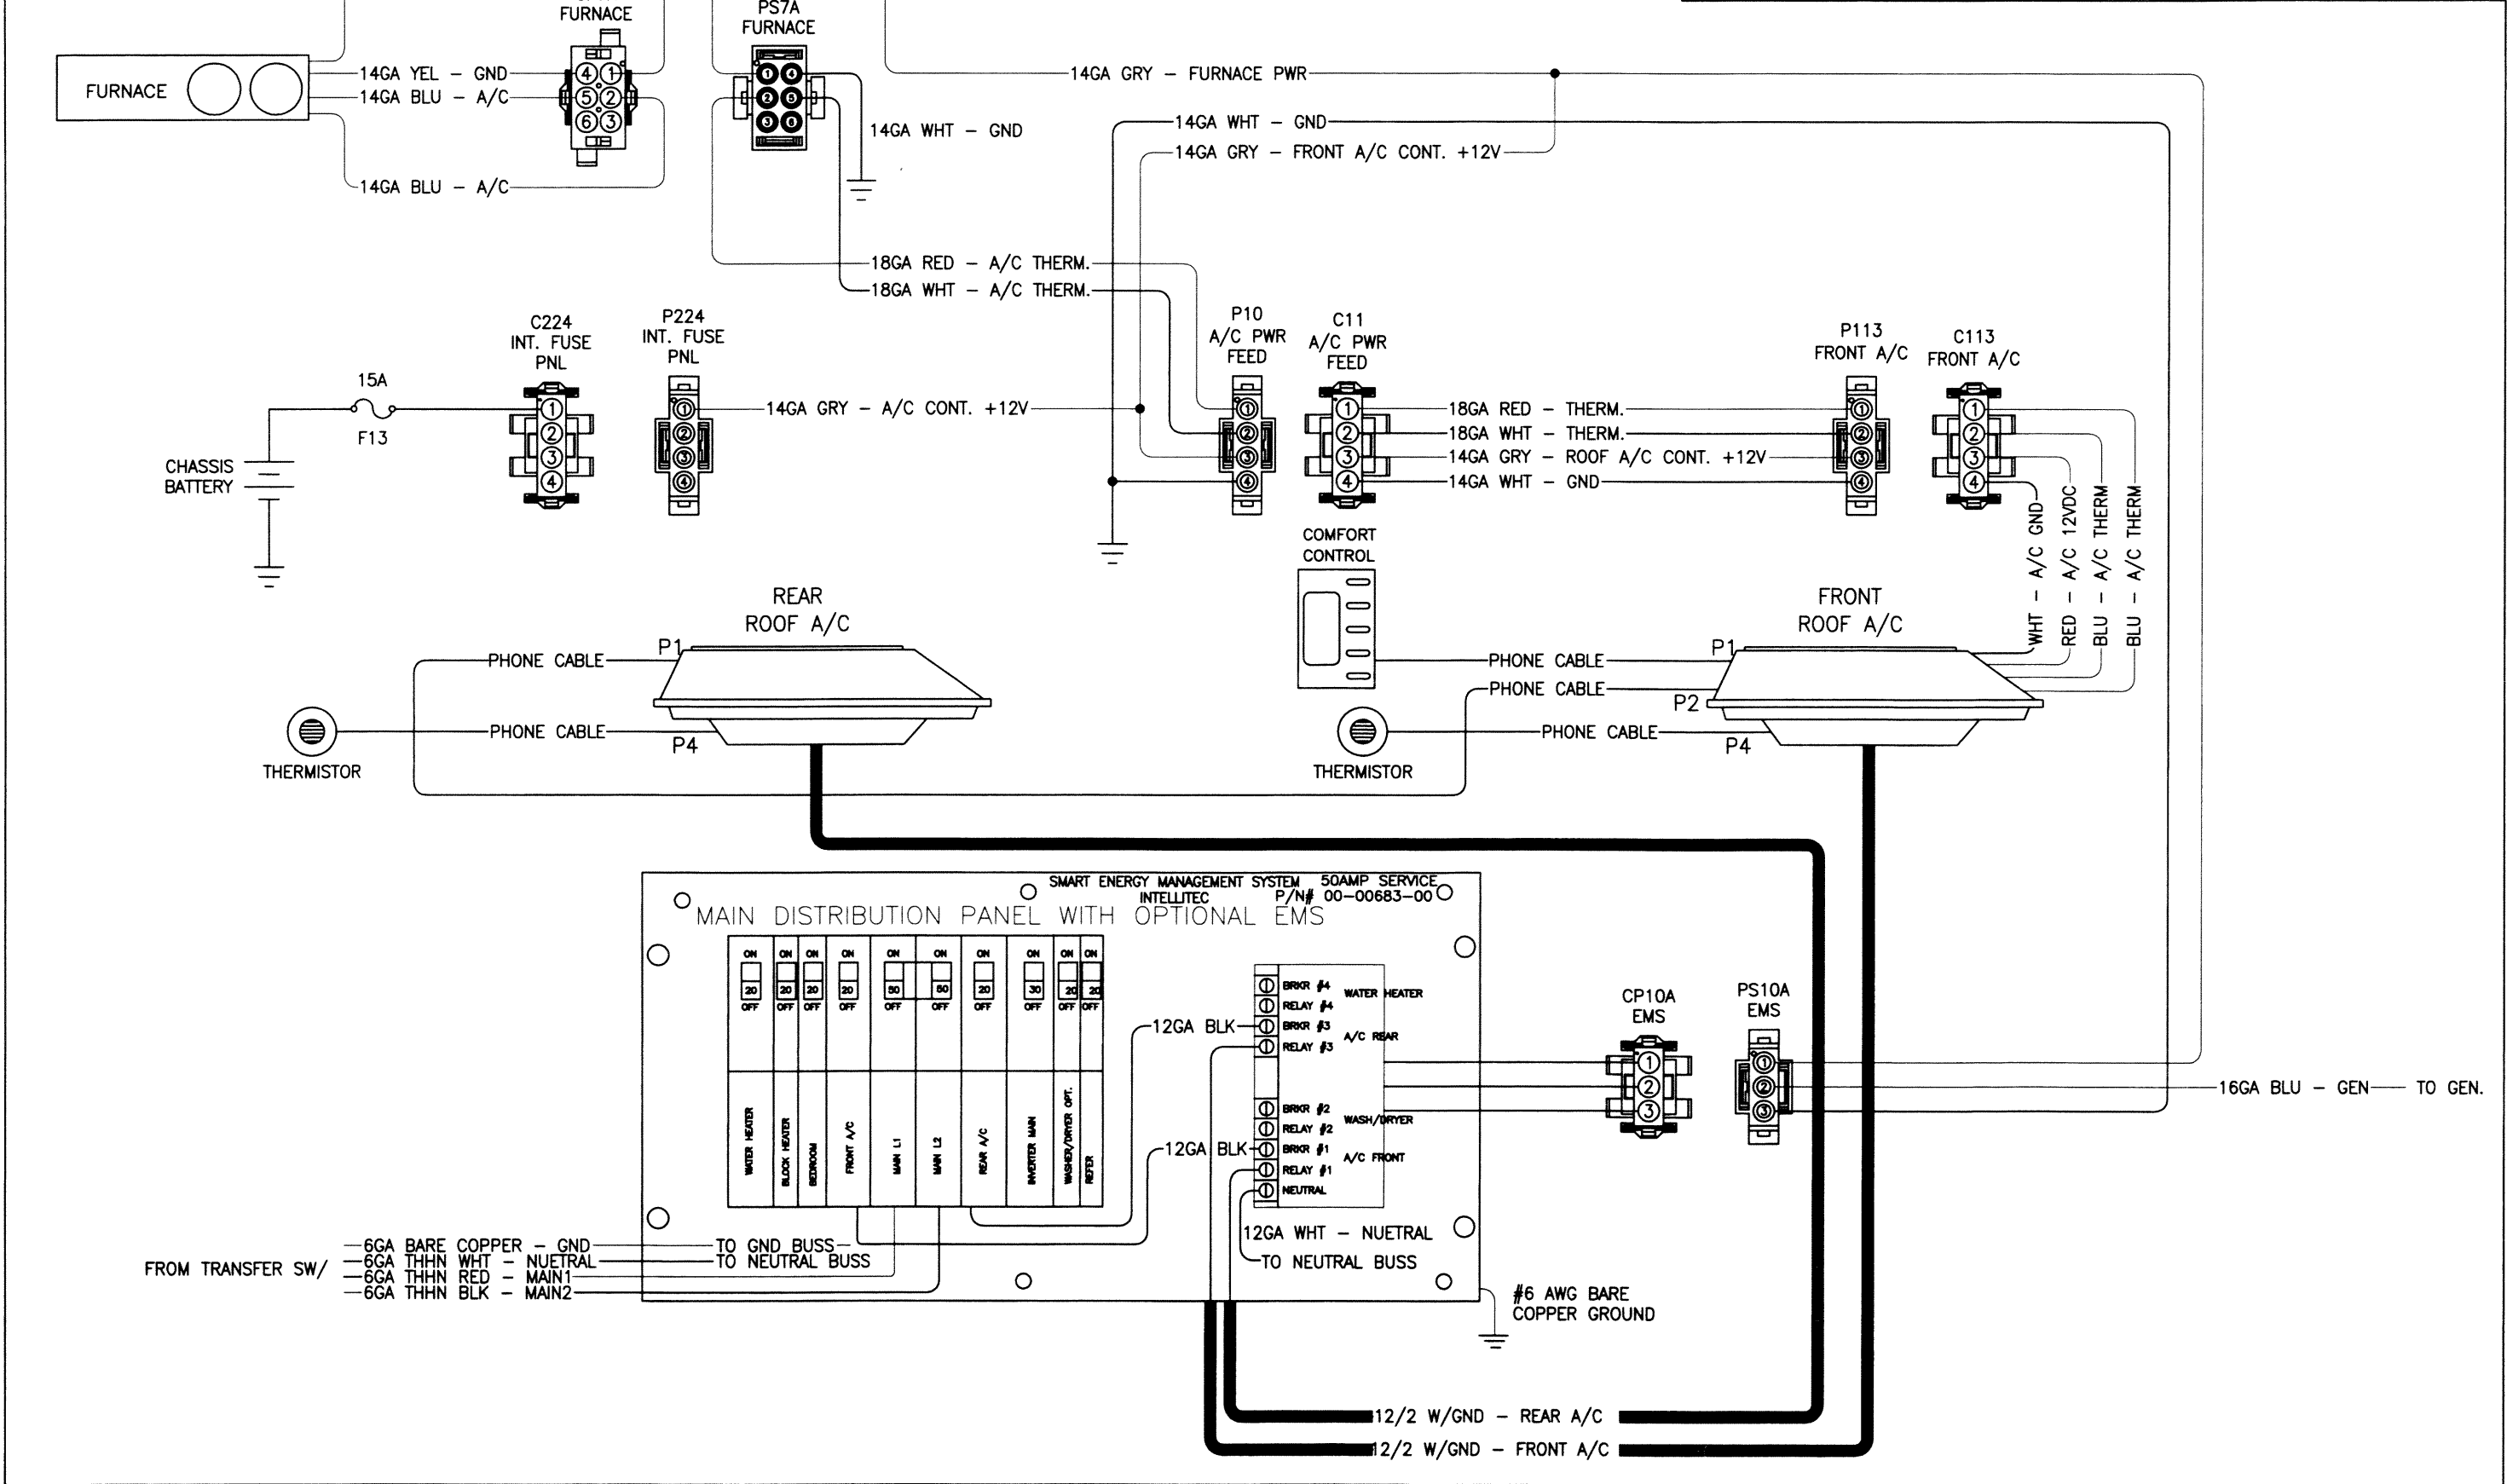



SWITCH IS TO BE SPDT,  
(ON)-OFF-(ON) WITH FUNCTION-ON  
INDICATOR AND LOCKING FUNCTION.

T-POST IN FRONT  
DIST. PANEL  
COMPARTMENT

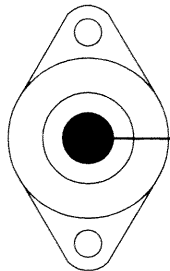


B+ FROM  
INST. PNL.  
18 ORANGE

HOUSE  
SWITCHED 12V  
FRONT DIST.  
PANEL


HOUSE NON-  
SWITCHED 12V  
FRONT DIST.  
PANEL

BATTERY  
CUT OFF

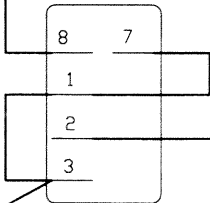

6 RED

2 RED

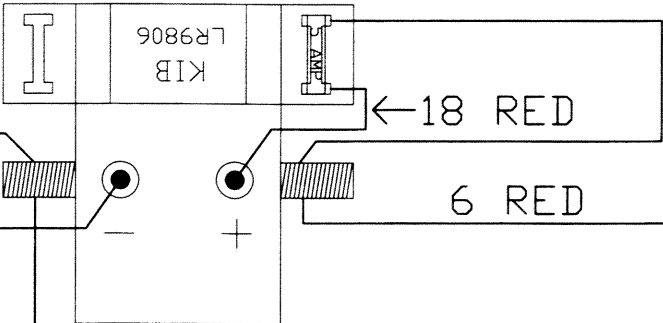


18 TINNED  
BARE COPPER

18 VIOLET

6 RED

 18 WHITE





4 RED

50 AMP  
BREAKER


TO REAR INT.  
FUSE PANEL

USAGE: ADMIRAL, MONARCH, TRAVELER, VACATIONER,  
LAPALMA, CAYMAN, NEPTUNE, KNIGHT, AMBASSADOR, TREK,  
CHEETAH, SAHARA, SANTIAM, ENDEAVOR, DIPLOMAT, SCEPTER,  
CAMELOT, WINDSOR, IMPERIAL, AND ZANZIBAR.

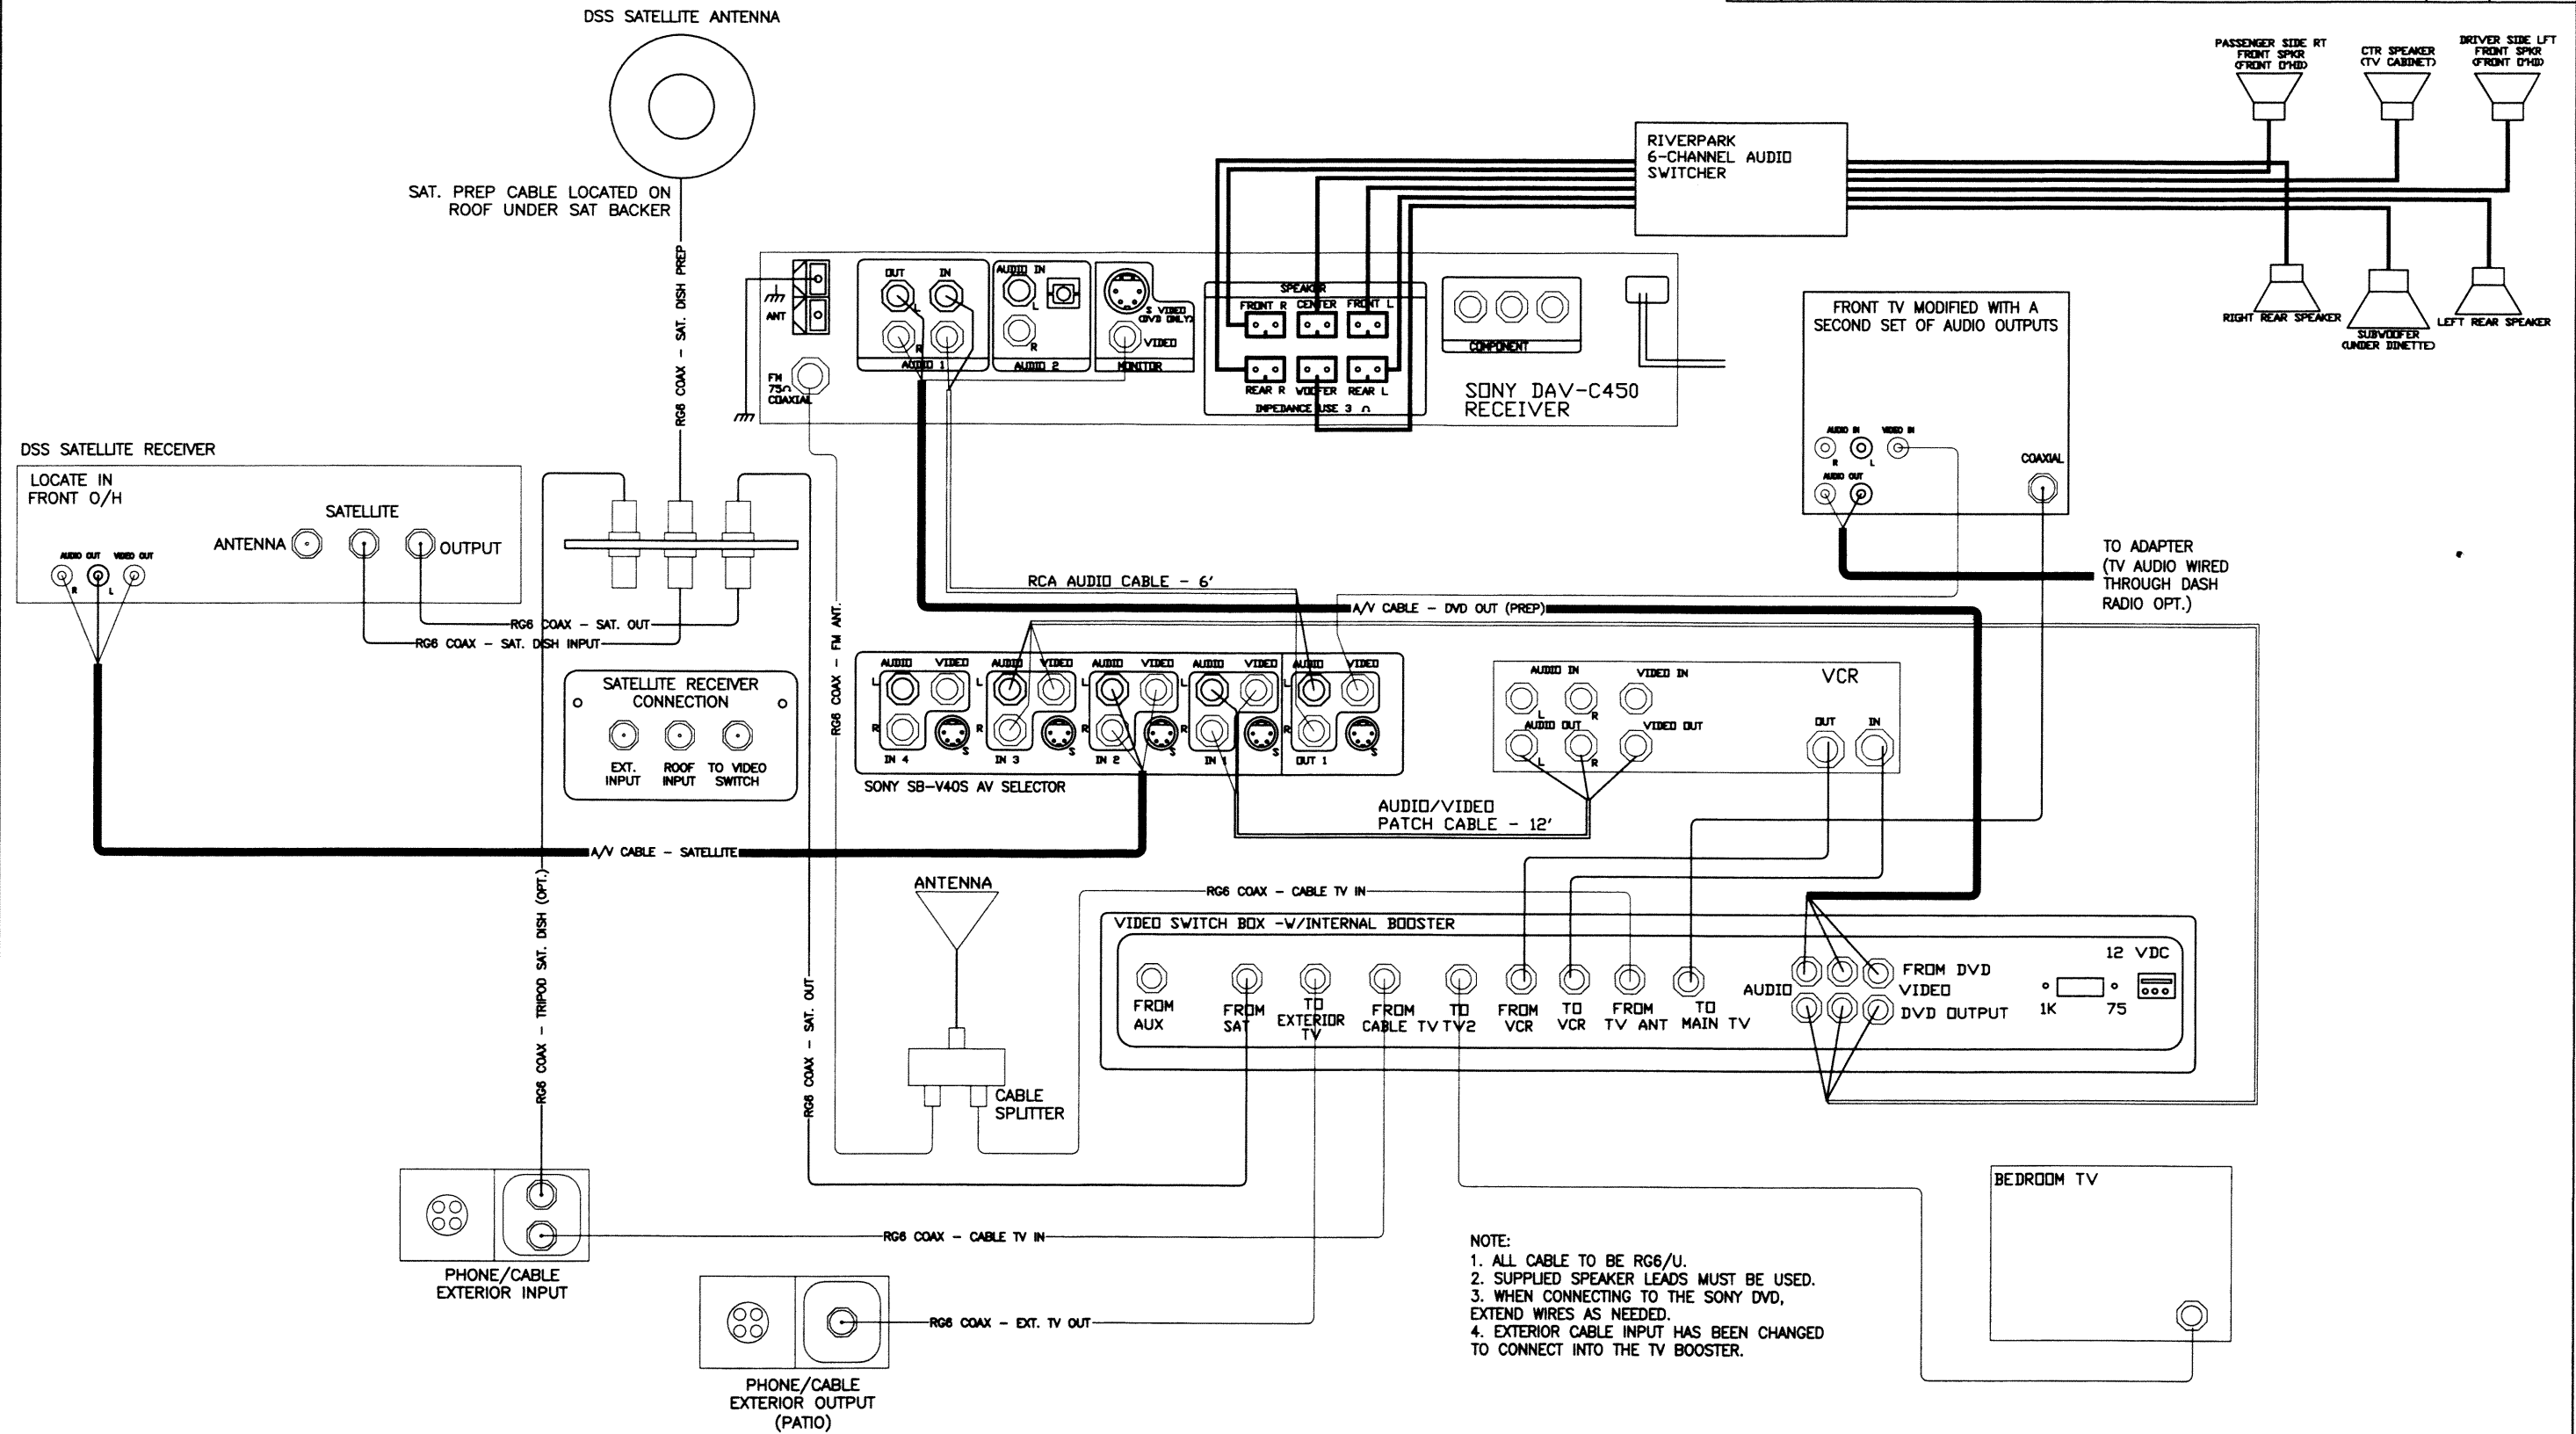

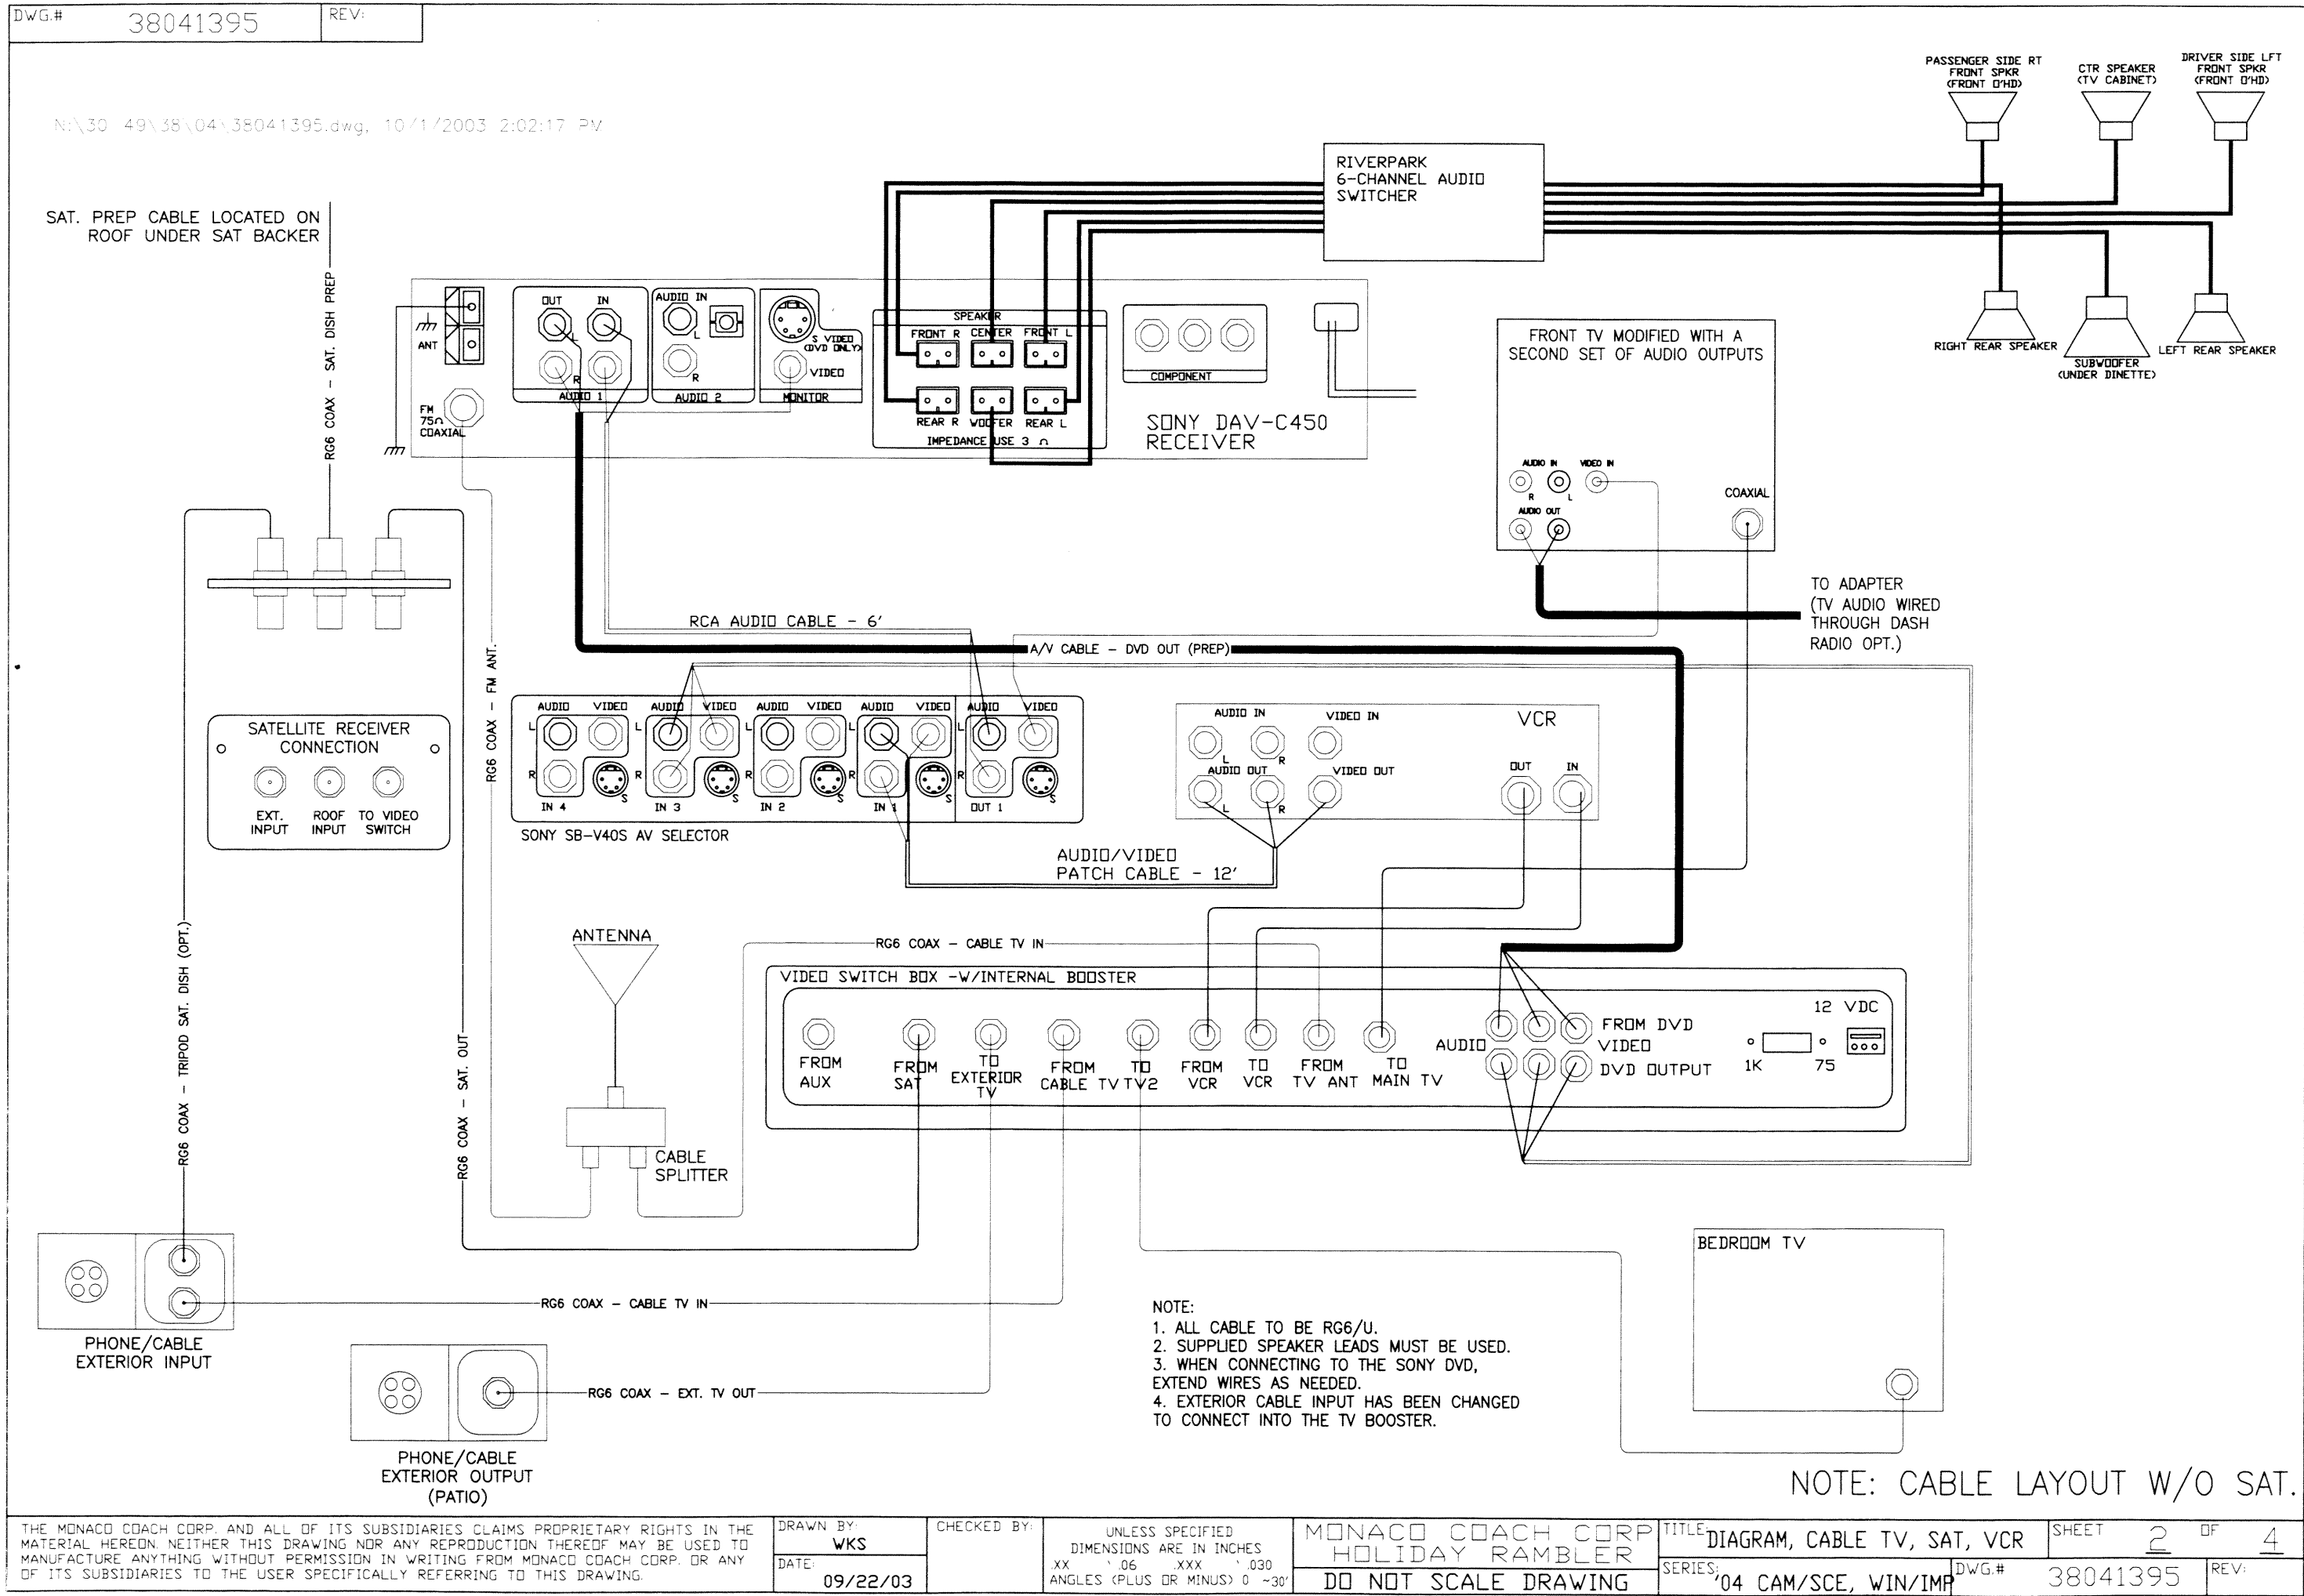

NOTES:  
1. SWITCH TO BE SPST (ON)/OFF WHT BACKLIT  
LEGEND WITH BLK LETTERING 8TERM.  
UNSEALED.

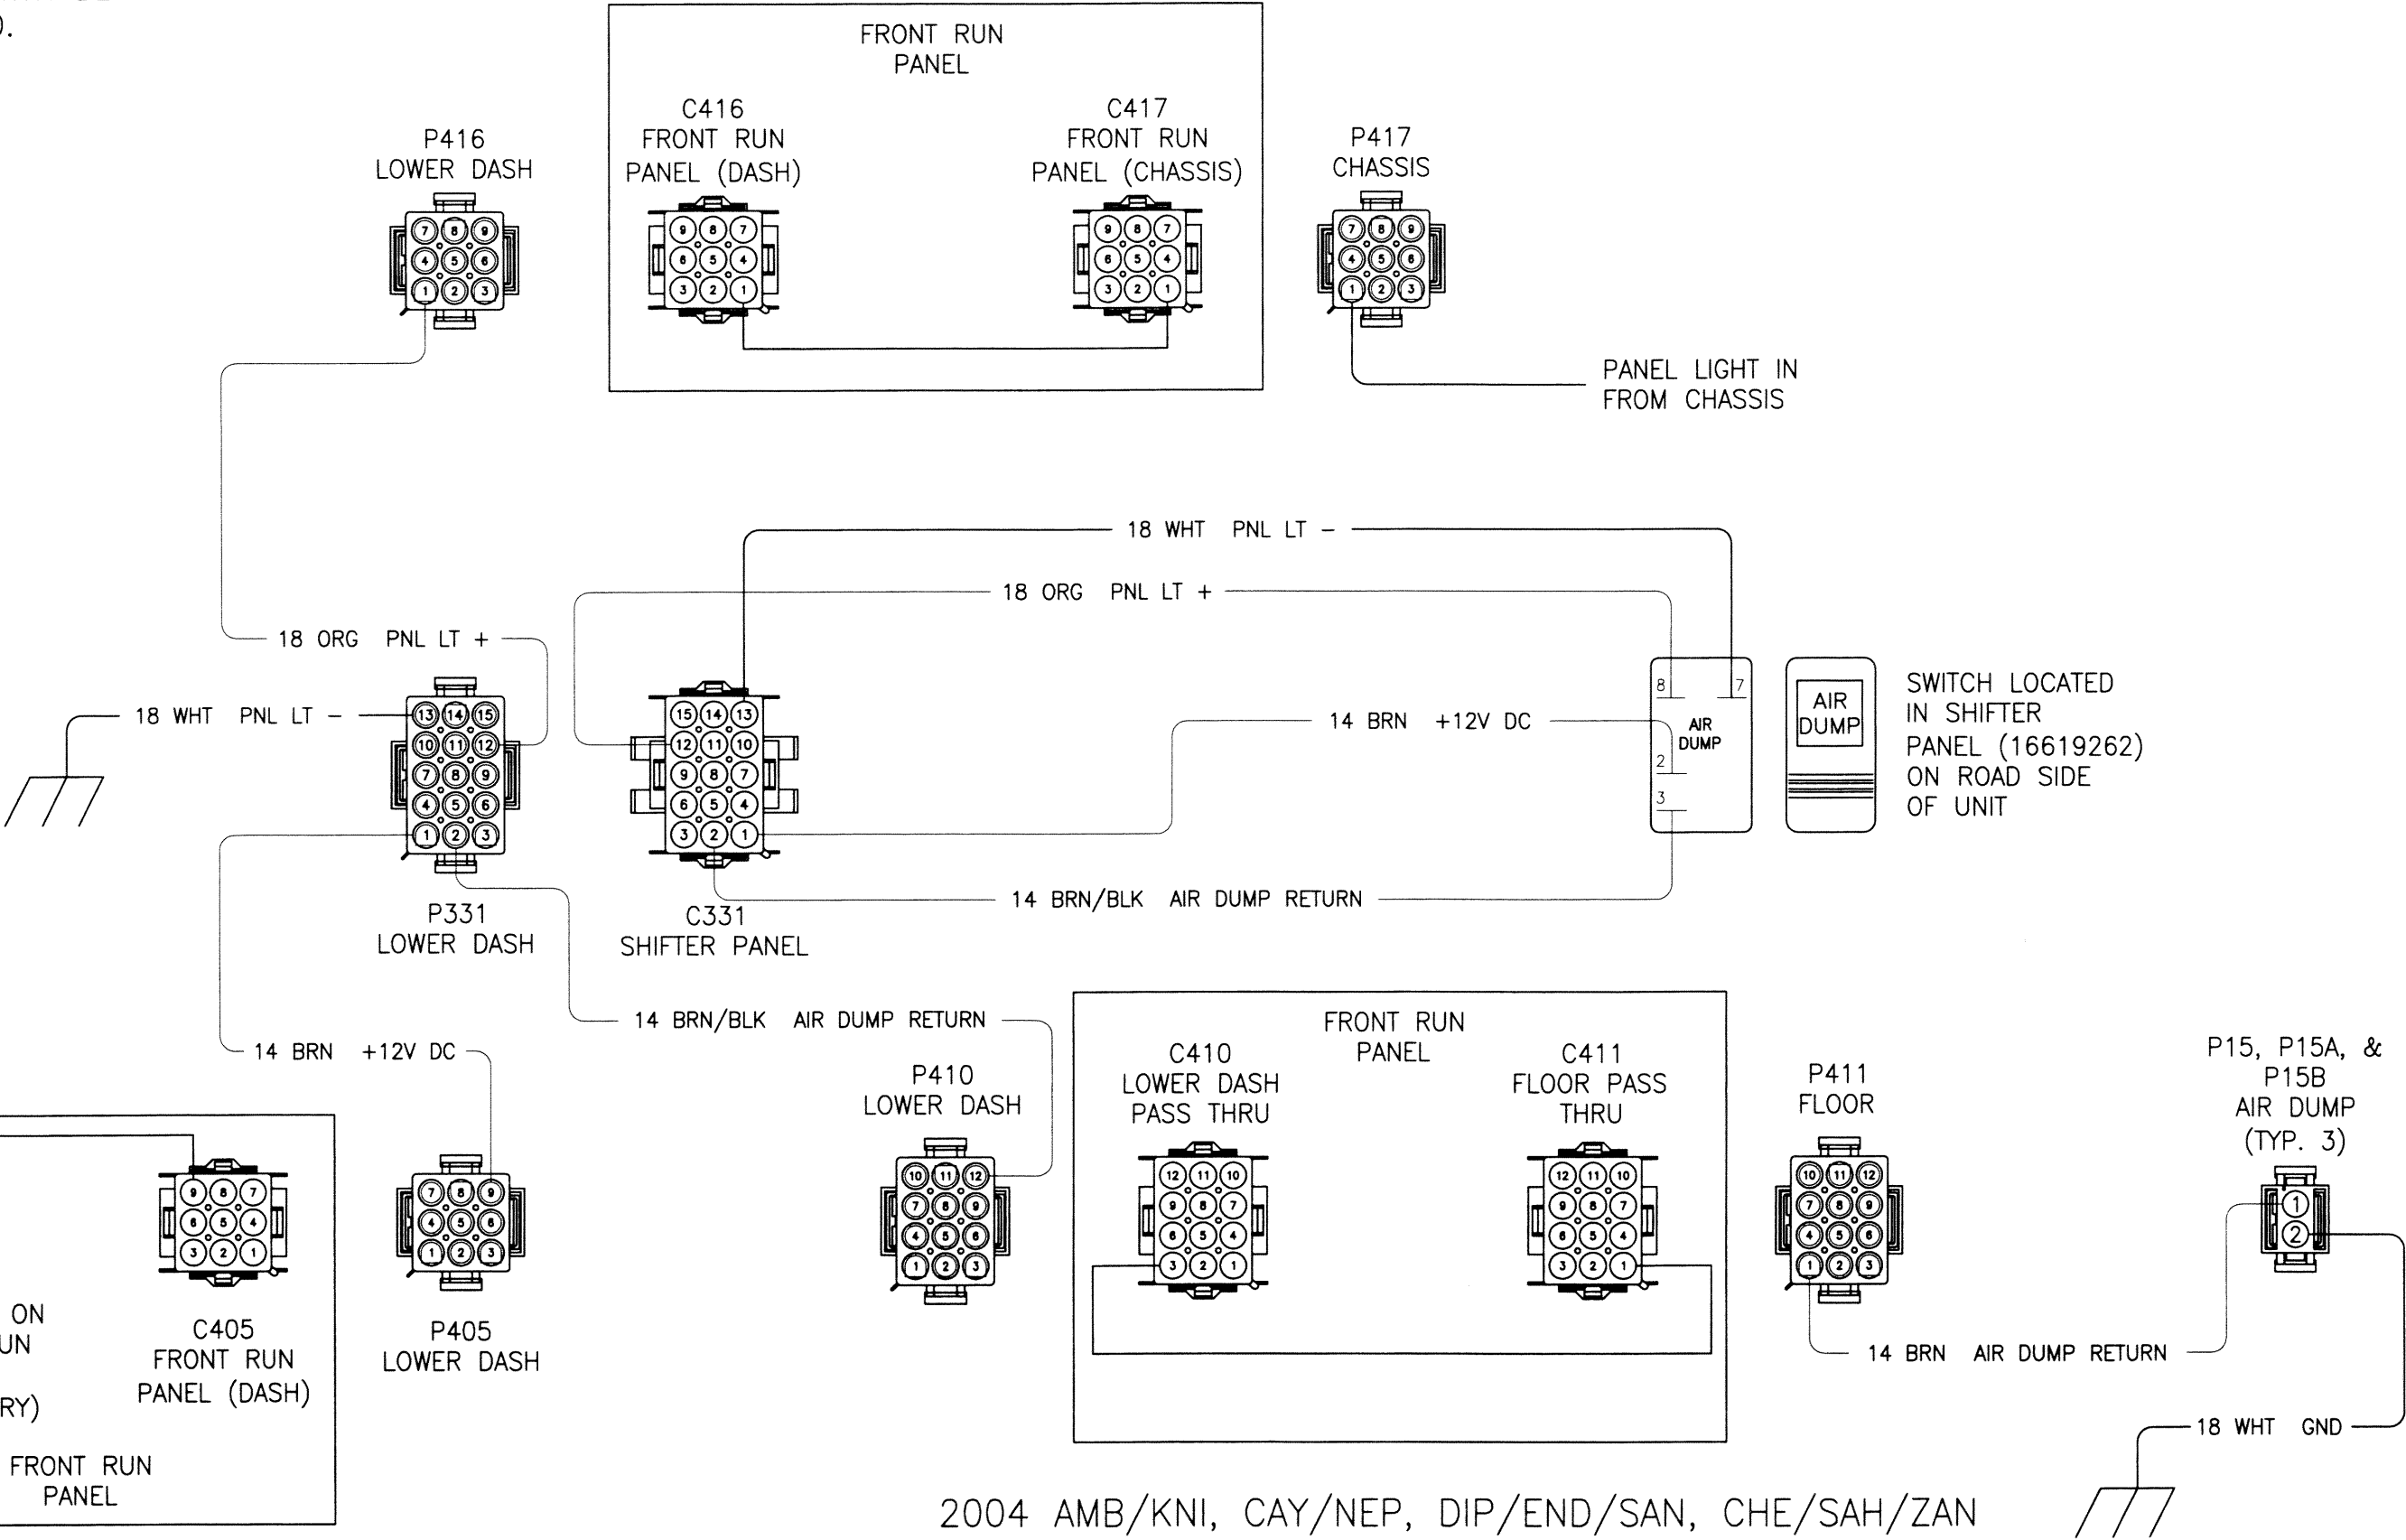

# TROUBLE SHOOTING TECHNIQUES

## 1, IDENTIFY PROBLEM(S) AND ASSOCIATED SYMPTOM(S)

A, Gather information directly from the source. 2nd-hand information can lead in the wrong direction.

B, Under what condition(s) do the failure(s) occur?

1, i.e. engine running, a/c on, microwave on, when connected to shore power with generator on, etc.?

## 2, LOOK FOR RELATED FAILURES

A, Are several components failing? Does a link exist between one or more of the failure modes.

Example: Cruise control does not work. First check PTO operation. No PTO operation with no cruise would lead to the engine ecm or an open circuit in the service brake signal to the engine ecm. However no cruise but PTO operation would indicate no speed signal to the ecm.

## 3, ISOLATE FAILURE

A, Identify the electrical path and choose convenient and logical locations to narrow down the problem area.

B, Most problems will occur at a component or connector. Rarely will the problem be a broken wire buried in a harness.

Example: Shifter panel is illuminated but engine won't crank. You can check for cranking signals with a test light at the key switch, 15 pin amp connector, VIM box and starter solenoid. Since the start signal that passes in and out of the VIM box also passes in and out of the 15 pin amp connector and the 15 pin amp connector is easy to access and check with a test light. This seems the logical place to start.

## 4, DETERMINE THE CAUSE OF THE FAILURE

A, Did the component just fail or did something else cause the component to fail.


i.e.. Try to avoid customer returns for the same problem.

N:\30-49\38\99\38990263.dwg, 10/1/2003 1:53:07 PM


BEFORE PROCEEDING, VERIFY CHASSIS BATTERY DISCONNECT IS SWITCHED TO THE ON POSITION AND BATTERIES HAVE THE ABILITY TO START THE ENGINE.

ENGINE WON'T CRANK

SEE DRAWINGS 38980822 AND 38980824 FOR COMPONENT LOCATIONS


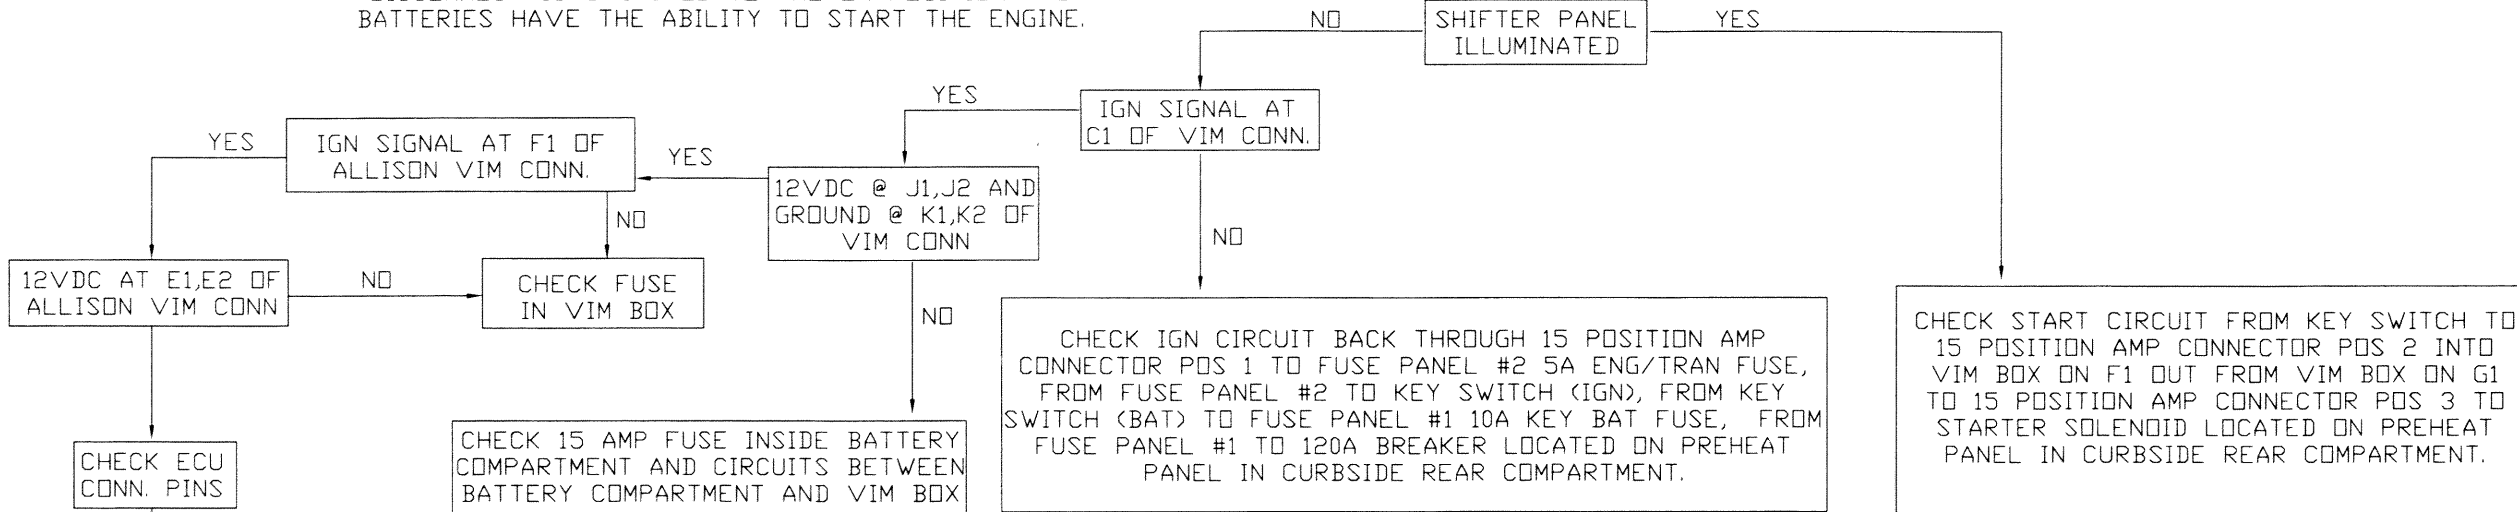


CONTACT ALLISON

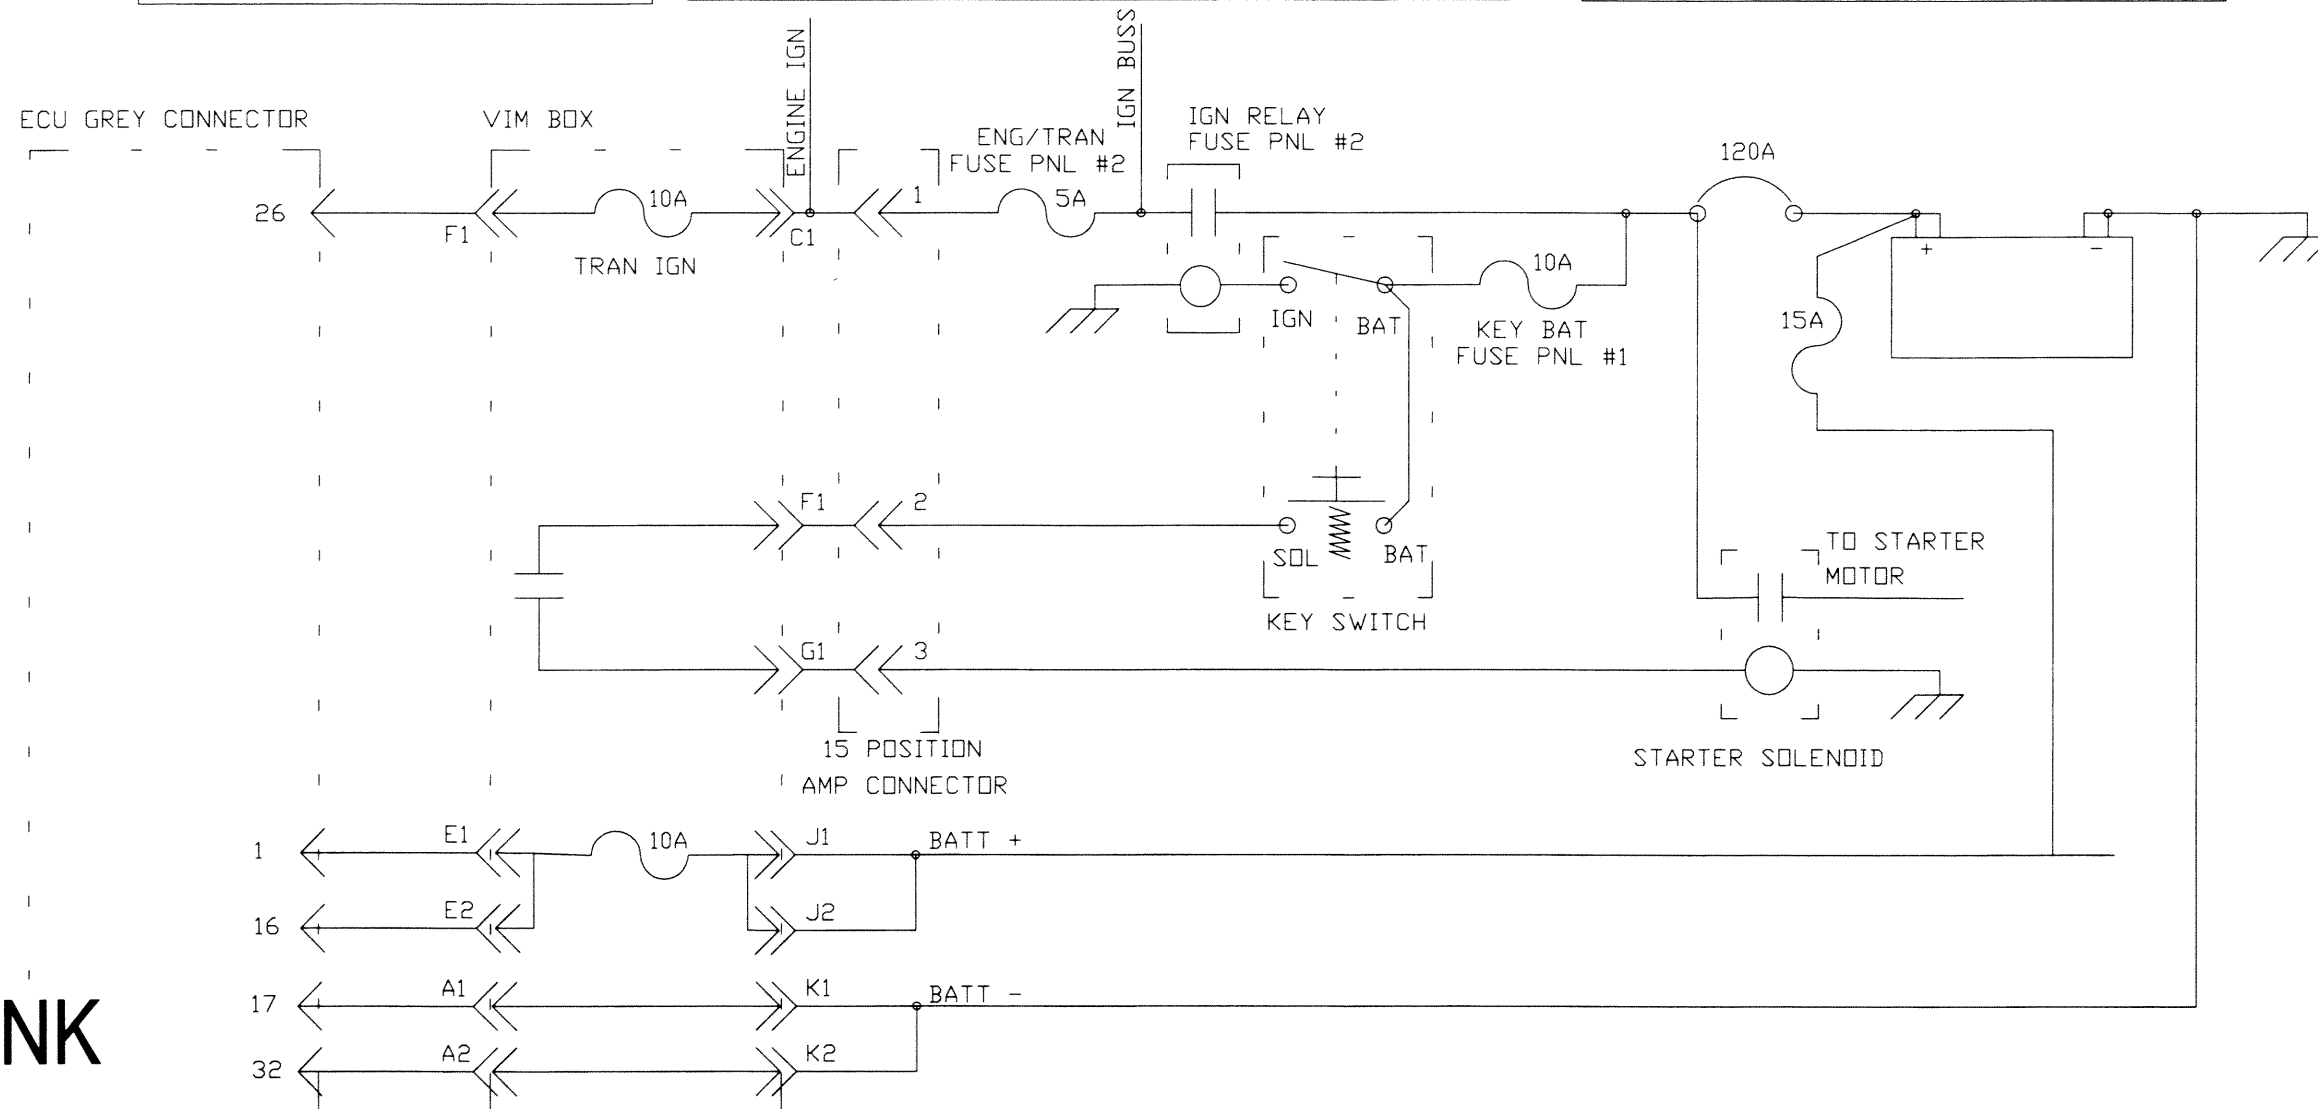

NO CRANK


N:\30-49\38\99\38990263.dwg, 10/1/2003 1:53:24 PM

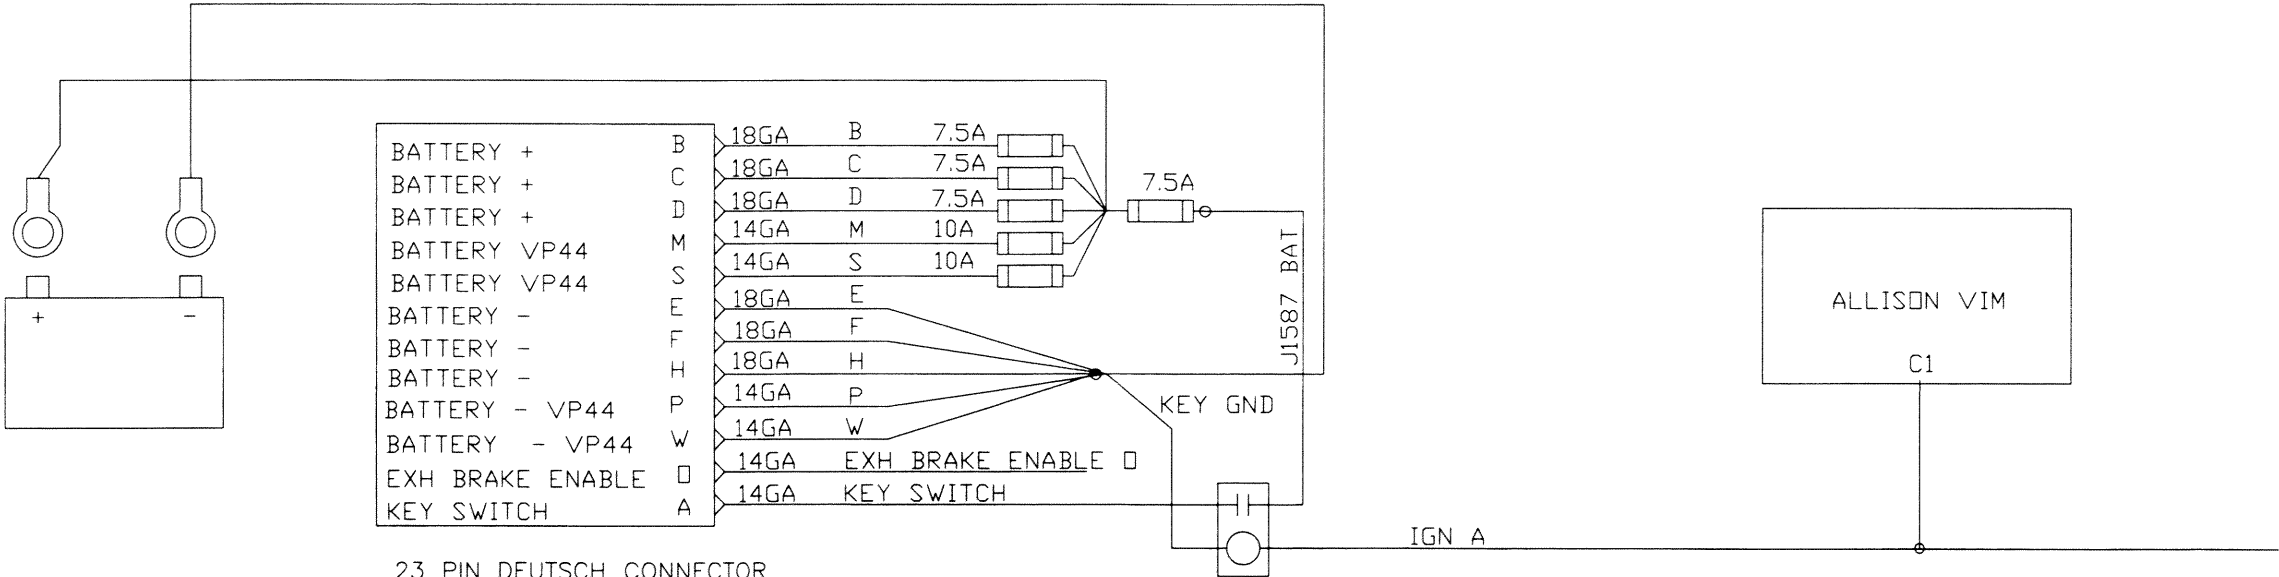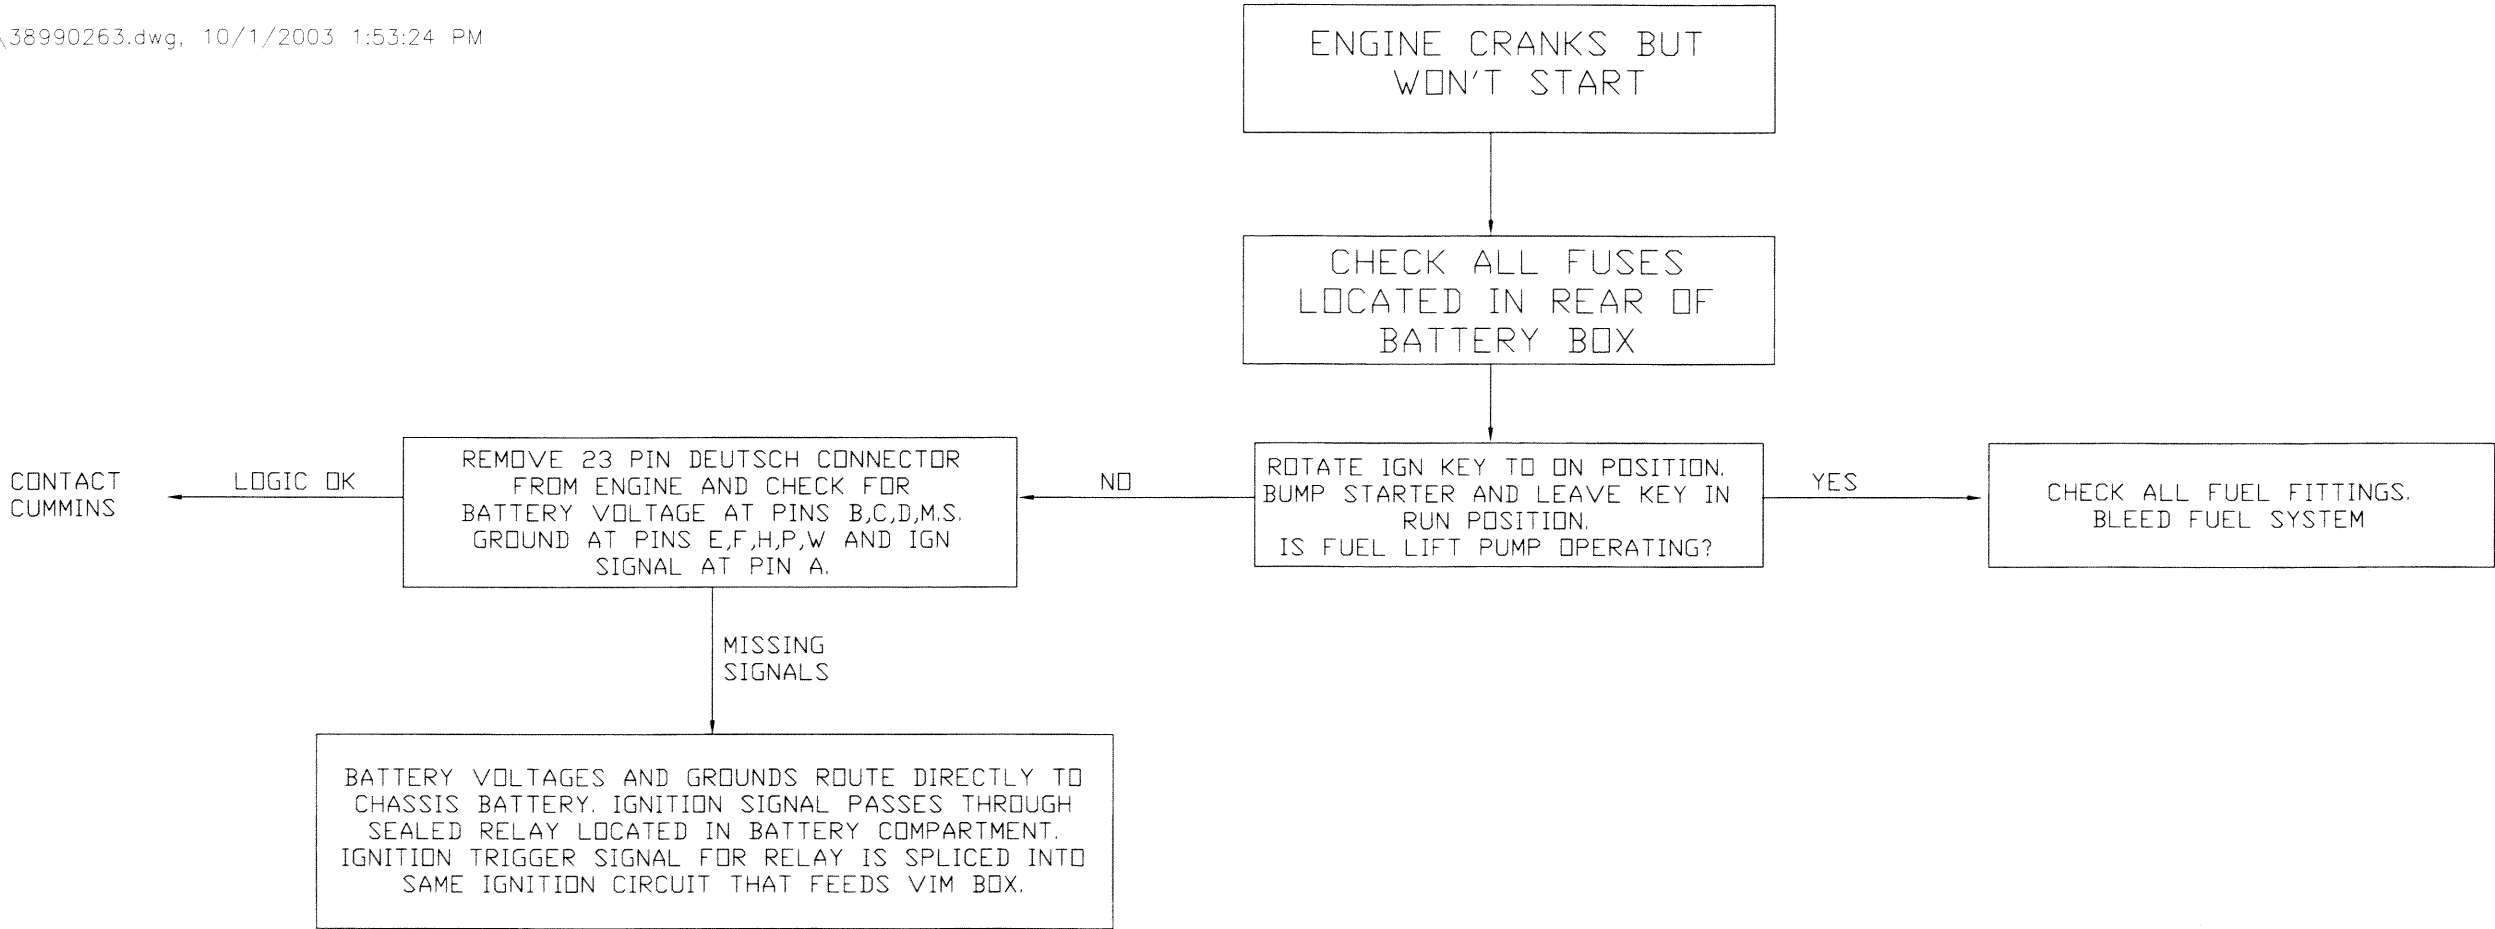


NO START

23 PIN DEUTSCH CONNECTOR  
(ROUND SILVER COLORED)



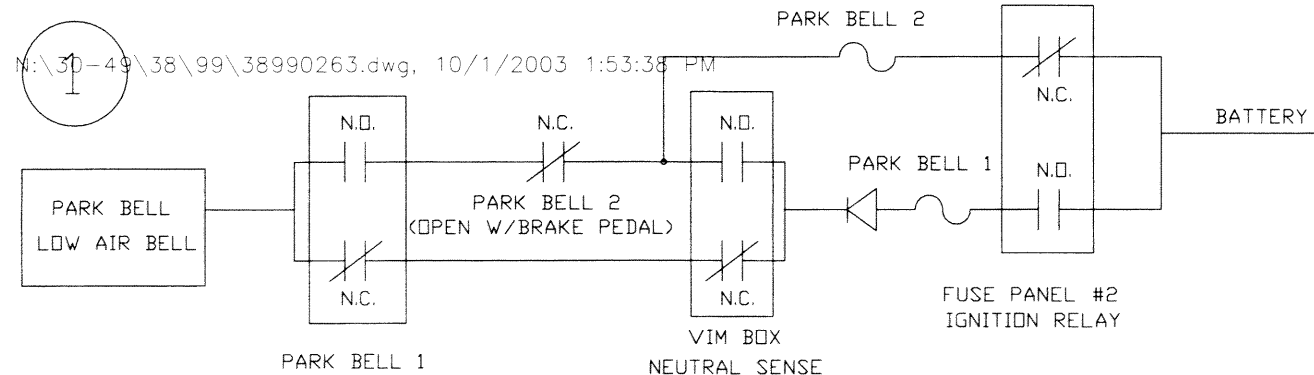

KEY OFF, PARK BRAKE SET, PARK LIGHT OFF

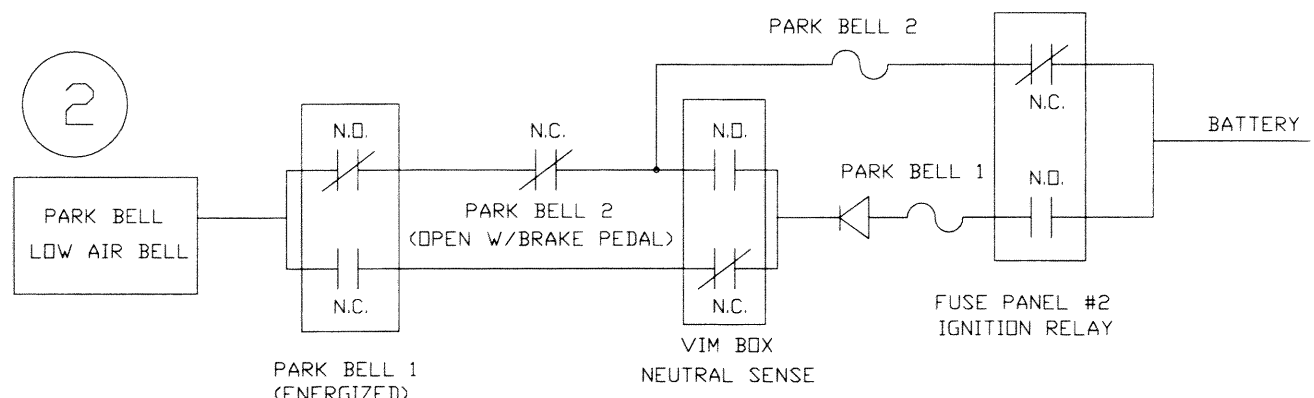


KEY OFF, PARK BRAKE RELEASED, PARK LIGHT OFF


## NOTES:

- 1 PARK BELL SOUNDS WHEN A COMPLETE CIRCUIT EXISTS BETWEEN BATTERY AND PARK BELL.
- 2 PARK BELL 1 RELAY IS ENERGIZED WHEN PARK BRAKE IS RELEASED
- 3 PARK BELL 2 RELAY IS ENERGIZED WHEN BRAKE PEDAL IS DEPRESSED
- 4 NEUTRAL SENSE RELAY IS ENERGIZED WHEN TRANSMISSION IS IN NEUTRAL
- 5 IGNITION RELAY IS ENERGIZED WHEN KEY IS IN RUN POSITION


# PARK BELL LOGIC

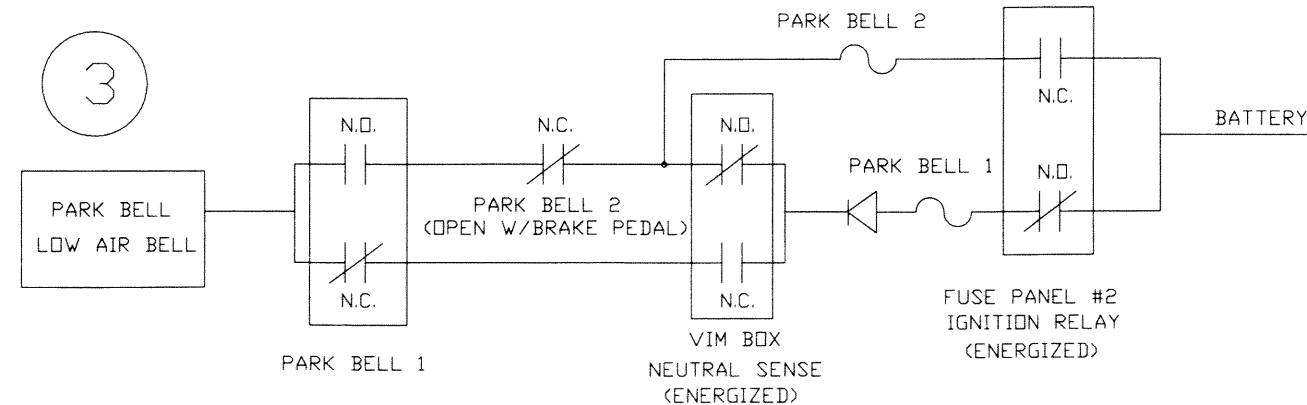


KEY ON, PARK BRAKE SET, PARK LIGHT ON, NEUTRAL

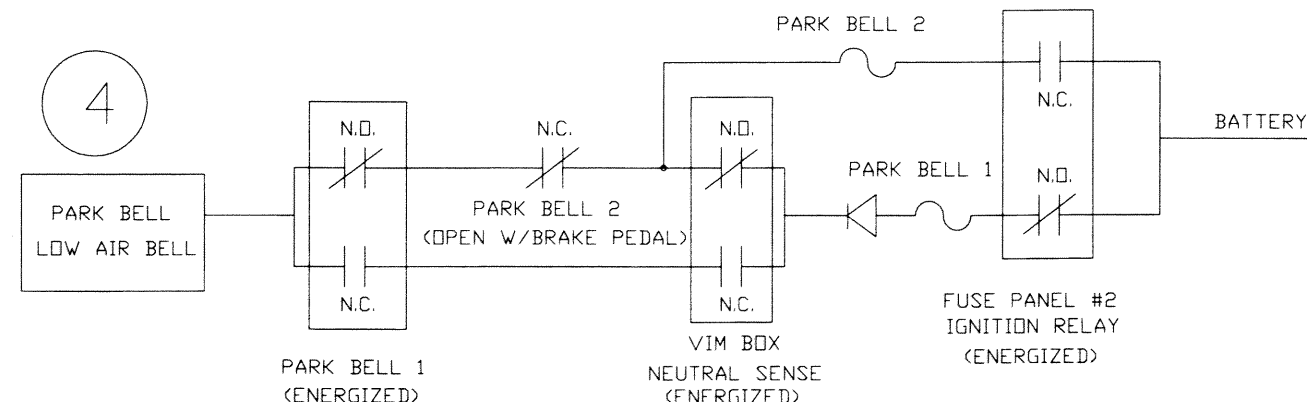


KEY ON, PARK BRAKE RELEASED, PARK LIGHT OFF, NEUTRAL

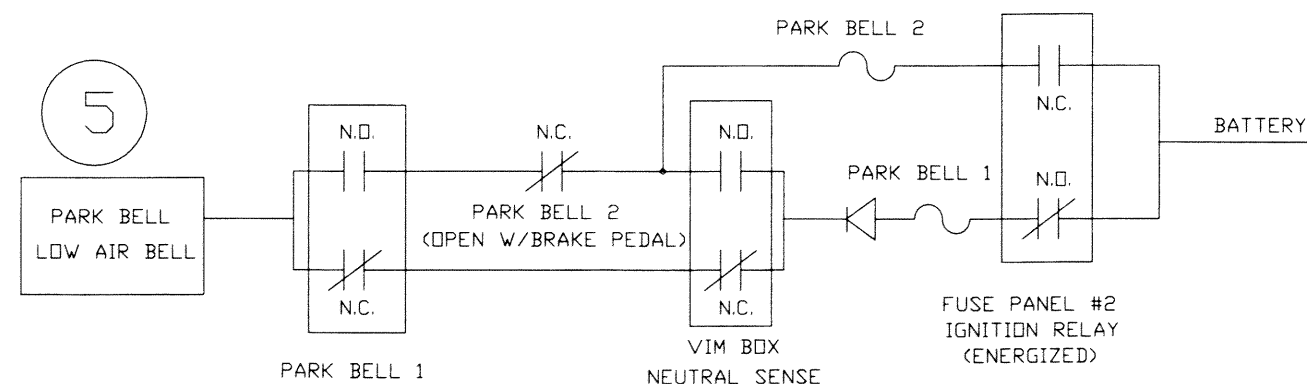

KEY ON, PARK BRAKE SET, PARK LIGHT ON, DRIVE OR REVERSE

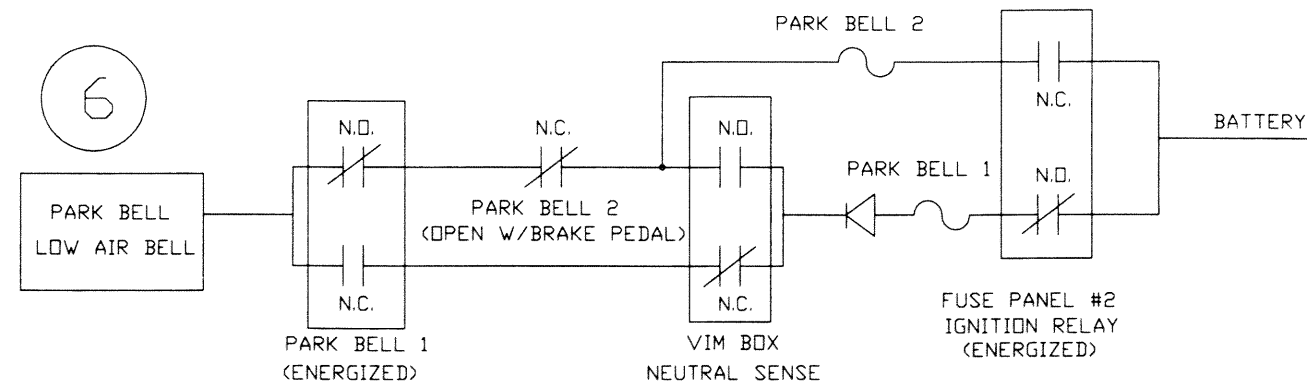


KEY ON, PARK BRAKE RELEASED, PARK LIGHT OFF, DRIVE OR REVERSE

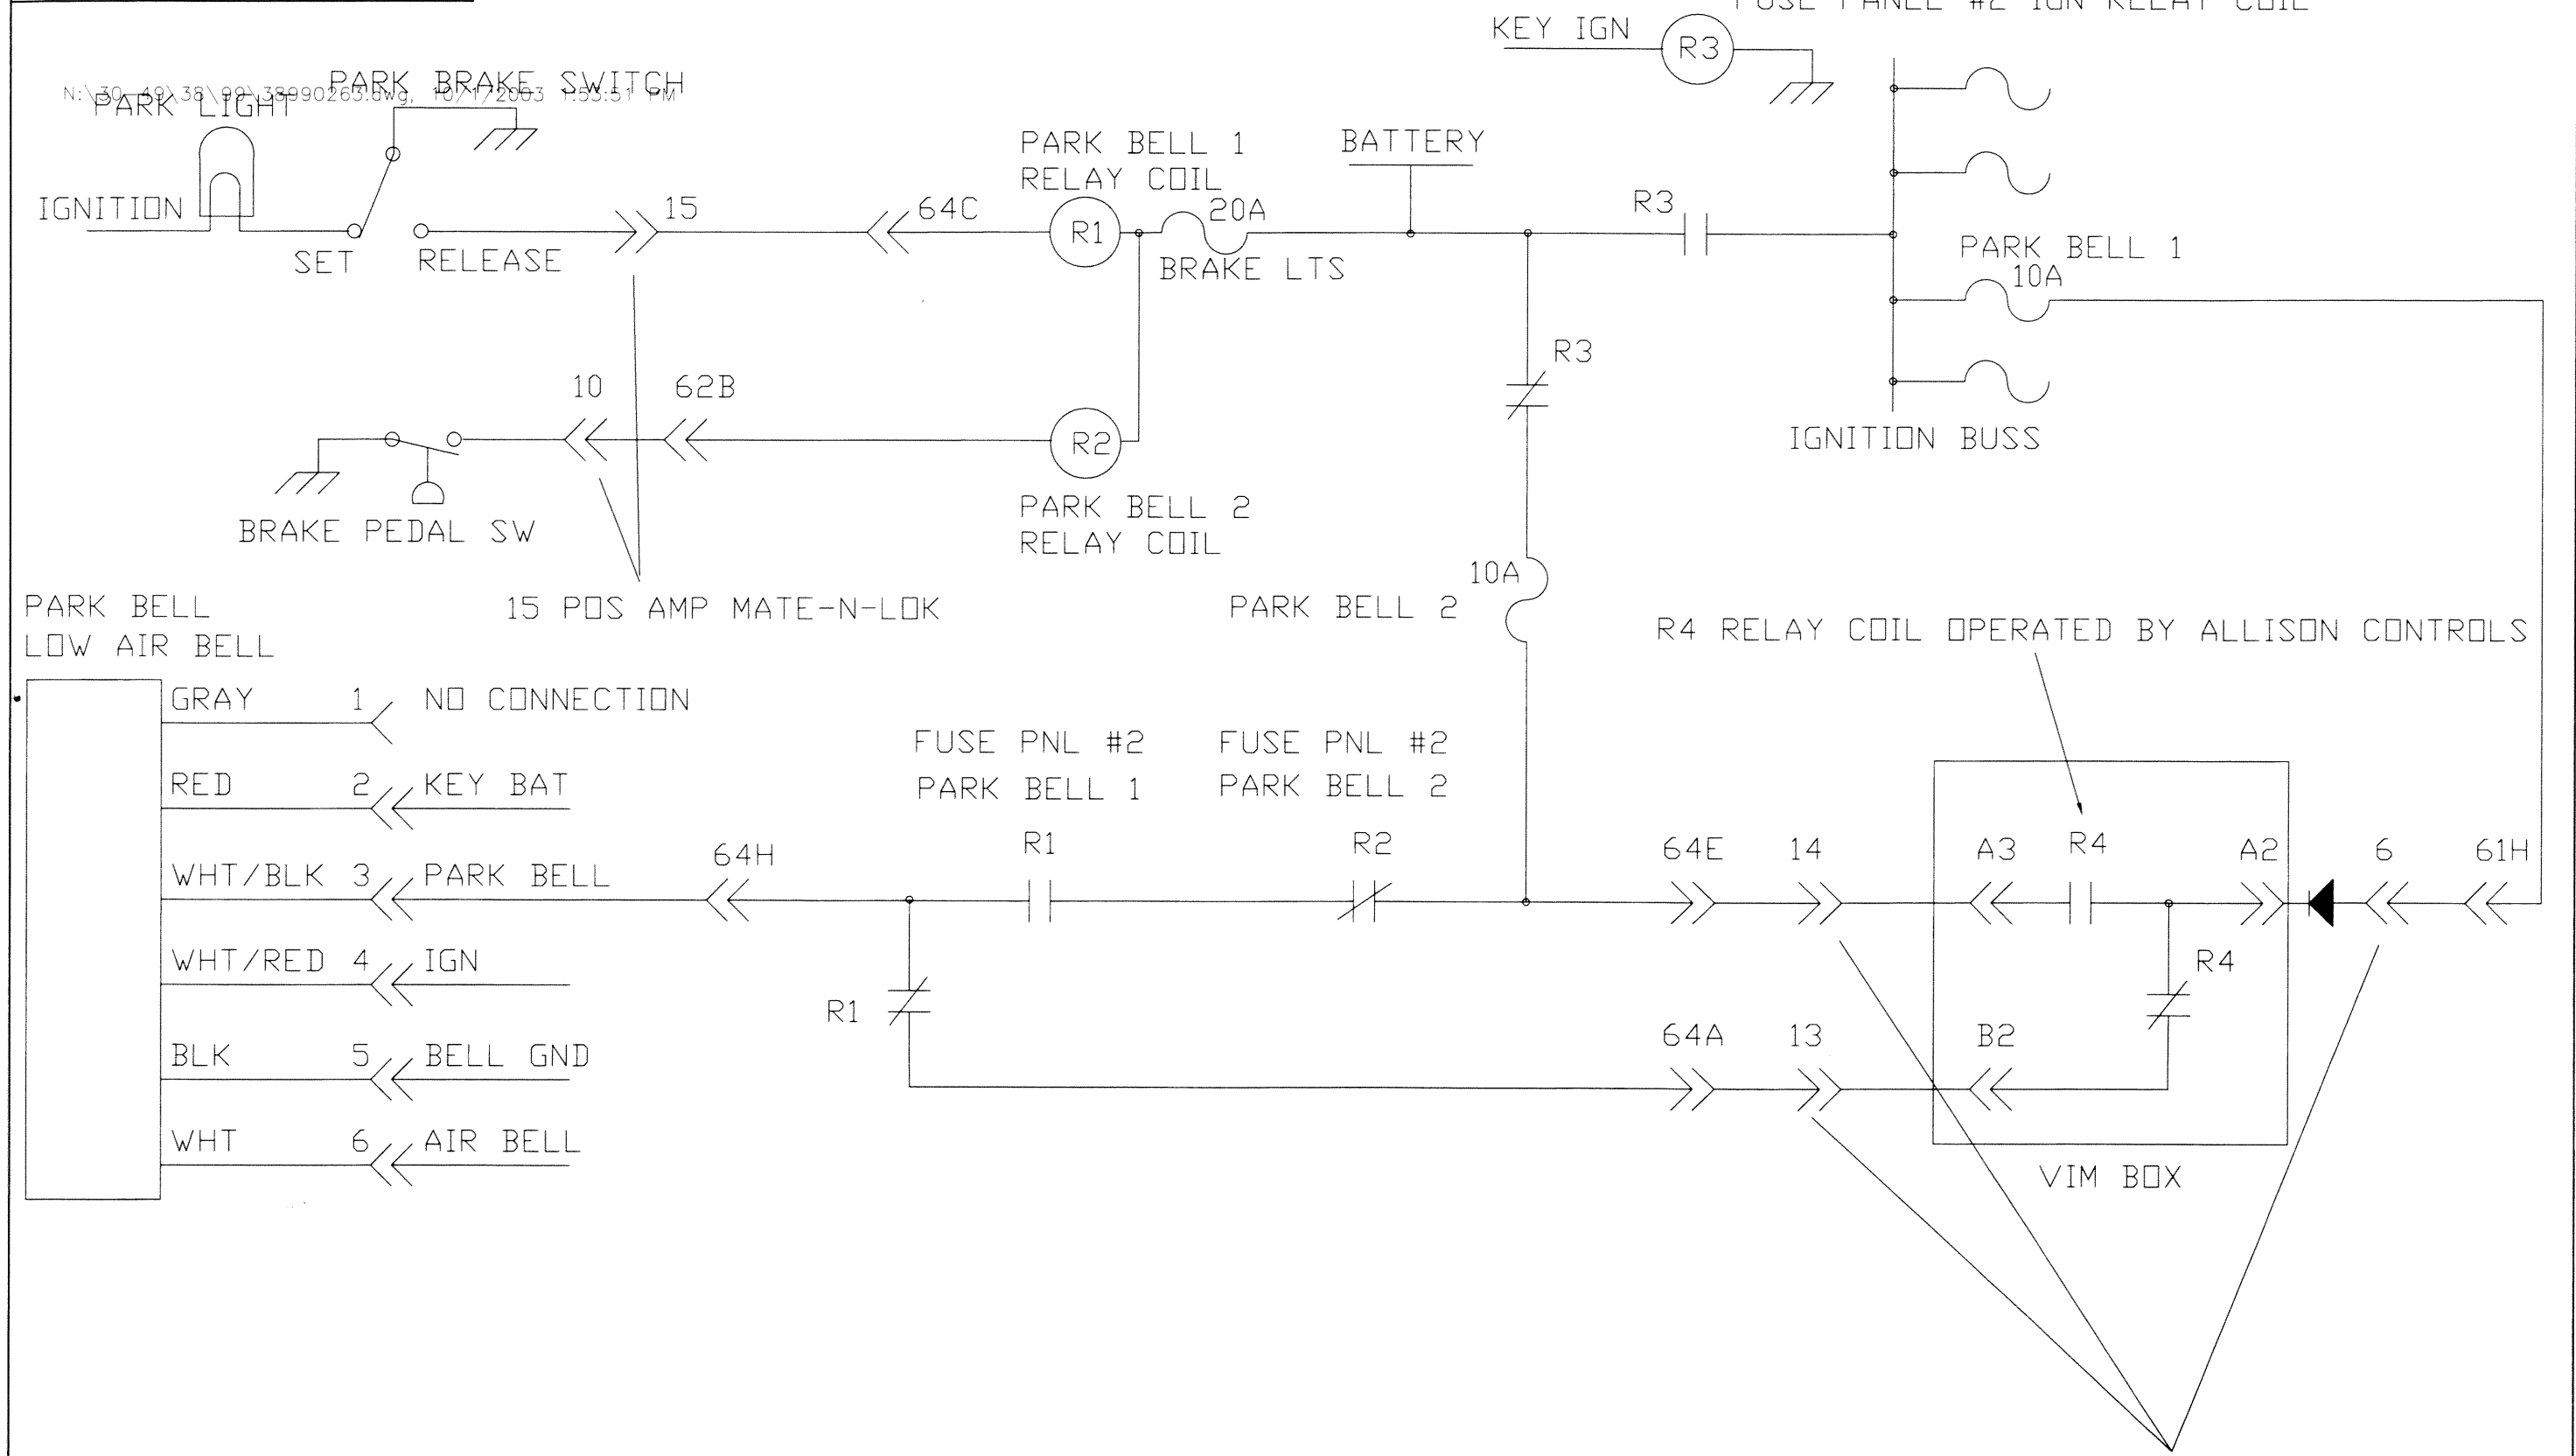

# PARK BELL CIRCUIT

N:\30-49\38\99\38990263.dwg, 10/1/2003 1:54:05 PM

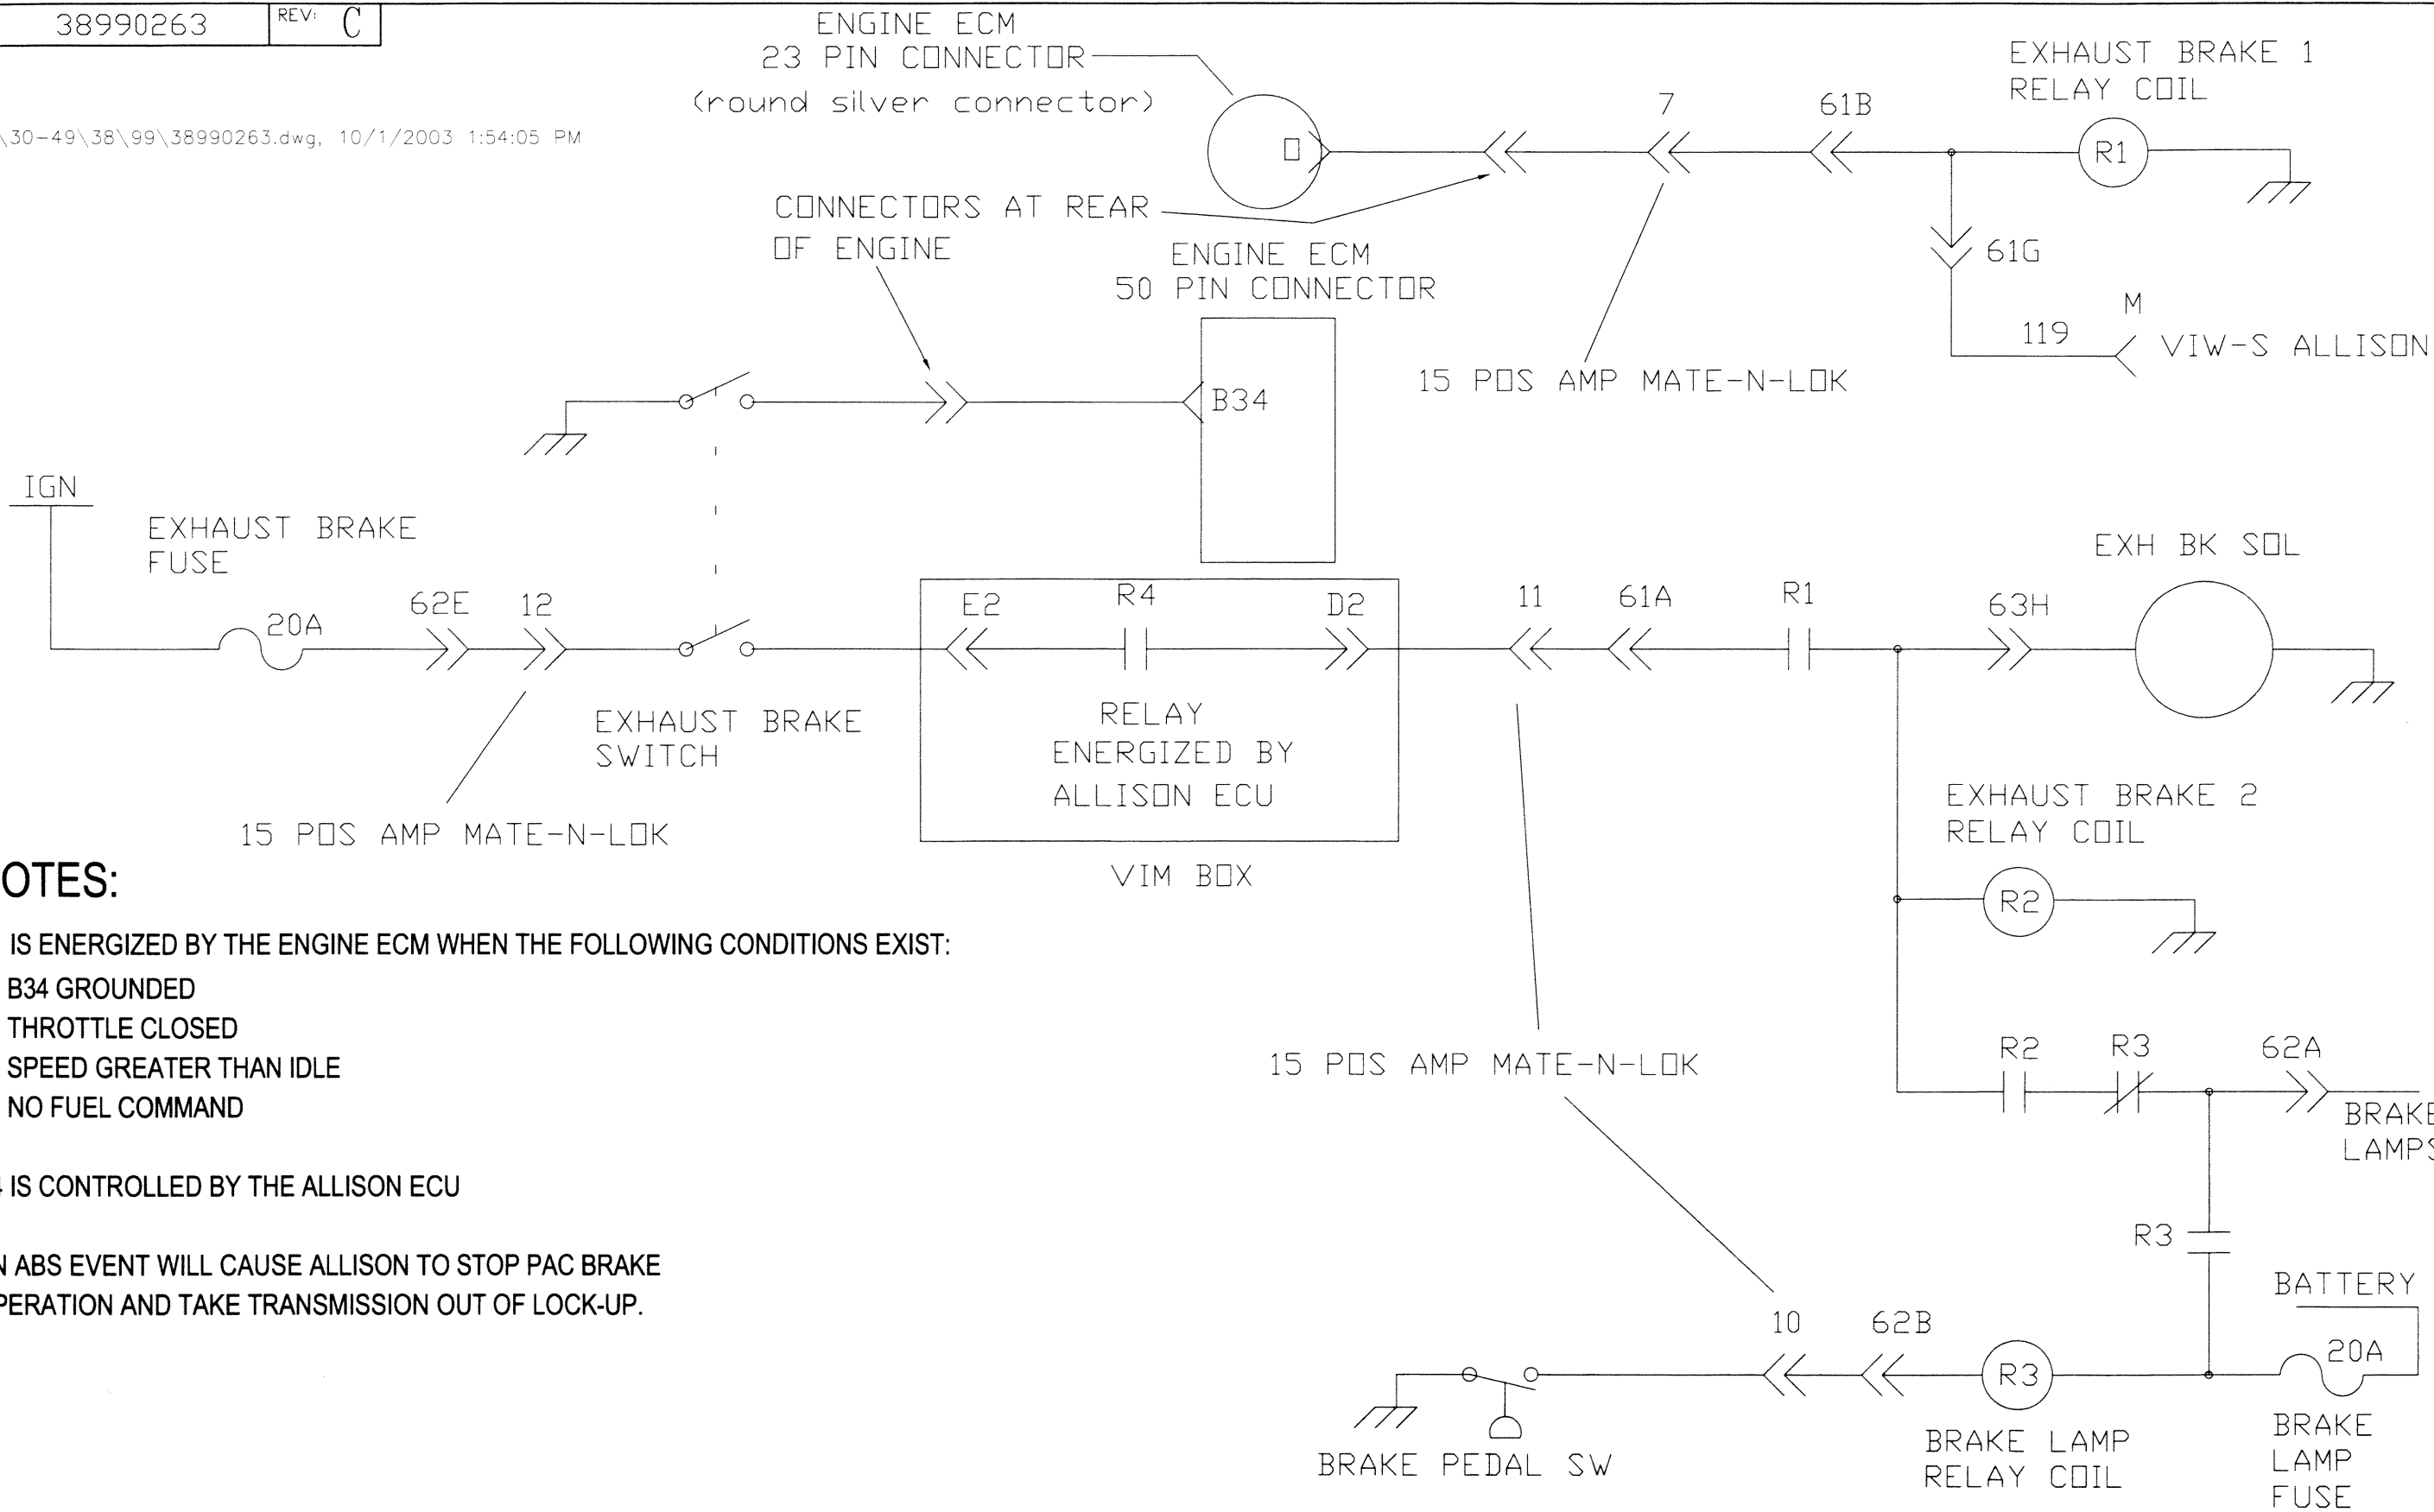

NOTES:


R1 IS ENERGIZED BY THE ENGINE ECM WHEN THE FOLLOWING CONDITIONS EXIST:

- 1, B34 GROUNDED
- 2, THROTTLE CLOSED
- 3, SPEED GREATER THAN IDLE
- 4, NO FUEL COMMAND

R4 IS CONTROLLED BY THE ALLISON ECU






AN ABS EVENT WILL CAUSE ALLISON TO STOP PAC BRAKE OPERATION AND TAKE TRANSMISSION OUT OF LOCK-UP.

EXHAUST BRAKE CIRCUIT

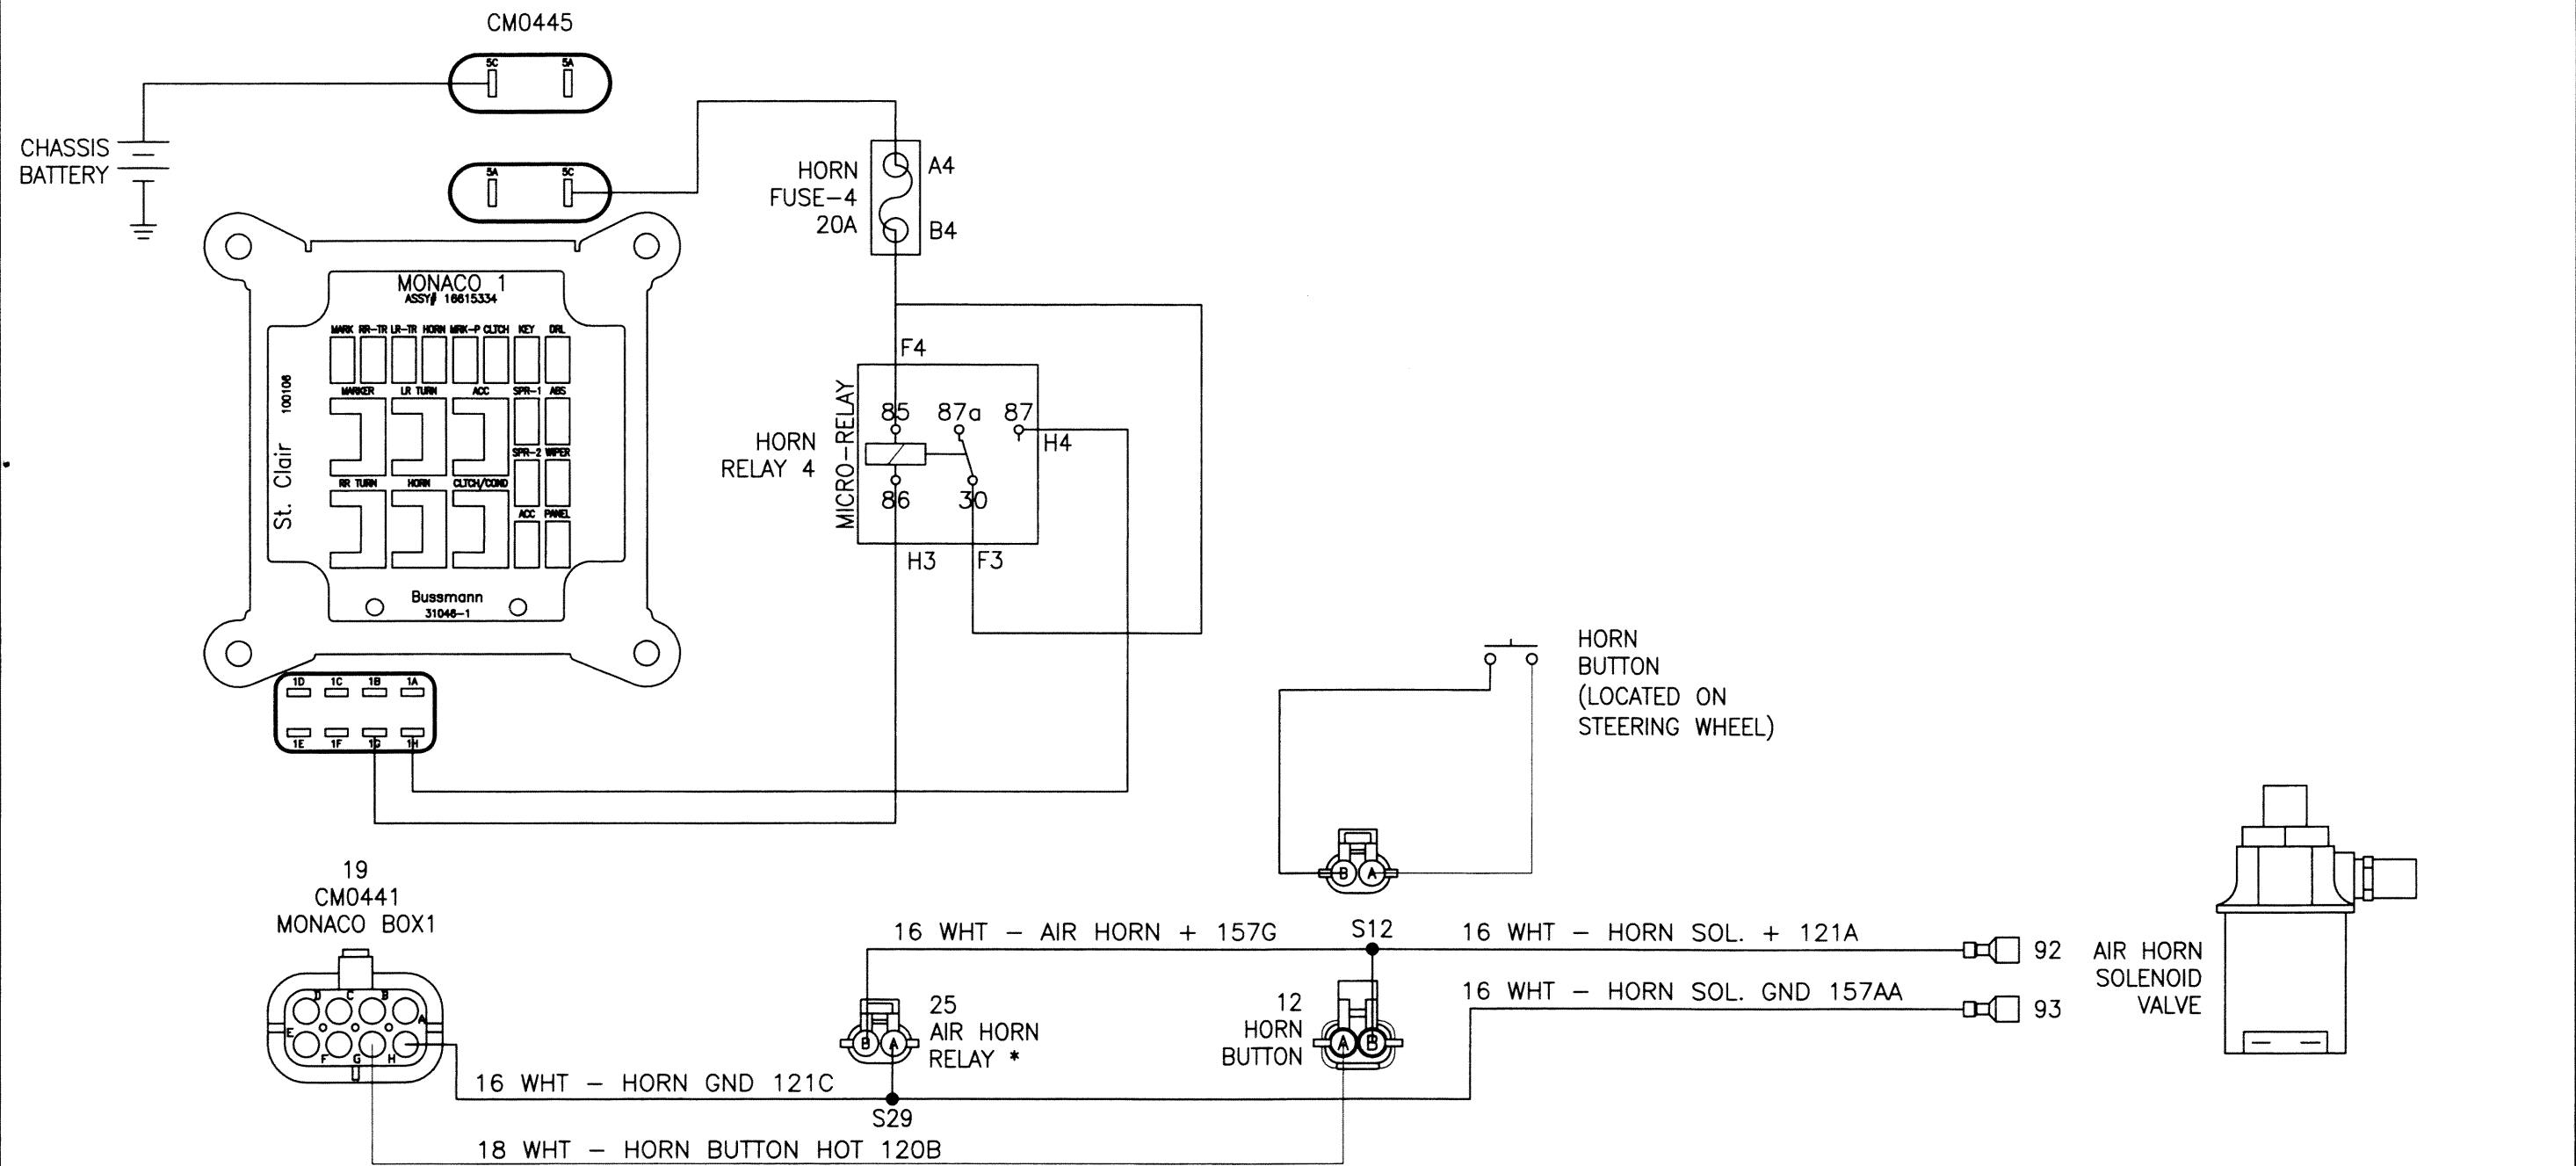


REV.	UNIT	DESCRIPTION OF CHANGE	BY	DATE
-	-	-	-	-

  
N:\30-49\38\04\38040892.dwg, 10/1/2003 1:55:22 PM

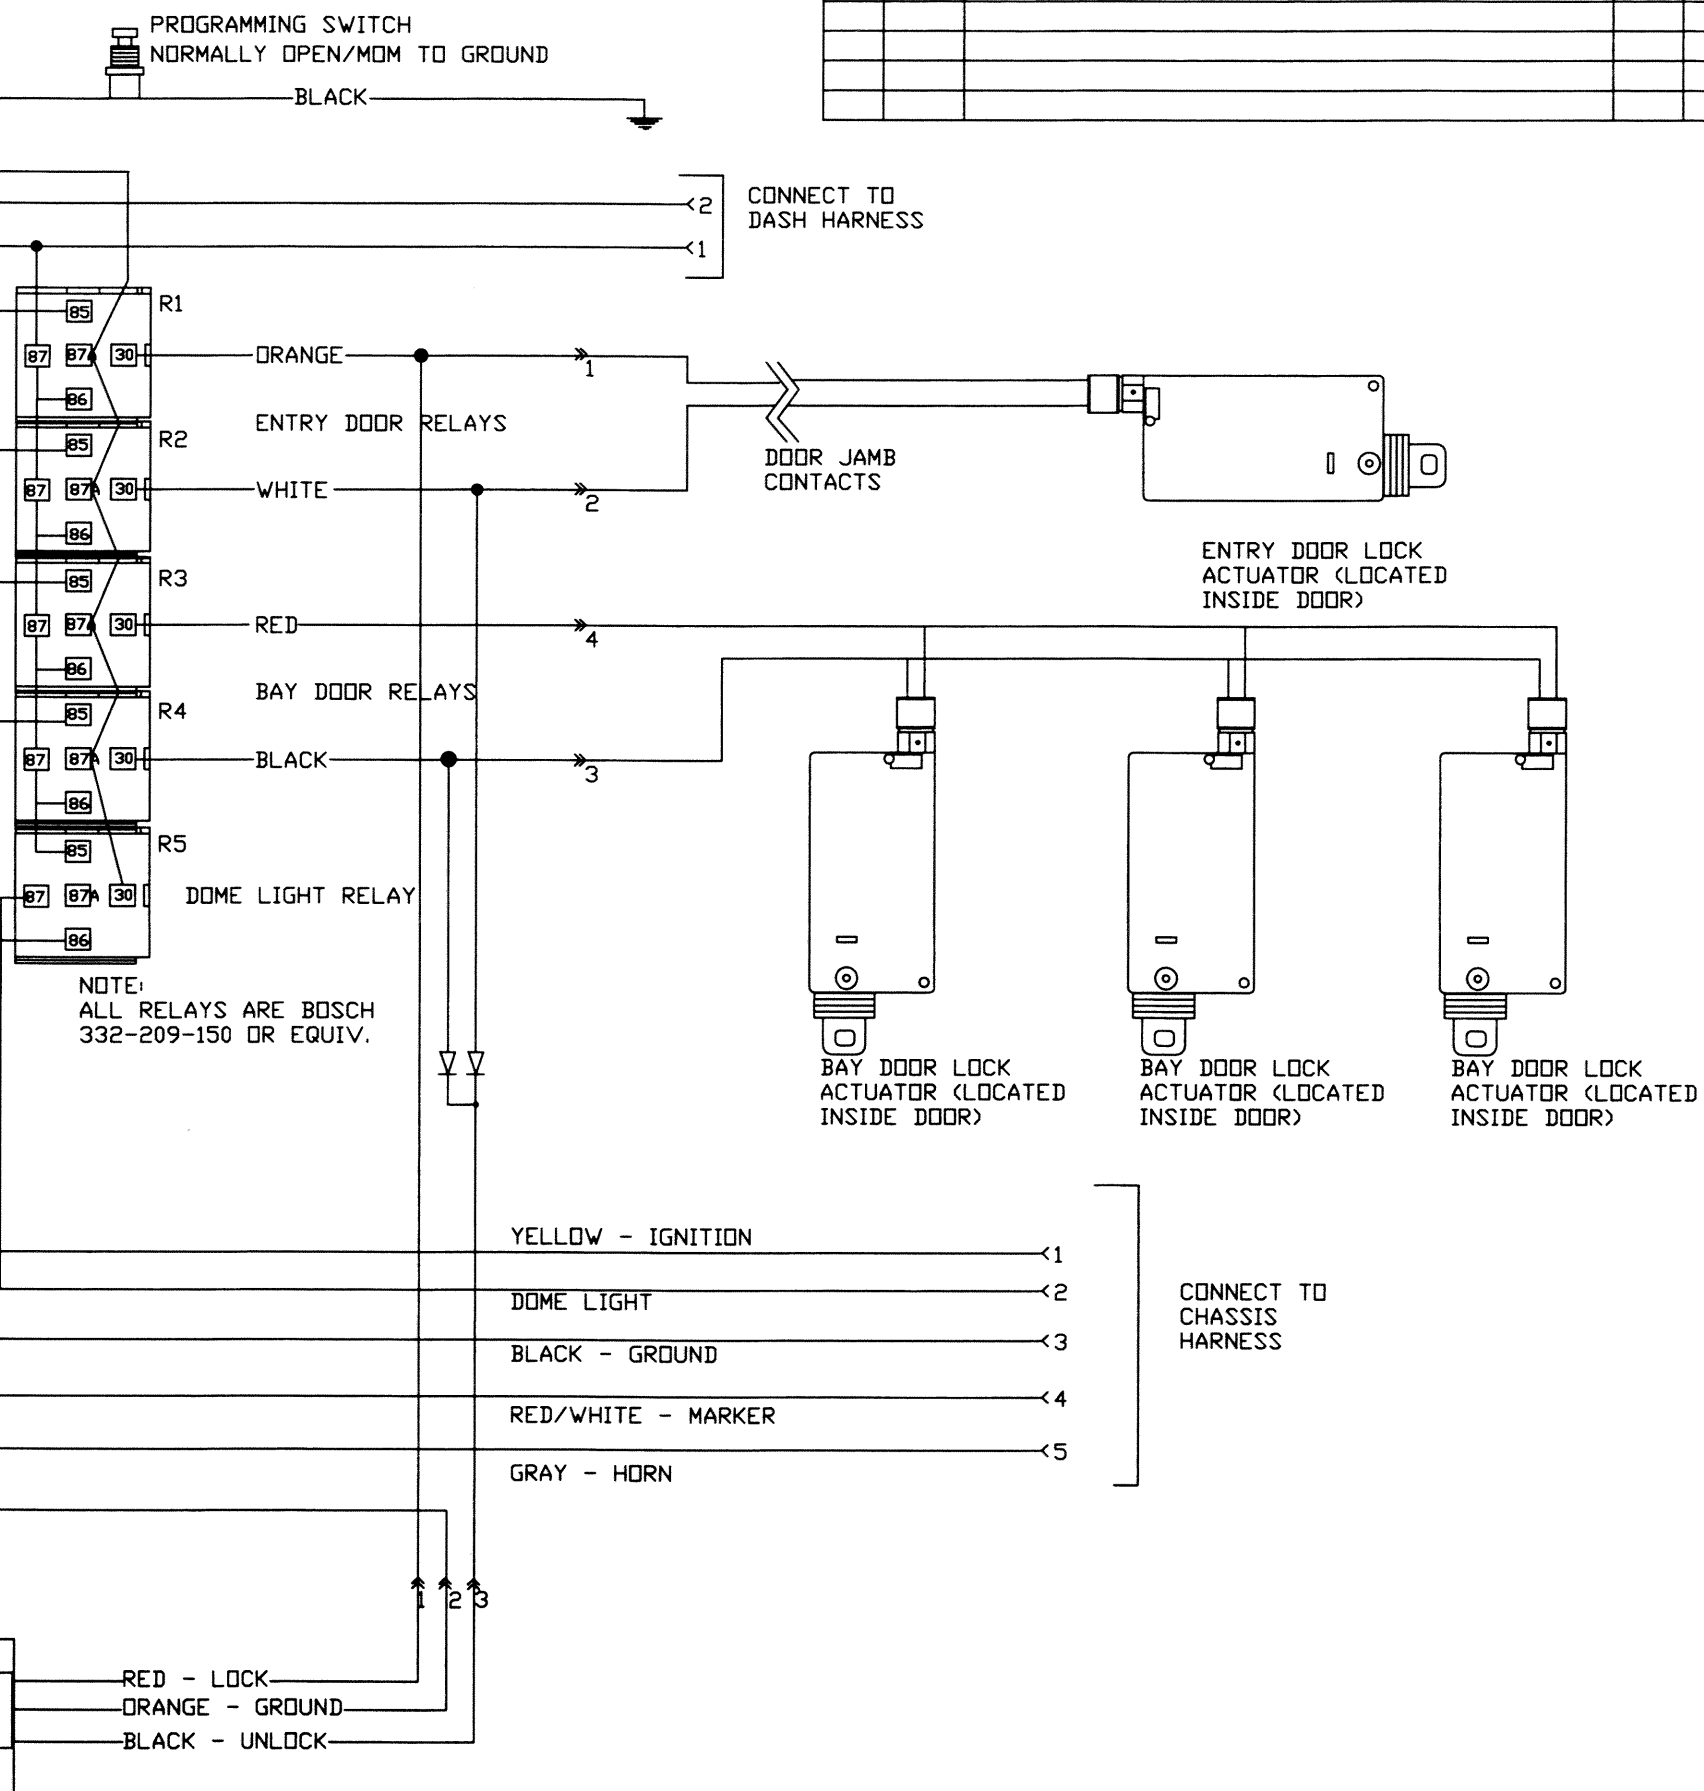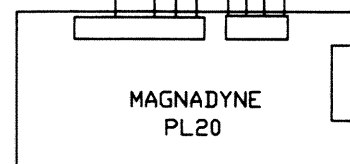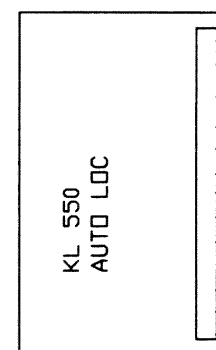

SWITCH IS TO BE A SPST,  
ON-OFF SWITCH WITH BACKLIT  
LEGEND AND FUNCTION-ON  
INDICATOR.

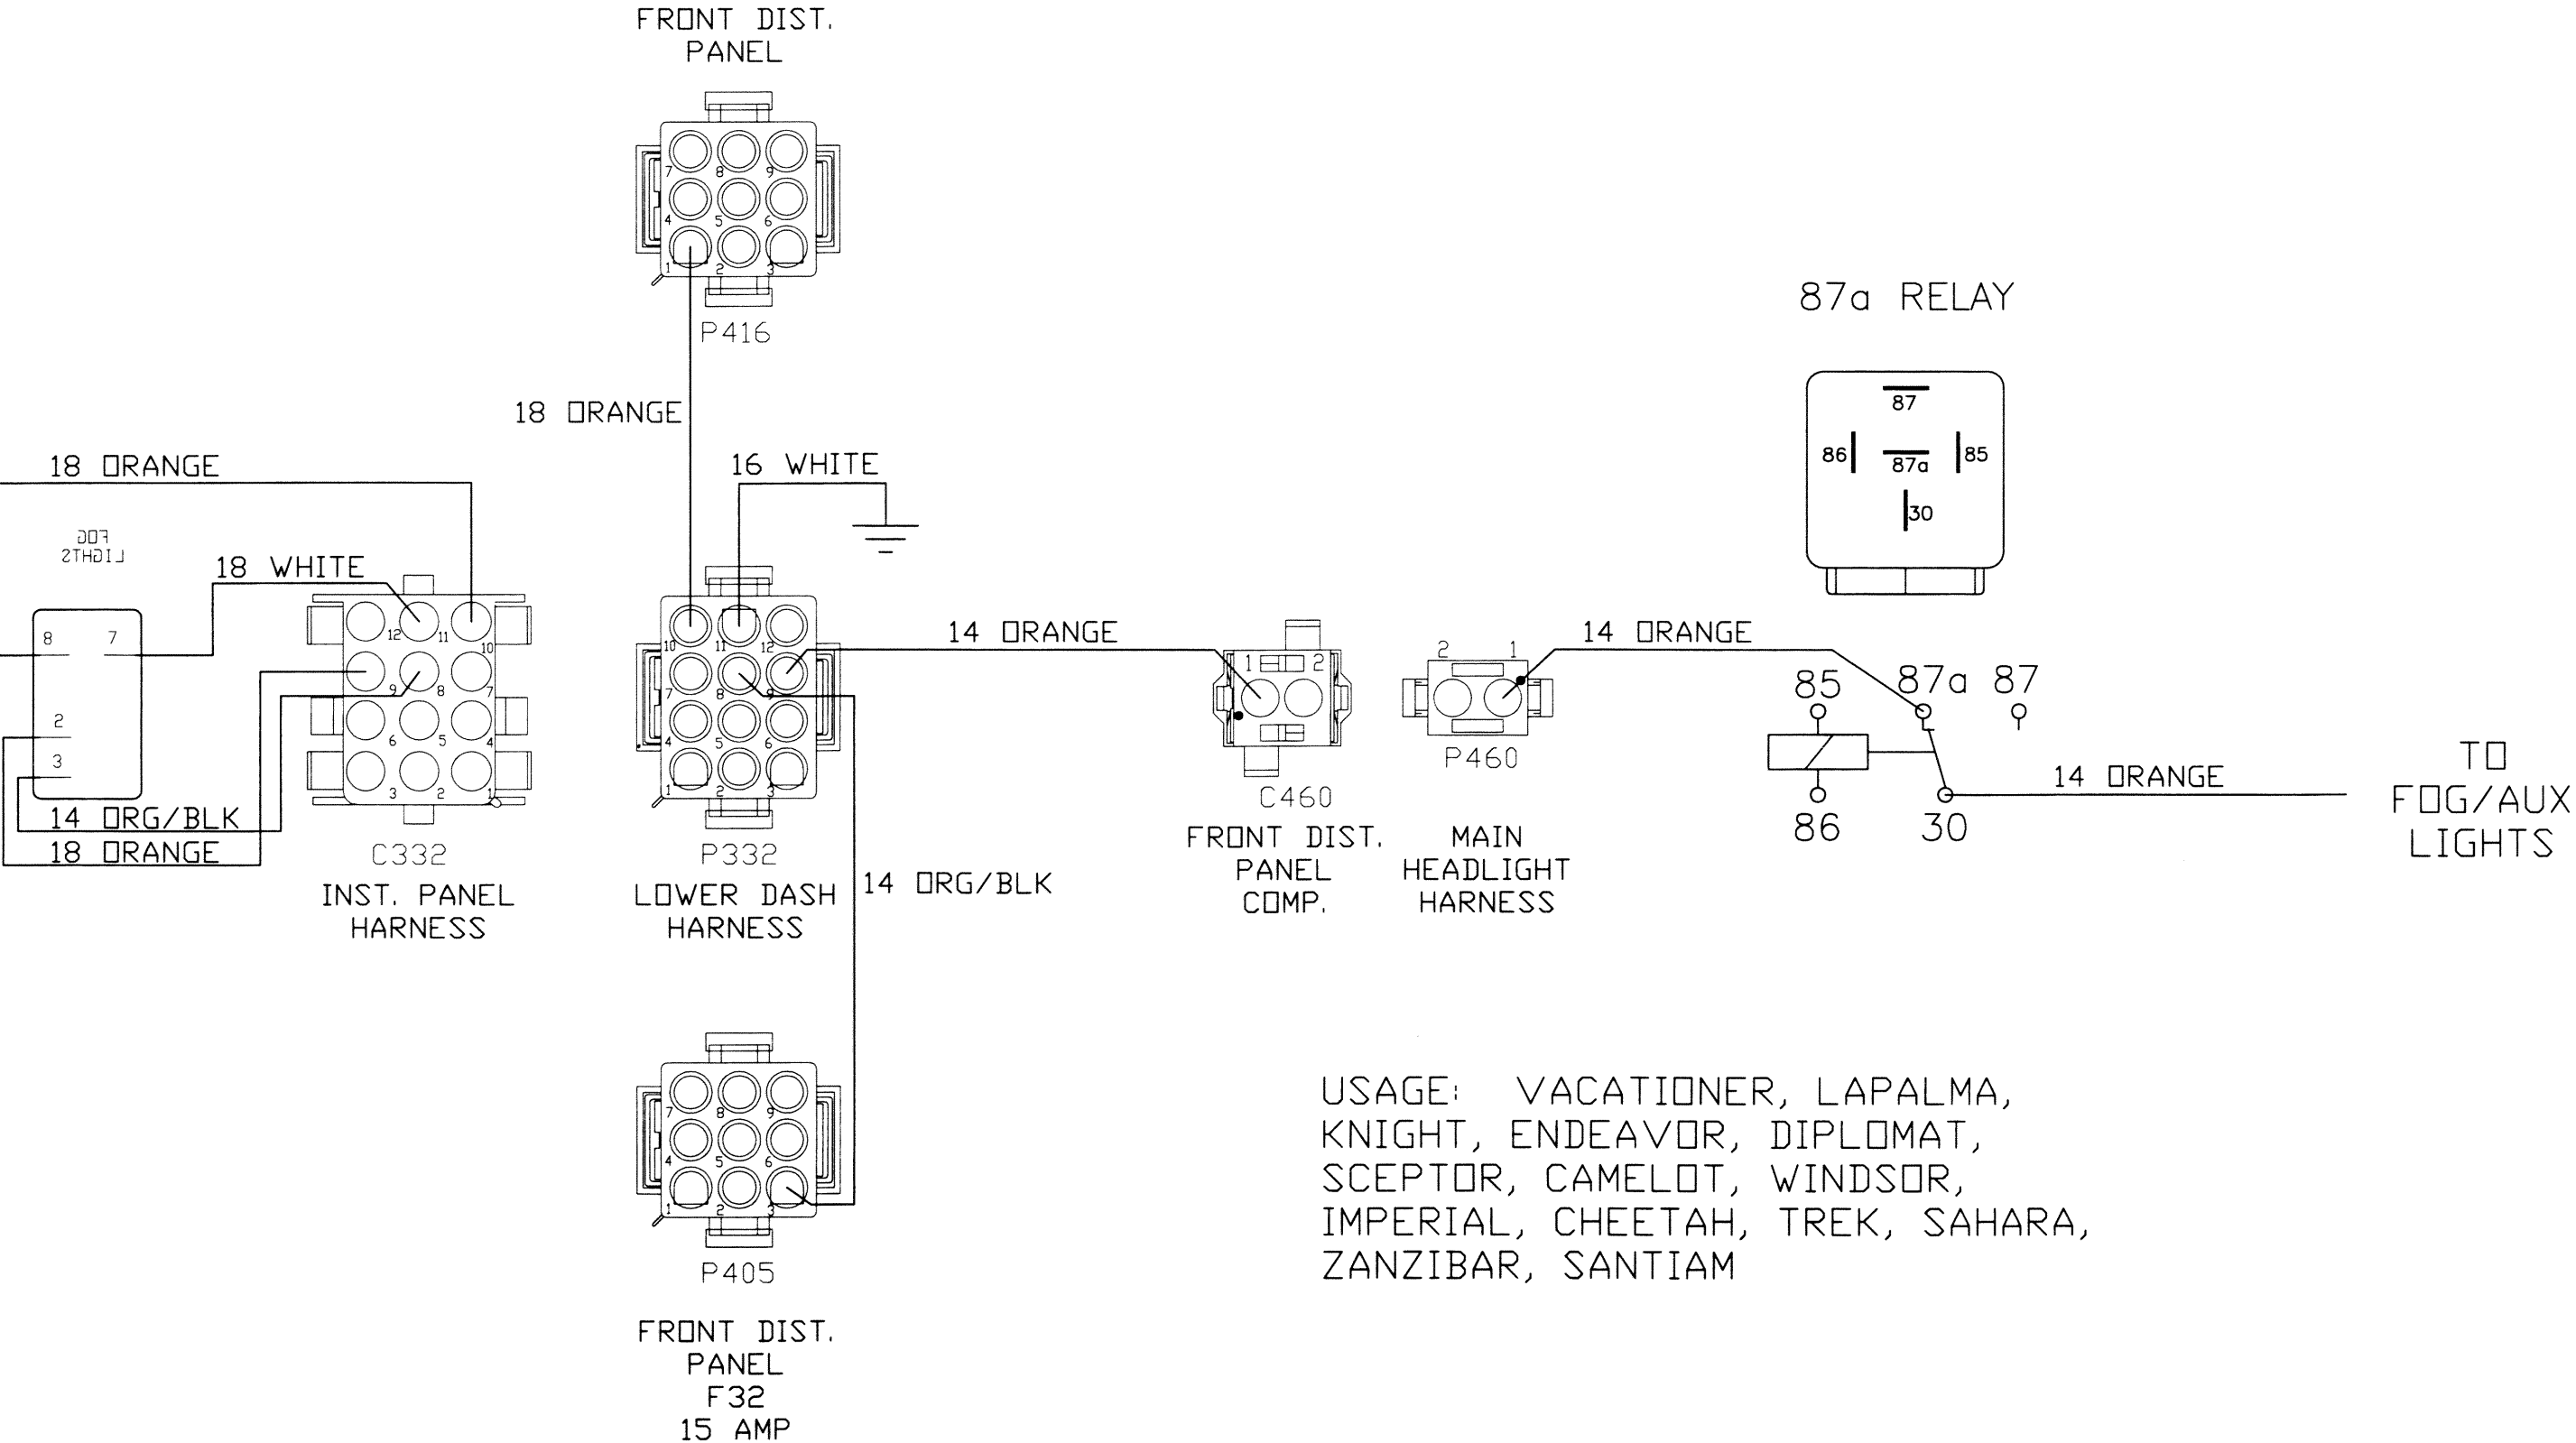

SWITCH IS TO BE A SPST  
(ON)-OFF SWITCH WITH BACKLIT  
LEGEND.

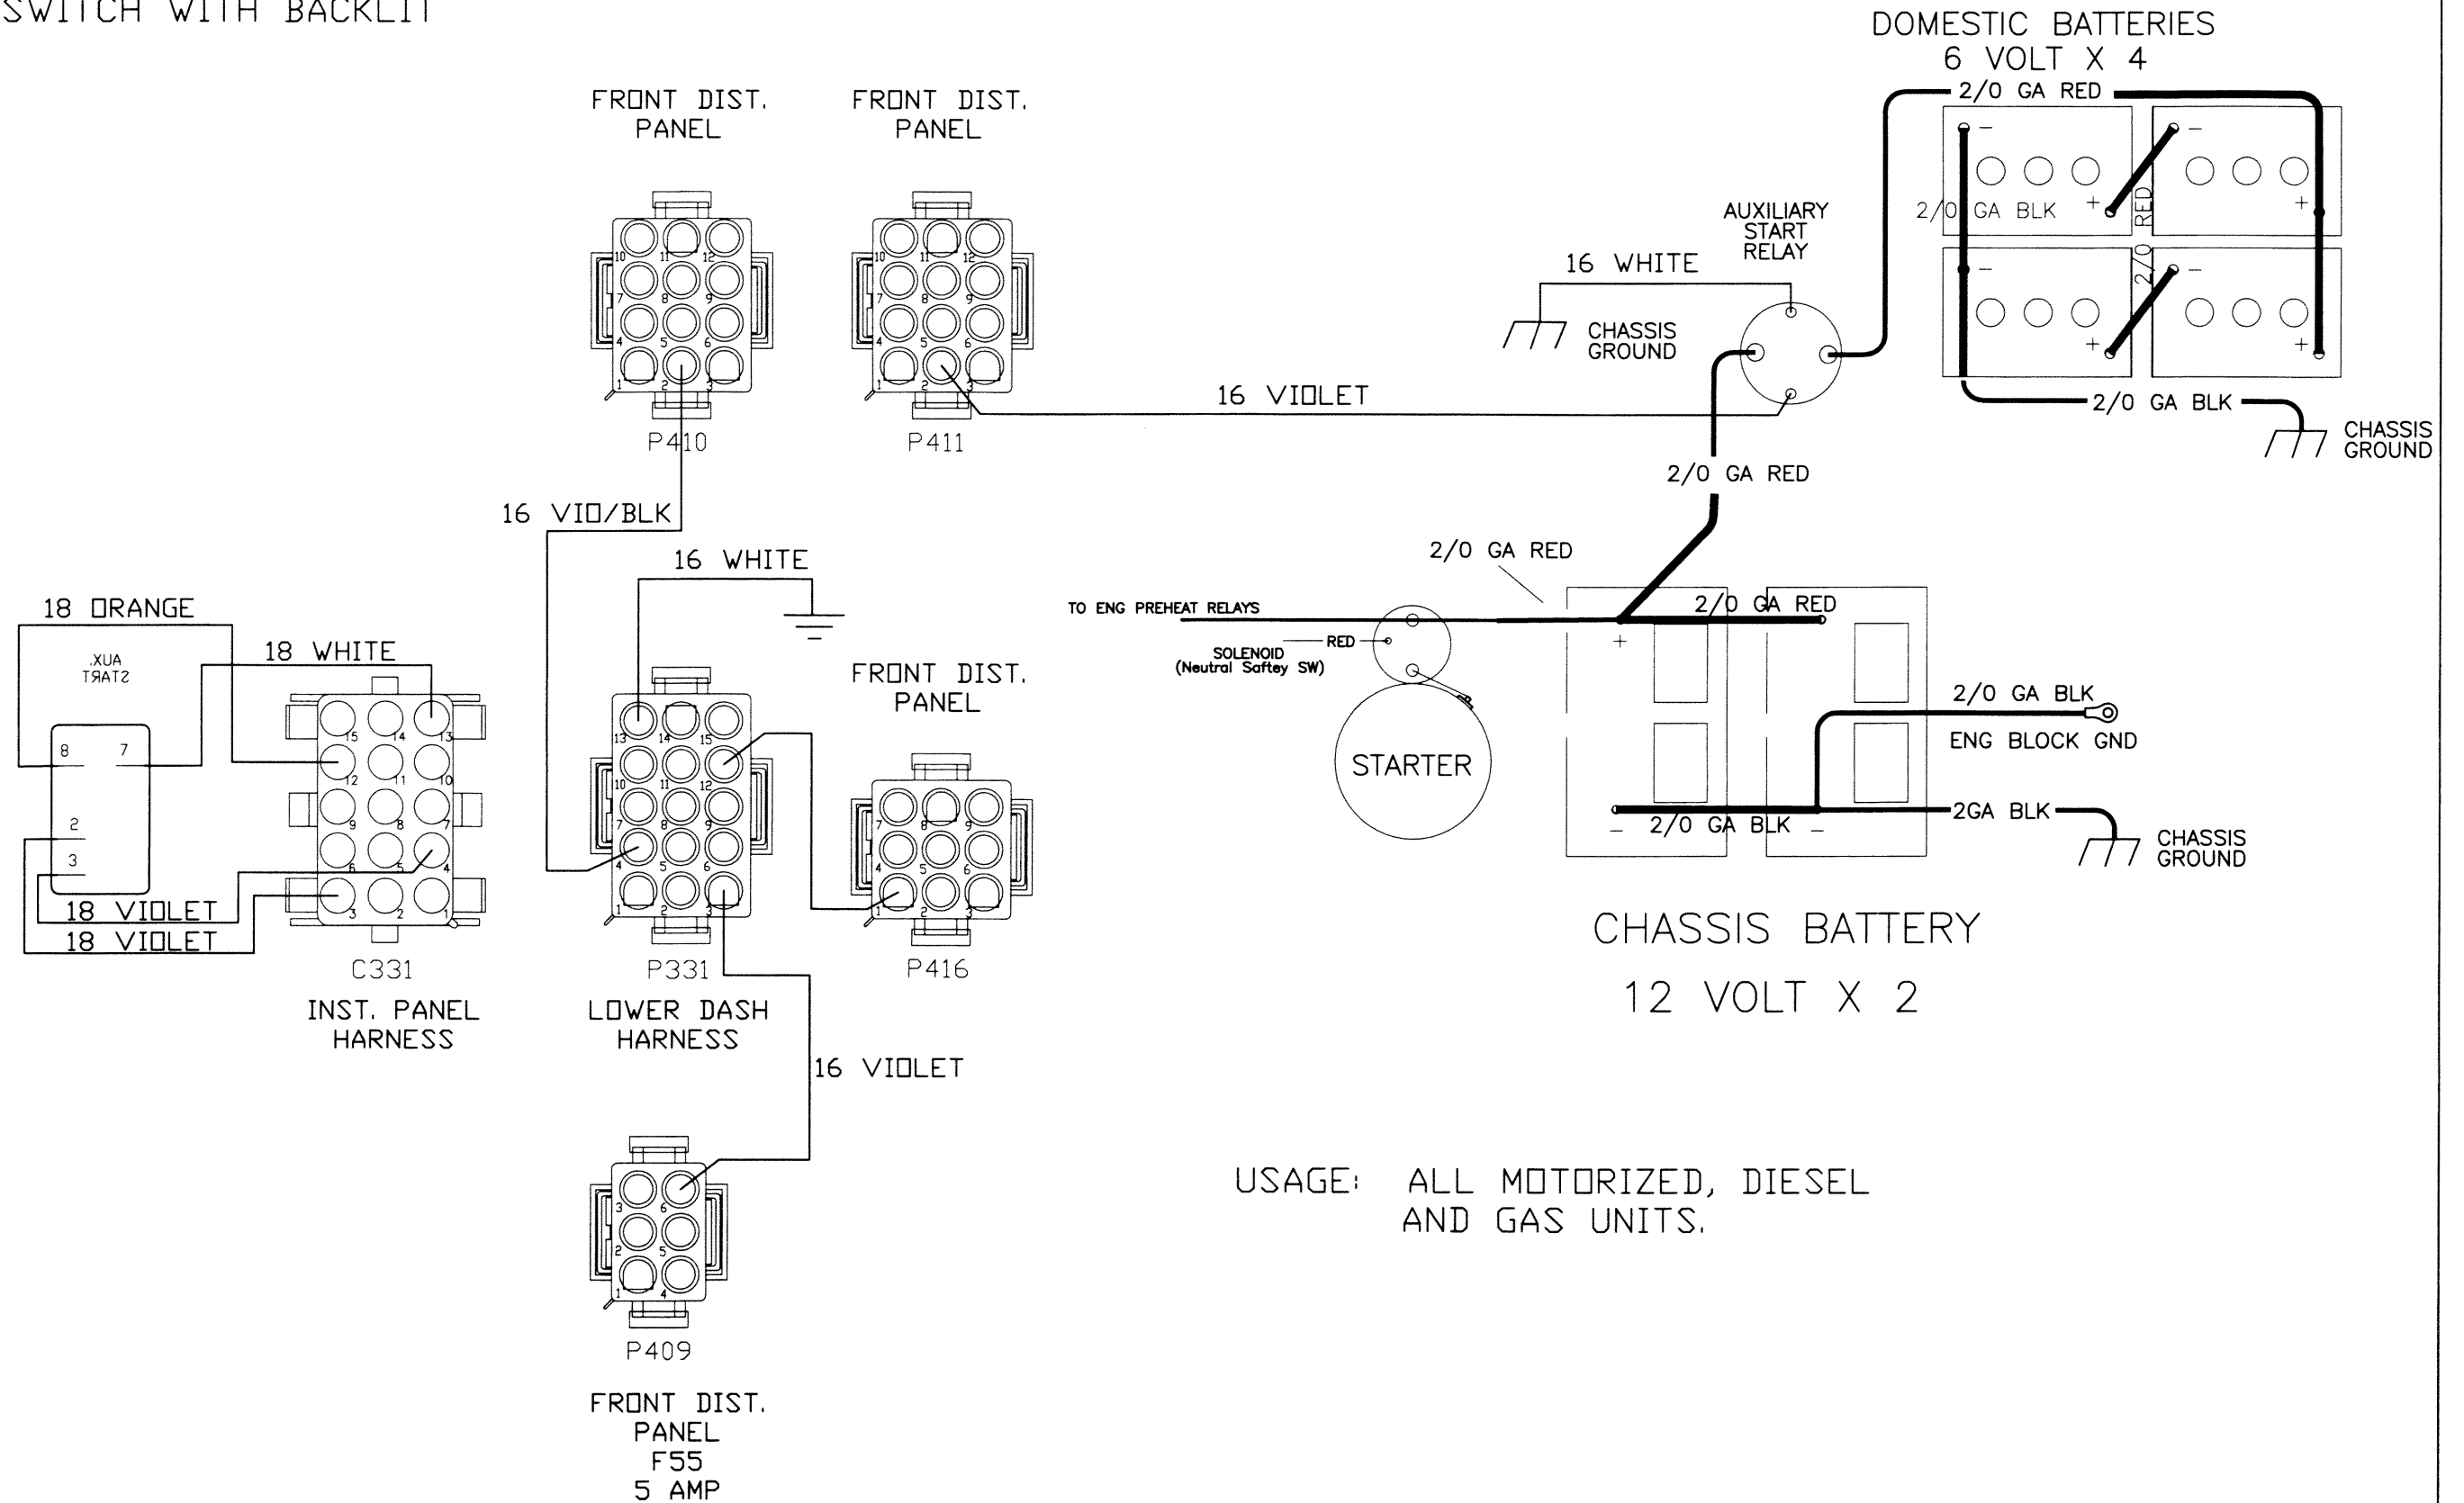



N:\30-49\38\04\38040950.dwg, 10/1/2003 1:57:09 PM

# BACK-UP CAMERA MONITOR

RUN S-VIDEO CABLE UP DRIVER  
SIDE PILLAR AND ALONG ROOF TO  
BACK-UP CAMERA.

